


# AVerVision


## Quick Guide

Applicable for 310AF and M30 models only.

### 1. Connect the Power.

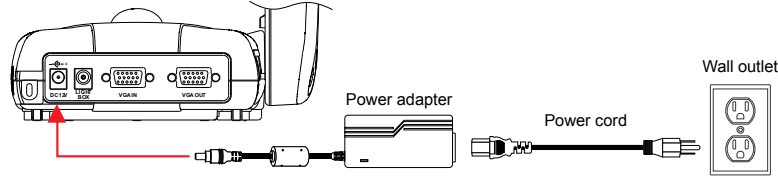


### 2. Select the video display output.

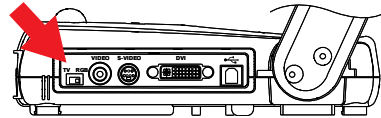


Switch	AVerVision Port	Device
a. RGB	 VGA OUT	 LCD/DLP projector
b. TV	VIDEO     S-VIDEO	 Television

#### a. RGB Connection








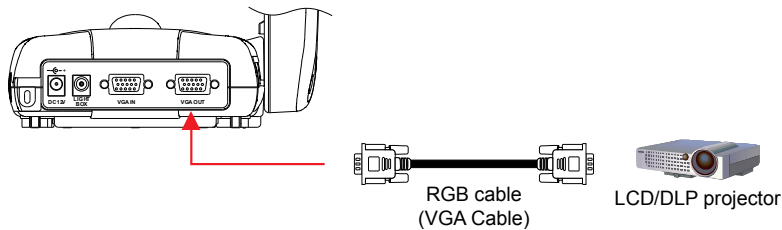


#### b. TV Connection

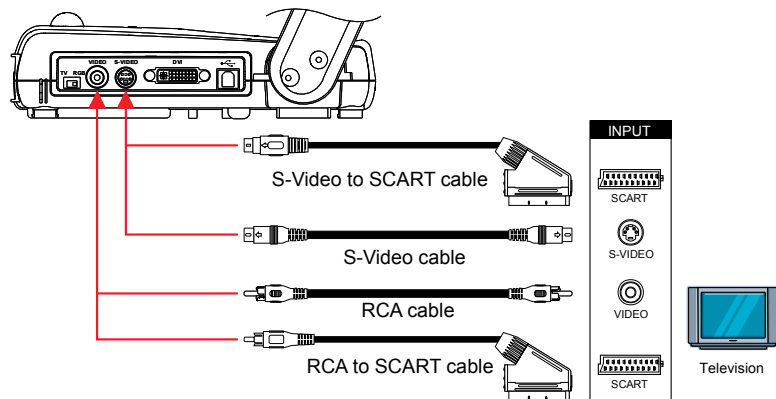


### 3. Basic Operation

- Press the zoom **+** and **-** to zoom in and zoom out the image.
- Press to adjust the focus automatically.
- Press to capture and save the image in the built-in memory.
- Press to automatically adjust and set the white balance and exposure.
- Press to pause or resume the live image in camera mode.
- Press to open and exit the OSD menu.
- Select the display mode.
  - Camera/PC Displays the image either from the built-in camera or computer image from the VGA IN port.
  - Playback Displays the captured image stored in the built-in memory.

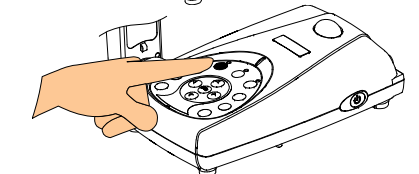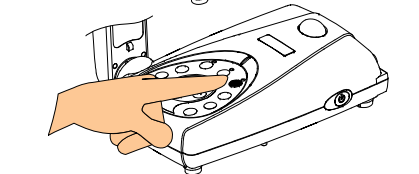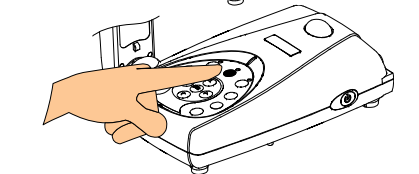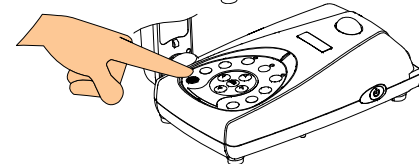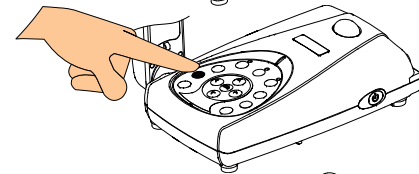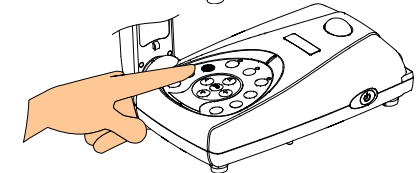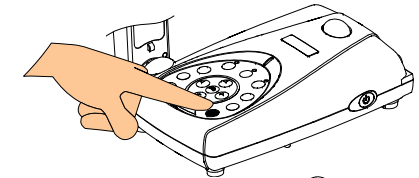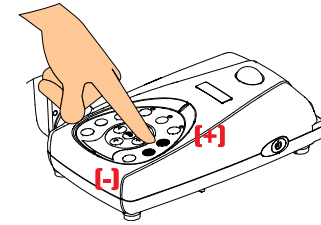


AVer

### 1. 連接變壓器.

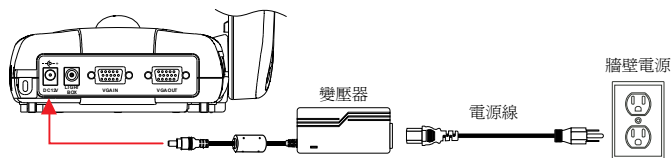


### 2. 選擇顯示設備的輸出源.

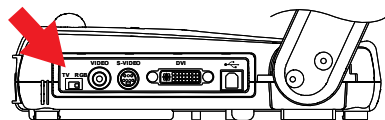


輸出源	實物攝影機 連接孔	影像輸出設備
a. RGB	 VGA OUT	 投影機
b. TV	VIDEO     S-VIDEO	 電視機

#### a. 連接投影機/螢幕

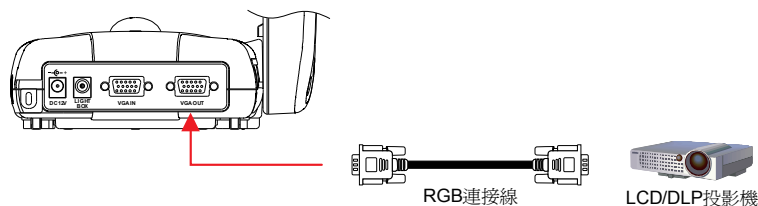

#### b. 連接電視

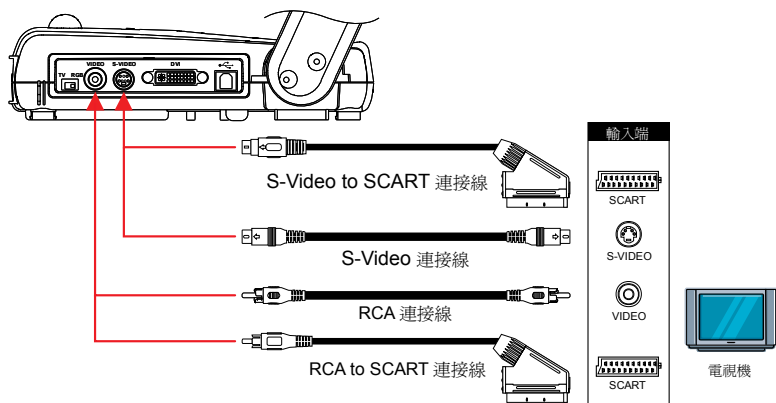

### 3. 基本操作

- 比例縮放- 在播放模式中數位放大和縮小畫面影像。
- 自動對焦按鈕，可自動調整焦距，看到最清楚的畫面。
- 按鍵可直接擷取畫面影像，一併儲存照片於記憶體。
- 可自動調整並設定白平衡與曝光值。
- 反覆按下可暫停畫面或恢復攝影機運作。
- 按下可顯示或離開 OSD 主選單和子選單。
- 選擇顯示模式**  
 Camera/PC   
 切換實物攝影機及連接電腦模式。
- Playback**   
 以每個畫面 16 張縮圖影像檢視記憶體中的擷取影像。

