

E1000 series

8CH Pure NVR(E1008)

8CH Hybrid DVR(E1008H)

User Manual



FCC NOTICE (Class A)



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission Statement

NOTE- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Class A ITE

Class A ITE is a category of all other ITE which satisfies the class A ITE limits but not the class B ITE limits. Such equipment should not be restricted in its sale but the following warning shall be included in the instructions for use:

Warning -This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

European Community Compliance Statement (Class A)



This product is herewith confirmed to comply with the requirements set out in the Council Directives on the Approximation of the laws of the Member States relating to Electromagnetic Compatibility Directive 2004/108/EC.

Warning - This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures to correct this interference.

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVer Information Inc. be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

“AVer” is a trademark owned by AVer Information Inc. Other trademarks used herein for description purpose only belong to each of their companies.

COPYRIGHT

©2014 AVer Information Inc. All rights reserved.

All rights of this object belong to AVer Information Inc. Reproduced or transmitted in any form or by any means without the prior written permission of AVer Information Inc. is prohibited. All information or specifications are subject to change without prior notice.



The mark of Crossed-out wheeled bin indicates that this product must not be disposed of with your other household waste. Instead, you need to dispose of the waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where to drop off your waste equipment for recycling, please contact your household waste disposal service or the shop where you purchased the product.

Battery Safety Information

- Store the batteries in a cool dry place.
- Do not dispose of used batteries in domestic waste. Dispose of batteries at special collection points or return to point of sale if applies.
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the remote control. Battery leakage and corrosion can damage this remote control, dispose of batteries safely.
- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.

Contents

CHAPTER 1	HARDWARE INTRODUCTION.....	1
1.1	Package Contents.....	1
1.1.1	E1008.....	1
1.1.2	E1008H	1
1.2	Front Panel	2
1.3	Back Panel.....	3
1.3.1	E1008.....	3
1.3.2	E1008H	4
1.4	Hard Disk Installation.....	5
1.5	Pin Definition of Sensor/Relay/RS485 Port.....	6
CHAPTER 2	MAIN SYSTEM CONFIGURATION	8
2.1	Getting Started.....	8
2.1.1	Familiarizing Icons on Dialog Box	9
2.2	Familiarizing Functions in Preview Mode.....	10
2.3	Familiarizing Functions in Playback Mode	13
2.4	Compact Mode.....	18
2.4.1	Familiarizing Functions in Preview Compact Mode	19
2.4.2	Familiarizing Function in Playback Compact Mode	22
2.5	System Setup	26
2.5.1	General System Setting.....	27
2.5.2	System Advanced Setting.....	28

2.5.2.1	Daylight Saving Time Setting	29
2.5.2.2	Customizing System Login Setting.....	30
2.5.3.3	Customizing System Miscellaneous Setting.....	31
2.5.4	Update/Export/Import	32
2.5.4.1	Import the NVR/DVR System Configuration.....	33
2.5.4.2	Export the NVR/DVR System Configuration.....	35
2.5.4.3	Upgrade the NVR/DVR Firmware	37
2.5.4.4	Upgrade the IP Camera Module Patch.....	39
2.5.5	Reset to Factory Default.....	40
2.6	Network Setting.....	41
2.6.1	Setup the NVR/DVR Server Name.....	43
2.6.2	Network Advanced Setting	44
2.6.2.1	Setup the Transmitting Camera.....	45
2.6.2.2	Setup the UPnP	45
2.6.2.3	Setup the Bandwidth Limit.....	45
2.6.2.4	Setup the Network Port	46
2.7	Storage Setting	47
2.7.1	Formatting the Hard Disk.....	48
2.7.2	Setup Storage Path for Recording Data	49
2.7.3	Setup Hard Disk and Event Log Recycle Time	50
2.7.4	iSCSI Setting	51
2.8	Camera Setting.....	53
2.8.1	Connect the Analog Camera	54
2.8.2	Connect the IP Camera	55

2.8.2.1	Active IP Function	58
2.8.3	Camera Detail Configuration	60
	Info	60
	Basic	61
	Preference.....	62
	Exposure	64
	Stream.....	65
	ROI.....	66
	Smart Stream	67
	Privacy Mask.....	68
	Motion Detection	69
	IVA.....	70
	Sensor.....	75
	Relay	76
	MFZ.....	77
	Setup PTZ function	79
2.8.4	Familiarizing Functions on PTZ Control Panel	82
2.9	Record Management	84
2.10	Alarm Schedule.....	87
2.11	Backup Setting.....	89
2.12	Alarm Setting	91
2.12.1	Setup the Alarm Condition	91
2.12.2	Setup the Alarm Action.....	97
2.13	User Account Setting	105

2.13.1	Create the User Account	105
2.13.2	Delete the User Account.....	108
2.14	I/O Setting.....	109
2.14.1	Sensor Setting.....	109
2.14.2	Relay Setting	110
2.15	Emap Setting	111
2.15.1	Setup the Emap.....	111
2.16	iPOS Setting	114
2.17	Log Viewer	117
2.17.1	Using the Event Log Viewer	117
2.17.2	Using the Alarm Log Viewer	120
	View the Alarm Event.....	120
	Search Alarm Event Logs.....	122
2.17.3	Using the POS Log Viewer.....	124
2.18	NVR/DVR System Tools	126
2.18.1	Hard Disk Calculator.....	126
2.18.2	On Screen Keyboard	127
CHAPTER 3	MONITORING THE NVR/DVR.....	128
3.1	Manage Camera Channels	129
3.2	Meaning of Icons and Figures.....	130
3.3	Enable/Disable the Camera Channel.....	131
3.4	Screen Channel Display Mode	132
3.5	Enable/Disable the Sound of the Channel	133
3.6	Switch Multiple Screen to Single Screen Display	134

3.7	View the Emap.....	135
3.8	Snapshot the Screen	136
3.9	Full Screen Display	137
3.10	Hide the Camera List	138
3.11	Auto Display Channel in Cycle.....	139
3.12	Enable/Disable 2-Way Audio Function	140

CHAPTER 4 PLAYBACK RECORDED VIDEO ON NVR/DVR SYSTEM 141

4.1	Playback on NVR/DVR System	141
4.2	Playback the Specific Date/Time Period	142
4.3	Using the Event Search to Playback the Event.....	143
4.4	Using the Visual Search to Playback the Specific Time	145
4.5	To Bookmark a Section of the Video	147
4.6	Use the Playback Mode	149
4.6.1	Manage Channel Display Position.....	149
4.6.2	Enable/Disable Sound of the Channel.....	150
4.6.3	Switch Multiple Screen Display to Single Screen Display.....	151
4.6.4	Full Screen Display.....	152
4.6.5	Hide the Camera List.....	153
4.6.6	Output a Video Clip to a USB Pen Drive	154
4.6.7	Snapshot the Screen View	156

CHAPTER 5 PLAYBACK BY QPLAYER..... 157


Chapter 5.1	Familiarizing Functions of Qplayer.....	158
5.1.1	To Bookmark a Section of the Video for Playback	162

CHAPTER 6	USING THE PCVIEWER.....	164
6.1	Familiarizing Functions of Preview Mode.....	165
6.2	Familiarizing Functions of Playback Mode.....	166
Appendix	Recovery NVR/DVR System through the USB port	168
WARRANTY NOTICE.....		170

Chapter 1 Hardware Introduction

1.1 Package Contents

 
1.1.1 E1008

			
E1008 NVR unit		USB optical mouse	Power adaptor
			
Power cable	Software CD	Manual CD	HDD holder & screws

1.1.2 E1008H

			
E1008H DVR unit	USB optical mouse	Power adaptor	
			
Power cable	Software CD	Manual CD	Video in cable (included 8 audio in cables)
			
HDD holder & screws			


1.2 Front Panel

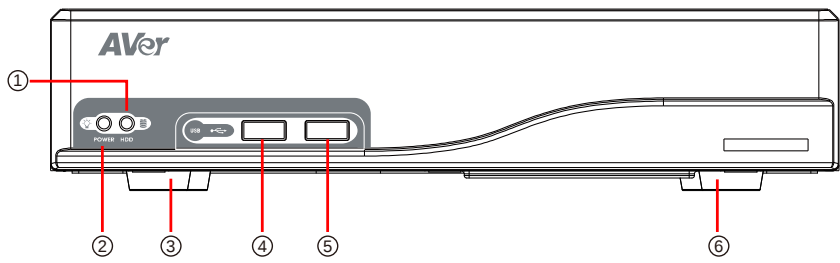

①	Recording status indicator	③	Foot rubber
②	System power indicator	④	USB port
⑤	USB port	⑥	Foot rubber


1.3 Back Panel

1.3.1 E1008

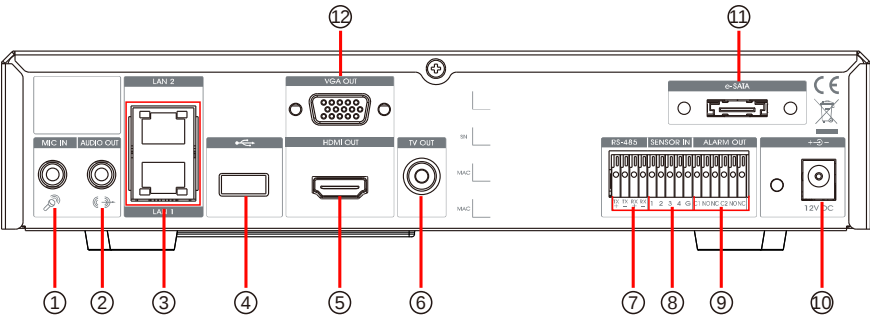

①	MIC input port	⑦	RS485 port
②	Audio output port	⑧	Sensor input port
③	LAN1/LAN2 port	⑨	Alarm(relay)output port
④	USB port	⑩	Power connector port
⑤	HDMI port	⑪	e-SATA port
⑥	TV output port	⑫	VGA output port

1.3.2 E1008H

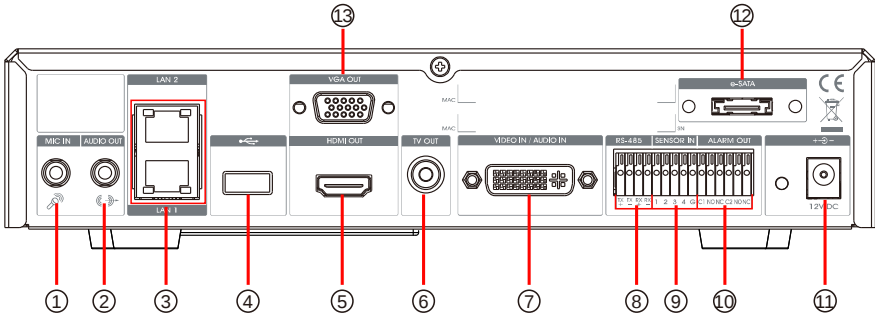

①	MIC input port	⑧	RS485 port
②	Audio output port	⑨	Sensor input port
③	LAN1/LAN2 port	⑩	Alarm(relay)output port
④	USB port	⑪	Power connector port
⑤	HDMI port	⑫	e-SATA port
⑥	TV output port	⑬	VGA output port
⑦	Video In/Audio In port		

1.4 Hard Disk Installation

The NVR/DVR unit supports 1 SATA hard disks inside of NVR/DVR unit. Follow the illustrated instructions below to install the hard disk:

1. Loosen all screws(2 sides and rear side)
2. Push the cover backward and lift. Please be careful of hands.



3. Screws the hard disk on HDD holder.




4. Connect the power and STAT cable to hard disk and place hard disk on HDD metal plate and secured the hard disk.
5. Finally, Push the cover forward and secure the cover.



6. You may now connect all the cables and power on the DVR unit.

1.5 Pin Definition of Sensor/Relay/RS485 Port

The I/O card enables you to connect 4 sensor inputs and 4 relay outputs. Just connect the external sensor and relay pin directly to the I/O card pinhole. Check the table below and locate which pinhole is assigned to sensor input and relay output.

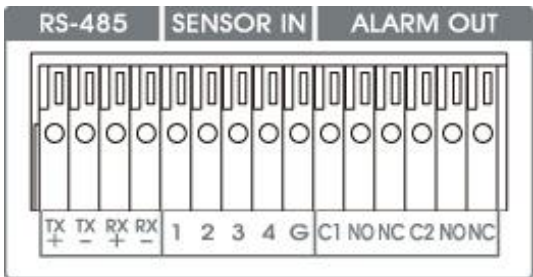

The signal from the sensor (i.e., infrared sensors, smoke detectors, proximity sensors, door sensors, etc.) is being transmitted to the I/O card and this triggers the system to respond and send signal to relay device (i.e., alarm, telephone etc).

■ RS485 Pin definition

When connect PTZ camera through RS485 interface, please refer to the following pin definition to connect the DVR and PTZ.

Pin	DVR site	PTZ site
TX+	RS485 TX+ signal	RS485 RX+ signal
TX-	RS485 TX- signal	RS485 RX- signal
RX+	RS485 RX+ signal	RS485 TX+ signal
RX-	RS485 RX- signal	RS485 TX- signal



If user uses the 2 wires for the PTZ camera connection, please connect to the RS-485 TX+ and TX- of the DVR site.

■ **Sensor Pin definition**

Pin	Definition
1	Sensor Signal 1
2	Sensor Signal 2
3	Sensor Signal 3
4	Sensor Signal 4
G	Sensor Ground Signal

■ **Alarm Pin definition**

Pin	Definition
C1	Relay Common 1
NO	Relay Normal Open
NC	Relay Normal Close
C2	Relay Common 2
NO	Relay Normal Open
NC	Relay Normal Close


Chapter 2 Main System Configuration

2.1 Getting Started

1. Connect the power cable and mouse to NVR/DVR unit.
2. Power on the NVR/DVR unit and wait for NVR/DVR system start up processing to complete.
3. For security purpose, the NVR/DVR system would require user to enter **User ID** and **Password** before it can be accessed. (If this is the first time, enter the default ID [**admin**] and password [**admin**]).



4. After login successful, the preview UI is displayed.

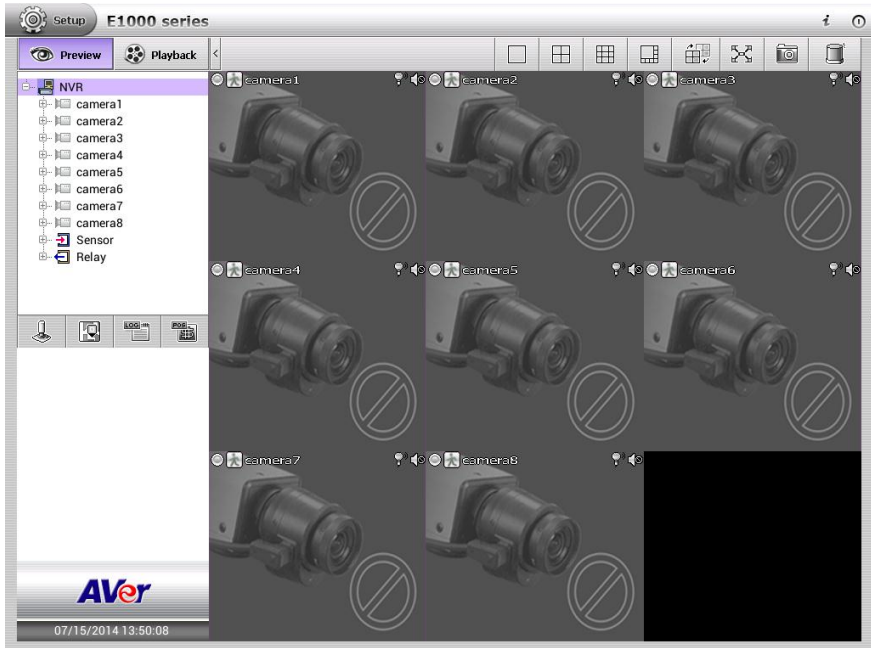

5. Next, setup the following settings in order to start monitoring.

- **Setup System Date and Time:** Setup the date and time in order to have corrected recording time and date. Please refer to [Chapter 2.5.1](#).
- **Format Hard Disk:** The hard disk must be formatted before use it to save recording data (see also [Chapter 2.7.1](#)).



Before formatting hard disk, please make sure no operations is running on NVR/DVR system.

- **Add Storage Path:** Select the hard disk to be a storage path for saving recorded video. Please refer to [Chapter 2.7.2](#).
- **Configure Network Setting:** Setting up the NVR/DVR system's IP address that is same IP segment as your network. Please refer to [Chapter 2.6](#).
- **Connect IP camera:** Please refer to [Chapter 2.8](#).
- **Setup Recording Schedule:** Setting up the record schedule to start recording. Please refer to [Chapter 2.9](#).


6. For more detail configuration of NVR/DVR system, refer to the chapters in followings.

2.1.1 Familiarizing Icons on Dialog Box


There are some icons are shown on dialog box through the NVR/DVR system and they are explaining in followings.


	Expanding the dialog box on the screen.
	Closing the dialog box.

2.2 Familiarizing Functions in Preview Mode

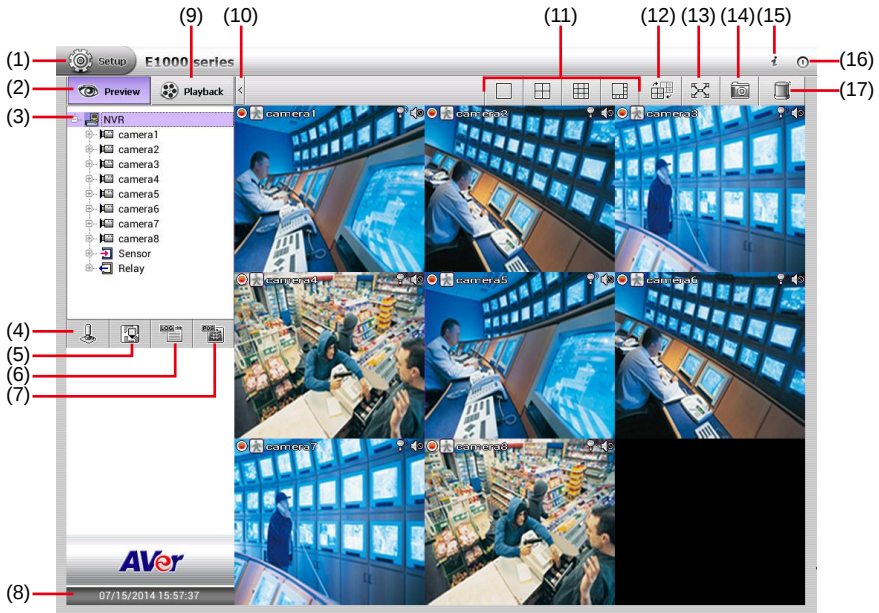


Name	Function
(1) Setup	Click Setup button to configure settings for cameras, recording, network, schedule, backup, sensors, relays, alarms and user authentication.
(2) Preview	Switch to Preview mode. This allows you to view live camera display.
(3) Camera list	Lists all cameras of NVR/DVR. Click + to expand the list. User can select and drag the camera to video display area to arrange the monitor layout(see also Chapter 3.1)
(4) PTZ	To call out a PTZ control panel and appoint PTZ camera (see also Chapter 2.8.5).
(5) EMap	To load up to 8 desired Emaps in PNG or JPG image format, and locate cameras, sensors, and relays to desired positions (see also Chapter 2.15).
(6) Event Log Viewer	Search and display the record of activities that take place in the system (see also Chapter 2.17.1).

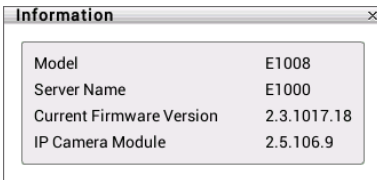Name	Function										
(7) POS Log Viewer	Search and display POS event logs (see also Chapter 2.17.3).										
(8) Date and Time	It shows the current system date and time.										
(9) Playback	Switch to Playback mode. This allows you to view the recorded video file. (see also Chapter 2.3)										
(10) Hide button	To hide the side area and give more view of screen.										
(11) Split Screen Mode	It provides 4 kinds of split display modes for your selection. User can select the split display modes by clicking the split mode icon.										
	To only display one of the video in the multiple-screen mode, double click on the video screen you only want to display (see also Chapter 3.7).										
(12) AutoScan	Click it to start auto cycle display each channel.										
(13) Full screen	Use the entire area of the screen to only display the video. To return, press the right button of the mouse or ESC on the keyboard or click the arrow icon (see also Chapter 3.9).										
(14) Snapshot	Catch a static recording image and save it as a JPG file in USB pen drive device(see also Chapter 3.8)										
	Plug the USB pen drive into NVR/DVR unit before clicking Snapshot button.										
(15) System Information	Click it to view NVR/DVR system's version and copyright.  <table border="1"> <thead> <tr> <th colspan="2">Information</th> </tr> </thead> <tbody> <tr> <td>Model</td> <td>E1008</td> </tr> <tr> <td>Server Name</td> <td>E1000</td> </tr> <tr> <td>Current Firmware Version</td> <td>2.3.1017.18</td> </tr> <tr> <td>IP Camera Module</td> <td>2.5.106.9</td> </tr> </tbody> </table>	Information		Model	E1008	Server Name	E1000	Current Firmware Version	2.3.1017.18	IP Camera Module	2.5.106.9
Information											
Model	E1008										
Server Name	E1000										
Current Firmware Version	2.3.1017.18										
IP Camera Module	2.5.106.9										

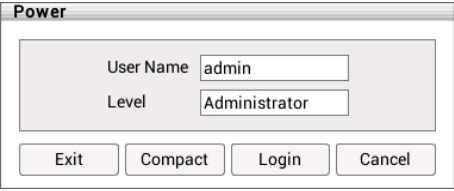Name	Function
(16) Power button	Call up the Power dialog box. In the Power dialog box, user may do the following:  - Exit: To shutdown the NVR/DVR system. - Compact: Switch to compact mode. In compact mode, user's authority is limited (see also Chapter 2.4.1). - Login: To login in different account. Default user ID is admin and password is admin. - Cancel: To exit Power dialog box.
(17) Alarm Log Viewer	To view and search the alarm event logs (see also Chapter 2.17.2).


2.3 Familiarizing Functions in Playback Mode

Click **playback** tab to switch to playback mode.

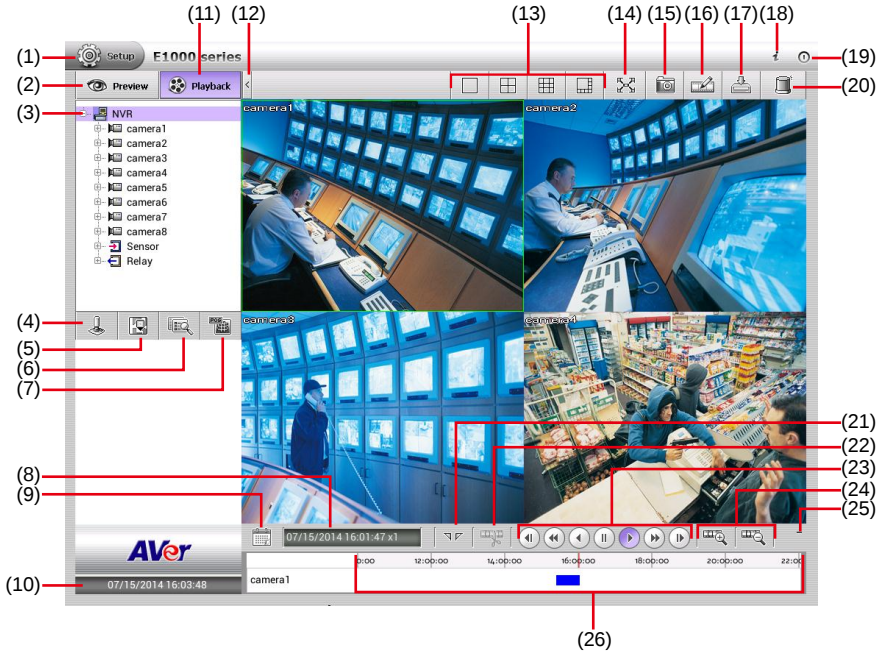



Name	Function
(1) Setup	Click Setup button to configure settings for cameras, recording, network, scheduler, backup, sensors, relays, alarms and user authentication.
(2) Preview	Switch to Preview mode. This allows you to view live camera display.
(3) Camera list	Lists all cameras of NVR/DVR. Click + to expand the list. User can select and drag the camera to video display area to playback (see also Chapter 4.6.1).
(4) PTZ	In playback mode, the NVR/DVR system doesn't support PTZ function.
(5) Emap	To load up to 8 desired Emaps in PGN or JPG image format, and locate cameras, sensors, and relays to desired positions (see also Chapter 2.15).



Name	Function
(6) Search	NVR/DVR supports 2 type of searching in playback mode – Event Search and Visual Search. - Event Search: Search from the recorded activities that were recorded in event log such as Sensor, Motion, Video Loss (see also Chapter 4. 3). - Visual Search: Search from a specific camera by Date, Hour, Minute, 10 Seconds and Second (see also Chapter 4. 4).
(7) POS Log Viewer	Search and display POS event logs (see also Chapter 2.17.3).
(8) Status bar	Display the recorded date, time and play speed.
(9) Date	Select the date on the calendar and the time to where to start playing the recorded video file.

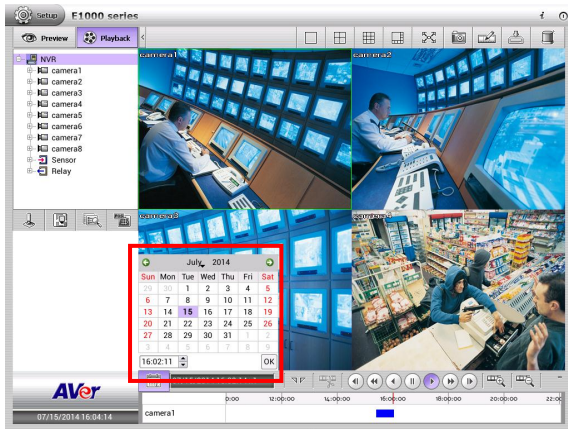


- **Date:** click the date on calendar to select. The date in bold text indicates there has recorded file. Click and to switch the date or click icon next to month to select the month. To switch the year, click on the text of year and click spin button to select.
- **Time:** In Time box, select the hour, minute, and second to setup the playback start up time.

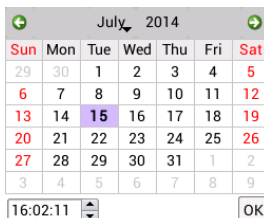

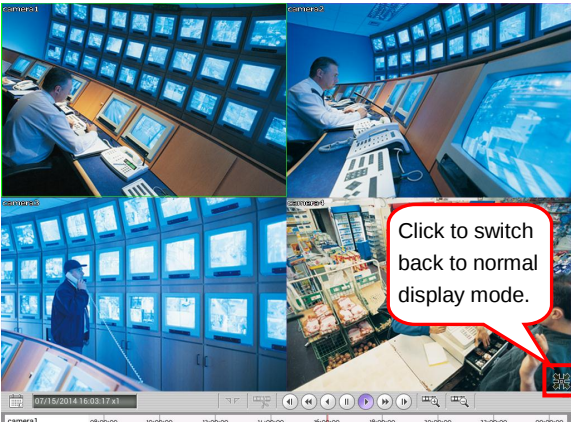
Name	Function
(10) Date and Time	It shows the current date and time.
(11) Playback	Switch to Playback mode. This allows you to view the recorded video file.
(12) Hide button	To hide the side area and give more view of screen.
(13) Split Screen Mode	Select from 4 kinds of split screen type to playback the recorded video file of all the camera, or one camera over the other or alongside on a single screen.
 To only display one of the video in the multiple-screen mode, double-click on the video screen you only want to display (see also Chapter 4.6.3).	
(14) Full screen	Use the entire area of the screen to only display the video. To return, press the right button of the mouse or ESC on the keyboard or click the arrow icon.  When you switch to full screen in multiple-screen mode, Left click to toggle to only display one of the video in the multiple-screen mode or all.
(15) Snapshot	Catch a static recording image and save it as a JPG file in pen drive device (see also Chapter 4.6.7).
(16) Bookmark	Mark a reference point when reviewing the recorded video file to which you may return for later reference (see also Chapter 4.5).
(17) Backup	Save the playback file to USB pen drive (see also Chapter 2.11).

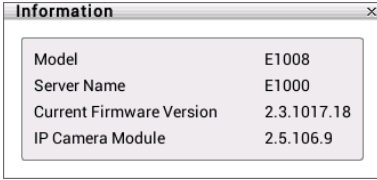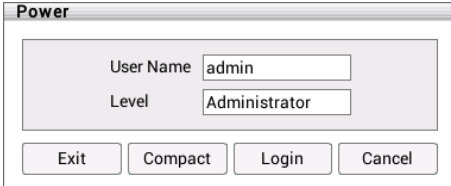Name	Function
(18) System Information	Click it to view NVR/DVR system's version and copyright. 
(19) Power button	Call up the Power dialog box. In the Power dialog box, user may do the following:  - Exit: To shutdown the NVR/DVR system. - Compact: Switch to compact mode. In compact mode, user's authority is limited (see also Chapter 2.4.2). - Login: To login in different account. Default user ID is admin and password is admin. - Cancel: To exit Logout dialog box.
(20) Alarm Log	Click  button to view and search the alarm event logs (see also Chapter 2.17.2).
(21)  (Segment)	Keep a portion of the recorded video to repeat playback; also can output the segment video to the pen drive device. Click the  button to set the segment video. User can drag the triangle mark to set the video segment (see also Chapter 4.6.6).
(22) 	Save the segmented video file in *.mpg, *.avi, or *.dvr format (see also Chapter 4.6.6).

 Name	Function
(23) Playback Control Buttons	From left to right order:  Previous: Go back to the previous frame.  Slower: Play the recorded video file at the speed of 1/2x, 1/4x, or 1/8x. The playback speed will show on the screen.  Rewind: Wind back the recorded video file.  Pause: Briefly stop playing the recorded video file.  Play: Play the recorded video file.  Faster: Play the recorded video file at the speed of 2x, 4x, 8x, 16x, 32x, or 64x. The playback speed will show on the screen.  Next: Go to the next frame.
(24)  (Zoom in/ out)	To expand the playback time bar from an hour to minute.
(25) Minimize	Click to close up the progress bar. Click again to open up.
(26) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track. Using the Zoom In/Out button to expand the playback time from an hour to minute.  Meaning of color in progress bar: - Red: Alarm record - Green: Motion record - Blue: Always record(normal record) - Yellow: Video loss - White: No record data


2.4 Compact Mode

The preview and playback are both supported compact mode. To switch to Compact mode, click power button (located at upper right corner) and select **Compact** button in Power dialog in preview or playback mode.

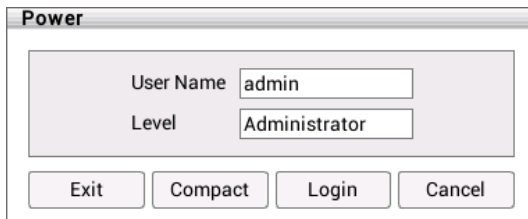

The image shows a 'Power' dialog box with a title bar. Inside, there are two text input fields: 'User Name' with the value 'admin' and 'Level' with the value 'Administrator'. Below these fields are four buttons: 'Exit', 'Compact', 'Login', and 'Cancel'.


To switch back to Advance mode, click power button and select **Advance** button in preview or playback mode.

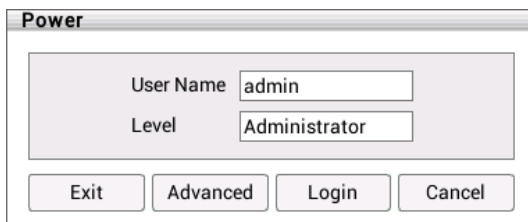



The image shows a 'Power' dialog box with a title bar. Inside, there are two text input fields: 'User Name' with the value 'admin' and 'Level' with the value 'Administrator'. Below these fields are four buttons: 'Exit', 'Advanced', 'Login', and 'Cancel'.

The following chapters will describe the function buttons on preview and playback compact mode.

2.4.1 Familiarizing Functions in Preview Compact Mode

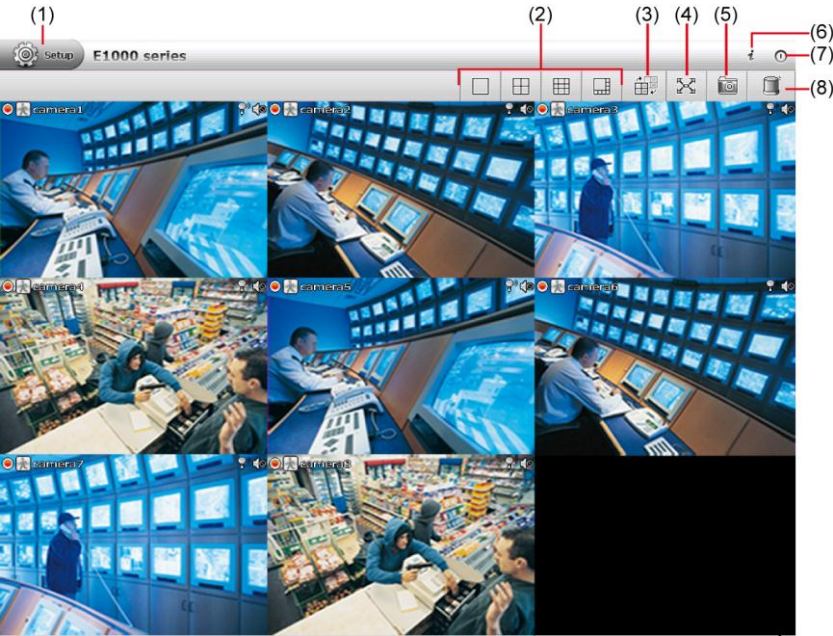


Name	Function
(1) Setup	Click Setup button to configure settings for cameras, recording, network, scheduler, backup, sensors, relays, alarms and user authentication.
(2) Split Screen Mode	It provides 4 kinds of split display modes for your selection. User can select the split display modes by clicking the split mode icon.
 - When the NVR/DVR system is in multiple-screen mode, user can click the video screen of the camera and Drag on where user wants to relocate it.	
- To only display one of the video in the multiple-screen mode, double click on the video screen user only wants to display.	
(3) AutoScan	Click it to start auto cycle display each channel.

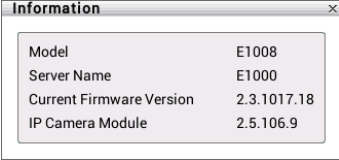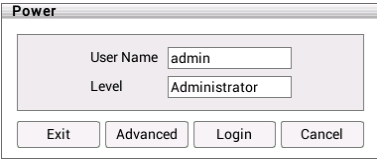
Name	Function
(4) Full screen	Use the entire area of the screen to only display the video. To return, click the arrow icon at bottom of right.  When you switch to full screen in multiple-screen mode, left-click to toggle to only display one of the video in the multiple-screen mode or all.
(5) Snapshot	Catch a static recording image and save it as a JPG file in USB pen drive device (see also Chapter 3.8).
(6) System Information	Click it to view NVR/DVR system's version and copyright. 
(7) Power button	Call up the Power dialog box. In the Power dialog box, user may do the following:  - Exit: To shutdown the NVR/DVR system. - Advance: Switch to preview advanced mode. - Login: To login in different account. Default user ID is admin and password is admin. - Cancel: To exit Power dialog box.

Name	Function
(8) Alarm Log Viewer	Click  button to view and search the alarm event logs (see also Chapter 2.17.2).

2.4.2 Familiarizing Function in Playback Compact Mode

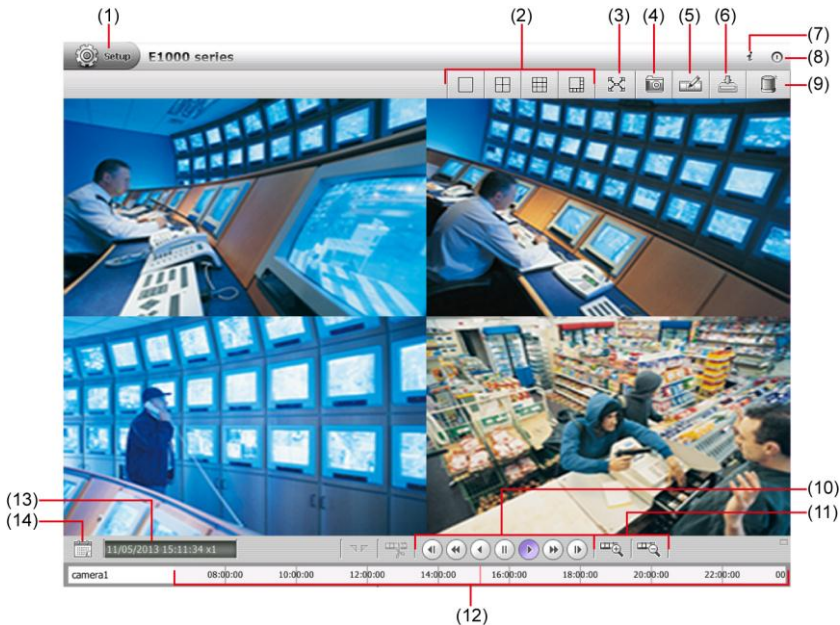

Name	Function
(1) Setup	Click Setup button to configure settings for cameras, recording, network, scheduler, backup, sensors, relays, alarms and user authentication.
(2) Split Screen Mode	It provides 4 kinds of split display modes for your selection. User can select the split display modes by clicking the split mode icon.
	- When the NVR/DVR system is in multiple-screen mode, user can click the video screen of the camera and Drag on where user wants to relocate it. - To only display one of the video in the multiple-screen mode, double click on the video screen user only wants to display.

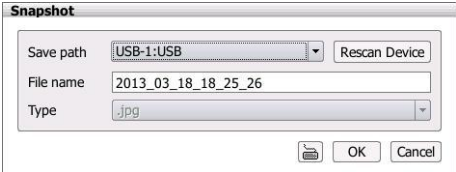Name	Function
(3) Full screen	Use the entire area of the screen to only display the video. To return, press the right button of the mouse or ESC on the keyboard or click the arrow icon.  When you switch to full screen in multiple-screen mode, Left click to toggle to only display one of the video in the multiple-screen mode or all.
(4) Snapshot	Catch a static recording image and save it as a JPG file in USB pen drive device. 1. Select the channel or all channels. 2. Plug the USB pen drive to NVR/DVR unit. 3. Click Snapshot () button. 4. In Snapshot dialog box, check the Save path has been detected by NVR/DVR system. If the save path doesn't found, click Rescan Device button to re-detect it.  5. If user wants to re-name the File name, call out the virtual keyboard and enter the new file name in File name column. 6. Click OK to capture and save the screen shot. 7. The captured and saved screen image can be viewed on PC.

Name	Function
(5) Bookmark	Mark a reference point when reviewing the recorded video file to which you may return for later reference (see also Chapter 4.5).
(6) Backup	Save the playback file to USB pen drive (see also Chapter 2.11).
(7) System Information	Click it to view NVR/DVR system's version and copyright.
(8) Power button	Call up the Power dialog box. In the Power dialog box, user may do the following: - Exit: To shutdown the NVR/DVR system. - Advance: Switch to playback advanced mode. - Login: To login in different account. Default user ID is admin and password is admin. - Cancel: To exit Power dialog box.
(9) Alarm Log	Click  button to view and search the alarm event logs (see also Chapter 2.17.2).
(10) Playback Control Buttons	From left to right order:  Previous: Go back to the previous frame.  Slower: Play the recorded video file at the speed of 1/2x, 1/4x, or 1/8x. The play speed will show on the screen.  Rewind: Wind back the recorded video file.  Pause: Briefly stop playing the recorded video file.  Play: Play the recorded video file.  Faster: Play the recorded video file at the speed of 2x, 4x, 8x, 16x, 32x, or 64x. The play speed will show on the screen.  Next: Go to the next frame.

Name	Function
(11)  /  (Zoom in/Zoom out)	To expand the playback time bar from an hour to minute.
(12) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track. Using the Zoom In/Out button to expand the playback time from an hour to minute.
(13) Status bar	Display the recorded date, time and play speed.
(14) Date	Select the date on the calendar and the time to where to start playing the recorded video file. – Date: click the date on calendar to select. The date in bold text indicates there has recorded file. Click  and  icon to switch the date or click  icon next to month to select the month. To switch the year, click on the text of year and click spin button to select. – Time: In Time box, select the hour, minute, and second to setup the beginning time to playback.


July 2014


Sun	Mon	Tue	Wed	Thu	Fri	Sat
29	30	1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31	1	2
3	4	5	6	7	8	9

16:02:11 
OK


2.5 System Setup

Click **Setup** tab in preview/playback mode to switch to system setup mode.

In Setup mode, user should see the **System Information** dialog box is displayed at the first place. In System Information dialog box, it displays the setting options of Language, Date/Time, Network1, Network2 and Storage.

The setup sections are divided into **System Setting**, **Camera Setting**, **Alarm Setting**, **User Setting**, and **Schedule Setting**.

In the following chapters will describe all setup.

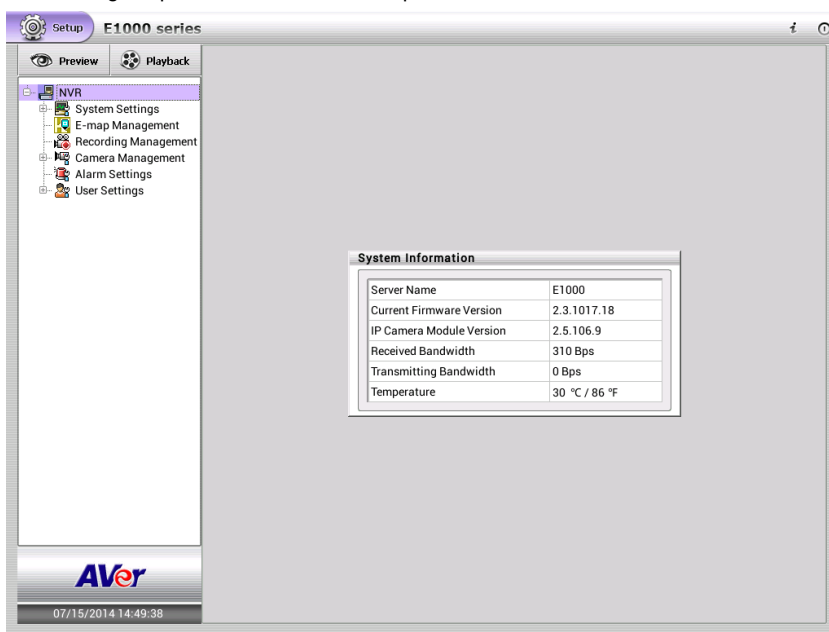

2.5.1 General System Setting

Setup the language of NVR/DVR system, video type, system date and time, synchronize the system time.

Click **Setup** tab > **System Setting**; click **+** to expand list of System Setting and click **System Configuration**.

After changing the settings, click **Apply** button to save the settings. To un-save the new settings, click **Cancel** button.

The screenshot shows the 'System Configuration' dialog box with the 'General' tab selected. The 'Language' is set to 'English'. The 'Date/Time' is set to '15 Jul 2014' and '14:50:10'. Under 'Video Format', 'NTSC' is selected. Under 'Synchronize with Time Server', the 'Time Server' field is empty, 'Automatically Synchronize at' is unchecked, and the 'Time Zone' is set to 'GMT+00:00'. There is an 'Update Now' button. At the bottom right are 'Apply' and 'Cancel' buttons.

- **Language:** Customize the system to display the tool tips and dialogs based on the selected language. By default the language is in English.
- **Video Format:** Change and select the proper video system according to your camera video system. If the video system setting is wrong, the video would appear abnormal.
- **Date/Time:** Select the date and time where NVR/DVR is located. Click and icon to switch the month or click icon next to month to select the month. To switch the year, click on the text of year and click spin button to select.
- **Synchronize with Time Server:** Adjust the NVR/DVR system time same as network time server.
 - **Time Server:** Fill in the Time Server IP address or domain name.
 - **Automatic synchronize at:** Select Automatic Synchronize time to set automatic

synchronize time on a daily basis.


- **Update Now:** User can click **Update Now** button to adjust time right away.

2.5.2 System Advanced Setting

In Advanced of System Configuration, user can setup the daylight saving time, system login setting, and some other system related setting.

Click **Setup** tab > **System Setting**; click + to expand list of System Setting and click **System Configuration** > **Advanced** tab.

After changing the settings, click **Apply** button to save the settings. To un-save the new settings, click **Cancel** button.

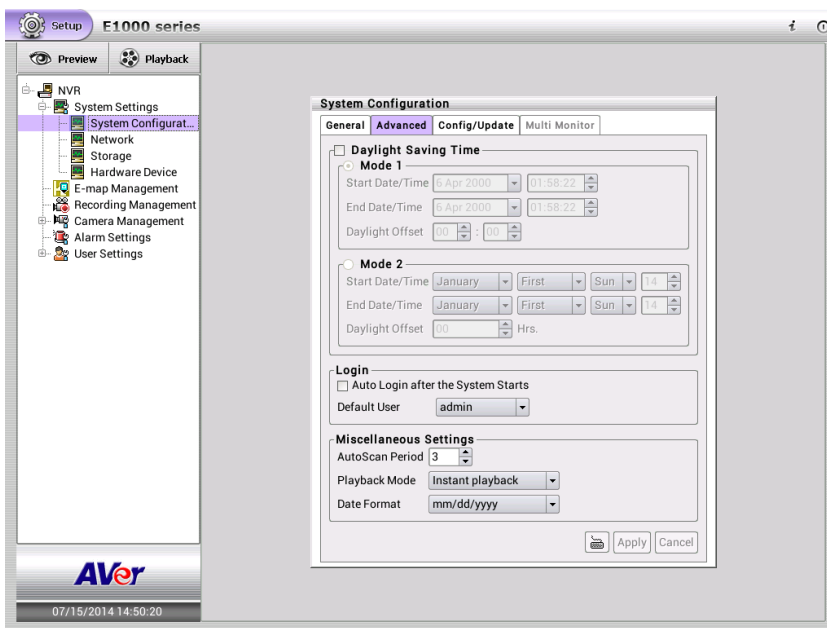

2.5.2.1 Daylight Saving Time Setting

User can setup daylight saving mode as user is desired.

1. Select the mode of Daylight saving.
 - **Mode 1:** Mode 1 is setting up specific start date/time and end date/time.
 - **Mode 2:** Mode 2 is setting up fixed day of month in every year for start and end date/time.
2. Setup the **Star Date/Time** and **End Date/Time** for Daylight saving period.
3. **Daylight Bias:** Assign a time that it is for daylight saving time offset in your time zone. For example: if the time zone is in U.S. Eastern, the time offset is 1 hour.
4. Click **Apply** to save the setting.

The screenshot shows the 'System Configuration' dialog box with the 'Advanced' tab selected. The 'Daylight Saving Time' section is highlighted with a red rectangle. It contains two modes: 'Mode 1' (selected) and 'Mode 2'. 'Mode 1' has fields for 'Start Date/Time' (6 Apr 2000, 01:58:22), 'End Date/Time' (6 Apr 2000, 01:58:22), and 'Daylight Offset' (00 : 00). 'Mode 2' has fields for 'Start Date/Time' (January, First, Sun, 14), 'End Date/Time' (January, First, Sun, 14), and 'Daylight Offset' (00 Hrs.). Below this is the 'Login' section with 'Auto Login after the System Starts' unchecked and 'Default User' set to 'admin'. The 'Miscellaneous Settings' section has 'AutoScan Period' set to 3, 'Playback Mode' set to 'Instant playback', and 'Date Format' set to 'mm/dd/yyyy'. At the bottom right are 'Apply' and 'Cancel' buttons.

System Configuration

General **Advanced** Config/Update Multi Monitor

☒ **Daylight Saving Time**

☒ **Mode 1**

Start Date/Time 6 Apr 2000 01:58:22

End Date/Time 6 Apr 2000 01:58:22

Daylight Offset 00 : 00

☐ **Mode 2**

Start Date/Time January First Sun 14

End Date/Time January First Sun 14

Daylight Offset 00 Hrs.

Login

☐ Auto Login after the System Starts

Default User admin

Miscellaneous Settings

AutoScan Period 3

Playback Mode Instant playback

Date Format mm/dd/yyyy

Apply Cancel

2.5.2.2 Customizing System Login Setting

Enable the conditions in Login section you want the system to automatically carry out. Click **Apply** to save the setting.

- **Auto Login after system boot up:** Login NVR/DVR system automatically when NVR/DVR operating system is started.
- **Default user:** Automatically log in to the selected default user when the NVR/DVR system is executed.

The screenshot shows the 'System Configuration' window with the 'Advanced' tab selected. The 'Login' section is highlighted with a red box. It contains the following settings:

- ☐ **Daylight Saving Time**
 - ☒ **Mode 1**
 - Start Date/Time: 6 Apr 2000 01:58:22
 - End Date/Time: 6 Apr 2000 01:58:22
 - Daylight Offset: 00 : 00
 - ☐ **Mode 2**
 - Start Date/Time: January First Sun 14
 - End Date/Time: January First Sun 14
 - Daylight Offset: 00 Hrs.
- ☐ **Login**
 - ☐ Auto Login after the System Starts
 - Default User: admin
- Miscellaneous Settings**
 - AutoScan Period: 3
 - Playback Mode: Instant playback
 - Date Format: mm/dd/yyyy

At the bottom right, there are buttons for 'Apply' and 'Cancel'.

2.5.3.3 Customizing System Miscellaneous Setting

Enable the conditions in **Miscellaneous** section you want the system to perform. Click **Apply** to save the setting.

- **Auto Scan Period:** Set the time gap of the Auto Scan function from 3 to 10 seconds. This automatically switches to the next video in cycle depending on the set time gap.
- **Playback Mode:**
Select the mode of playback the video.
 - ✓ **Select date and time:** Select the date and time which user wants to playback.
 - ✓ **Play the last file:** Automatically playback the video from the last hour
 - ✓ **Instant Playback:** Automatically playback the video which has just recorded.
- **Date Format:** Select the date format which wants to display in **Select date and time** playback mode


The screenshot shows the 'System Configuration' window with the 'Advanced' tab selected. The 'Daylight Saving Time' section is expanded, showing 'Mode 1' selected. Below it, the 'Login' section has 'Auto Login after the System Starts' unchecked and 'Default User' set to 'admin'. The 'Miscellaneous Settings' section is highlighted with a red rectangle and contains three settings: 'AutoScan Period' set to 3, 'Playback Mode' set to 'Instant playback', and 'Date Format' set to 'mm/dd/yyyy'. At the bottom right are 'Apply' and 'Cancel' buttons.

System Configuration			
General	Advanced	Config/Update	Multi Monitor
☐ Daylight Saving Time			
● Mode 1			
Start Date/Time	5 Apr 2000	01:58:22	
End Date/Time	6 Apr 2000	01:58:22	
Daylight Offset	00	: 00	
○ Mode 2			
Start Date/Time	January	First	Sun 14
End Date/Time	January	First	Sun 14
Daylight Offset	00	Hrs.	
Login			
☐ Auto Login after the System Starts			
Default User	admin		
Miscellaneous Settings			
AutoScan Period	3		
Playback Mode	Instant playback		
Date Format	mm/dd/yyyy		
Apply Cancel			

2.5.4 Update/Export/Import

In Configure Update, user can import the backup configure file to NVR/DVR system and export the configure file to external USB pen drive. Also, user can update the NVR/DVR system's firmware and IP camera patch file.

Click **Setup** tab > **System Setting**; click + to expand list of System Setting and click **System Configuration** > **Configure/Update** tab.

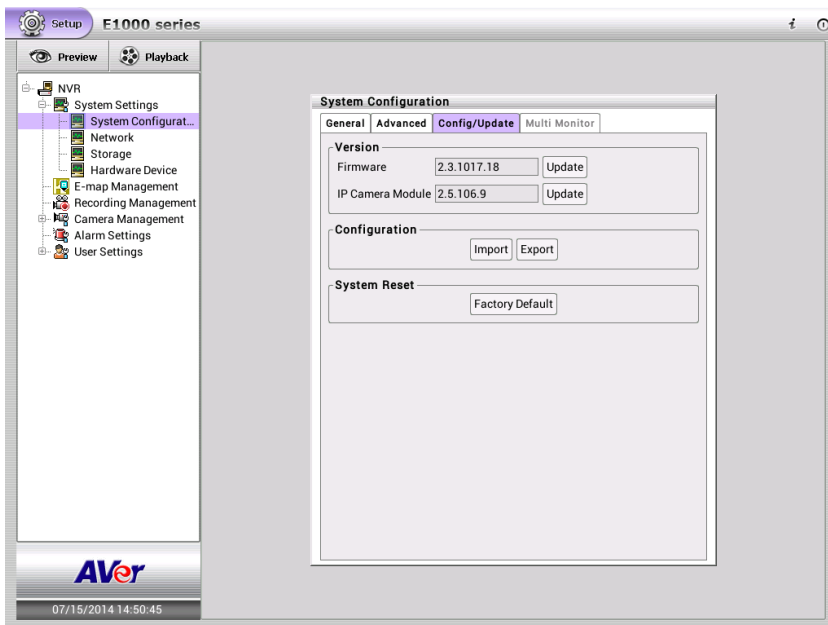

2.5.4.1 Import the NVR/DVR System Configuration


To regain the same settings back from previously backup configuration file.

1. Plug the USB pen drive into the NVR/DVR unit that contains the backup configuration file that user has exported previously.

The screenshot shows a web interface titled "System Configuration". It has four tabs: "General", "Advanced", "Config/Update" (which is selected and highlighted in purple), and "Multi Monitor". The "Config/Update" tab contains three sections: "Version", "Configuration", and "System Reset". The "Version" section has two rows: "Firmware" with a text box containing "2.3.1017.18" and an "Update" button, and "IP Camera Module" with a text box containing "2.5.106.9" and an "Update" button. The "Configuration" section has two buttons: "Import" and "Export". The "Import" button is highlighted with a red rectangle. The "System Reset" section has a single button labeled "Factory Default".

2. In Configure/Update page, click **Import** button in Configuration section.
3. In Import dialog box, user should see the backup configuration file path and file name.


4. Then, click **Import** button.

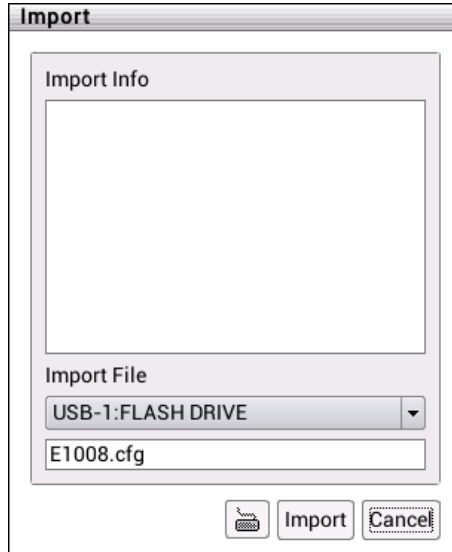

5. A message dialog box will appear to remind user that the NVR/DVR system will reboot after restoring the backup configuration file. Click **OK** button to continue. To cancel click **Cancel** button.




6. After restoring backup configuration file, a message dialog box will appear to inform user that import process is completed. Click **OK** button and the NVR/DVR system will reboot.

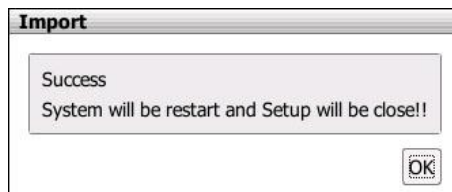

2.5.4.2 Export the NVR/DVR System Configuration

Backup a copy of all the settings and allows you to regain the same settings back.


1. Plug in the USB pen drive for saving configuration file.
2. In Configure/Update page, click **Export** button in Configuration section.

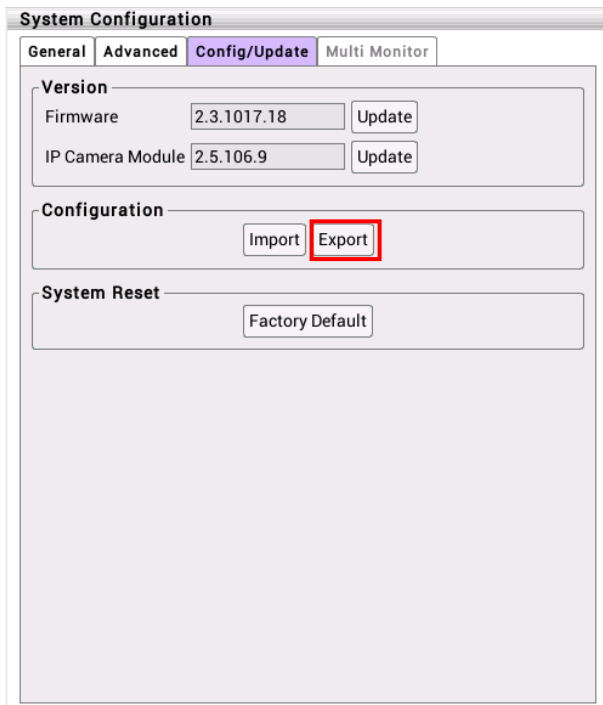


The screenshot shows the 'System Configuration' window with the 'Config/Update' tab selected. The window is divided into three main sections: 'Version', 'Configuration', and 'System Reset'. The 'Version' section contains two rows: 'Firmware' with a text box containing '2.3.1017.18' and an 'Update' button, and 'IP Camera Module' with a text box containing '2.5.106.9' and an 'Update' button. The 'Configuration' section contains two buttons: 'Import' and 'Export', with the 'Export' button highlighted by a red rectangle. The 'System Reset' section contains a single button labeled 'Factory Default'.

System Configuration			
General	Advanced	Config/Update	Multi Monitor
Version			
Firmware	2.3.1017.18	Update	
IP Camera Module	2.5.106.9	Update	
Configuration			
Import		Export	
System Reset			
Factory Default			

3. In Export dialog box, user should see the backup configuration file path and default backup configuration file name.

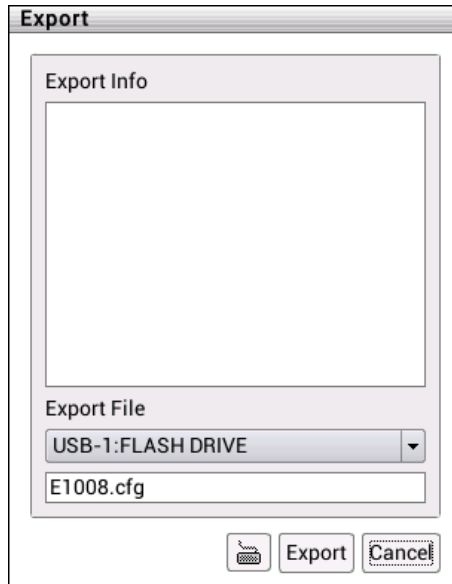

4. Next, click **Export** button.
5. A message dialog box will appear to notice user that export process is completed. Click **OK** button to finish the export process.

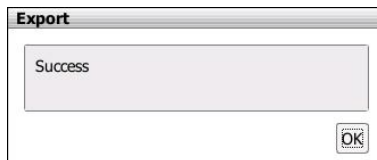


6. To restore the backup configuration file to NVR/DVR system, refer to [Chapter 2.5.4.1](#).


2.5.4.3 Upgrade the NVR/DVR Firmware

To update the firmware of NVR/DVR system.


1. Plug the USB pen drive that contains the NVR/DVR firmware file. To get the newest NVR/DVR firmware, go to website <http://www.aver.com> > **Support** > **Download center**.
2. In Configure/Update page, click **Update** button of Firmware.

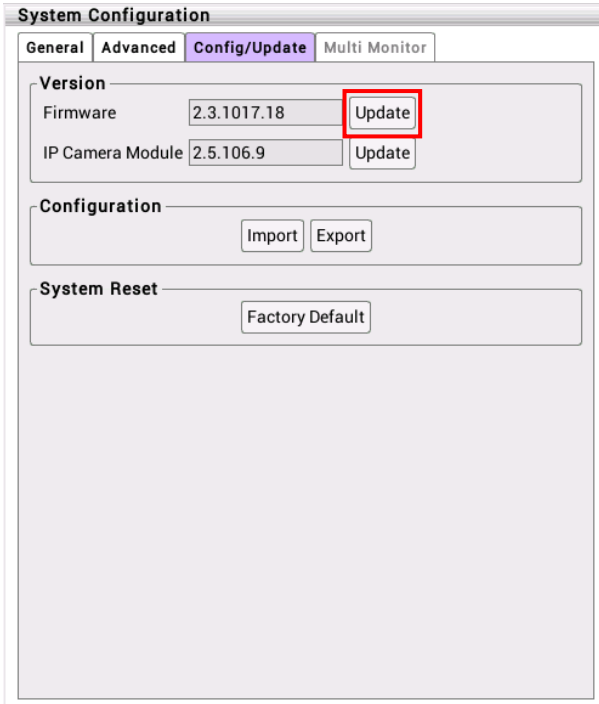

3. In upgrade dialog box, the NVR/DVR system will detect the firmware file and shows the firmware file path, firmware file name, and version information.
4. Click **Upgrade** button and an upgrade process dialog box will appear.

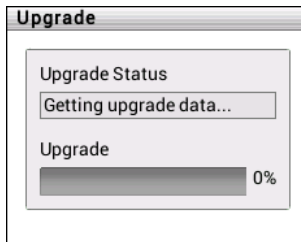

5. A message dialog box will appear to inform user that the upgrade process is completed.
Click **OK** button to restart the NVR/DVR system.

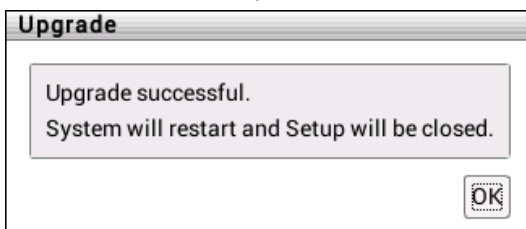

2.5.4.4 Upgrade the IP Camera Module Patch

To update the firmware of NVR/DVR system.

1. Plug the USB pen drive that contains the IP camera patch file.
2. In Configure/Update page, click **Update** button of IPCam Module.


The screenshot shows a web-based 'System Configuration' window with four tabs: 'General', 'Advanced', 'Config/Update' (which is selected and highlighted in purple), and 'Multi Monitor'. The 'Config/Update' tab contains three main sections: 'Version', 'Configuration', and 'System Reset'. The 'Version' section has two rows: 'Firmware' with a text box containing '2.3.1017.18' and an 'Update' button; and 'IP Camera Module' with a text box containing '2.5.106.9' and an 'Update' button. The 'Update' button for the IP Camera Module is highlighted with a red rectangle. The 'Configuration' section has 'Import' and 'Export' buttons. The 'System Reset' section has a 'Factory Default' button.

3. In upgrade dialog box, the NVR/DVR system will detect the patch file and show the patch file path, patch file name, and version information.
4. Click **Upgrade** button and an upgrade process dialog box will appear.
5. A message dialog box will appear to inform user that the upgrade process is completed. Click **OK** button to finish the upgrade process.

2.5.5 Reset to Factory Default

Reset the NVR/DVR system back to factory default value. All configurations will be lost after reset to factory default.

Click **Factory Default** button of Factory default and NVR/DVR system will reboot automatically.

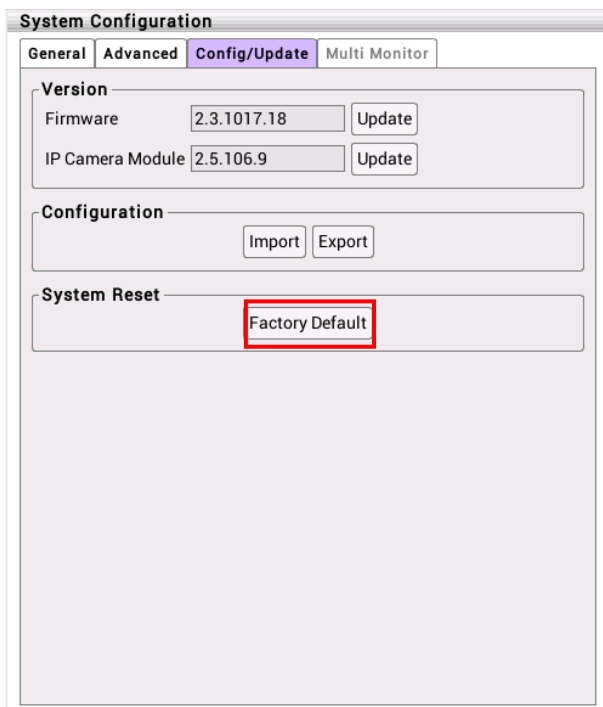


The screenshot shows a web-based configuration interface titled "System Configuration". It has four tabs: "General", "Advanced", "Config/Update" (which is selected and highlighted in purple), and "Multi Monitor". The "Config/Update" tab contains three sections: "Version", "Configuration", and "System Reset". The "Version" section has two rows: "Firmware" with a text box containing "2.3.1017.18" and an "Update" button, and "IP Camera Module" with a text box containing "2.5.106.9" and an "Update" button. The "Configuration" section has two buttons: "Import" and "Export". The "System Reset" section has a single button labeled "Factory Default", which is highlighted with a red rectangular border.

System Configuration			
General	Advanced	Config/Update	Multi Monitor
Version			
Firmware	2.3.1017.18	Update	
IP Camera Module	2.5.106.9	Update	
Configuration			
		Import	Export
System Reset			
Factory Default			

2.6 Network Setting

Select type of IP mode, setup the IP address of NVR/DVR, and configure the DDNS.

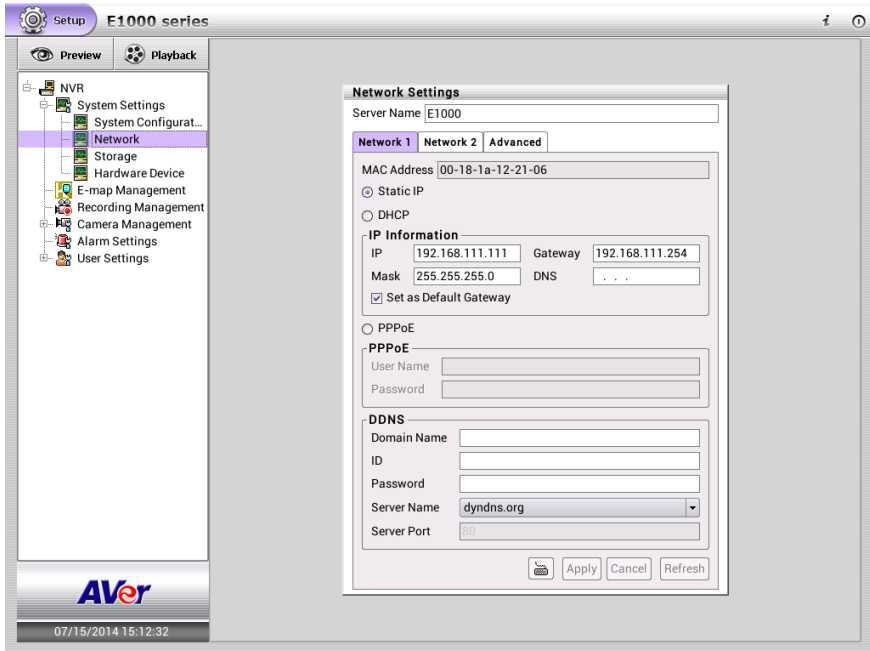

1. Click **Setup** tab > **System Setting**; click + to expand list of System Setting and click **Networking**.
2. **MAC Address**: Displays the MAC address of Ethernet port on LAN card.
3. Select the IP mode – **Static IP**, **DHCP**, **PPPOE**.
 - **Static IP**: Assign a fixed IP address for NVR/DVR server
 - **IP ADDRESS**: Assign a constant IP address which a real IP addresses given from ISP.



Do Not assign the NVR/DVR server to 1.0.0.0 network segment. It might caused the NVR/DVR cannot access to Internet due to the un-recognize to 1.0.0.0 IP segment.

- **Mask**: It is a bitmask used to identify the sub network and how many bits provide room for host addresses. Enter the subnet mask of the IP address which user has assigned to NVR/DVR system.

- **GATEWAY:** A network device act as a passageway to internet. Enter the network gateway IP address
 - **DNS:** Domain Name Server translates domain names (such as www.abb.com.tw) to IP addresses. Enter the IP address of DNS if it is available.
- **DHCP:** Uses DHCP server assigning NVR/DVR server an IP address.
- **PPPOE:** Point-to-Point Protocol over Ethernet is a network protocol for encapsulating PPP frames in Ethernet frames. It is used mainly with ADSL services. If your network is using ADSL service connecting to internet, and then, select PPPOE mode. Enter **User ID** and **Password** that is given by your ISP for PPPOE connecting authority.
4. **Set as default gateway:** The NVR/DVR system supports dual LANs, but only one LAN port can be set as default gateway.
 5. Setup the DDNS. To use this feature, register your own domain name server first. **Only the LAN port is set as default gateway can be set DDNS function.**
 - **Domain Name:** The user has applied on DDNS website.
 - **ID:** The account ID that user has created on DDNS website.
 - **Password:** The password that user has setup on DDNS website.
 - **Server Name:** The domain name server that user has applied the domain name.
 - **Server Port:** The port is used to connect the domain name server.
 6. After enter all necessary information, click **Apply** button to save the settings.
 7. To setup the **Network 2**, click **Network 2** tab and follow above steps.

Network Settings

Server Name

Network 1 **Network 2** **Advanced**

MAC Address

☒ Static IP

☐ DHCP

IP Information

IP Gateway

Mask DNS

☐ Set as Default Gateway

☐ PPPoE

PPPoE

User Name

Password

DDNS

Domain Name

ID

Password

Server Name

Server Port

2.6.1 Setup the NVR/DVR Server Name

Assign a name for the NVR/DVR system. Alphabet letters and numbers only.

1. Click **Setup** tab > **System Setting**; click + to expand list of System Setting and click **Networking**. User will see the Network Setting dialog box appear.
2. Enter the desire name in **Server Name** column, then, click **Apply** button to save the settings.

Network Settings

Server Name

Network 1 **Network 2** **Advanced**

MAC Address

☒ Static IP

☐ DHCP

IP Information

IP Gateway

Mask DNS

☒ Set as Default Gateway

☐ PPPoE

PPPoE

User Name

Password

DDNS

Domain Name

ID

Password

Server Name


Server Port

2.6.2 Network Advanced Setting

User can setup camera transmitting, UPnP function, bandwidth limit setting, and network port setting.

Click **Setup** tab > **System Setting**; click + to expand list of System Setting and click **Networking** > **Advanced** tab.

Click **Setting** to configure.

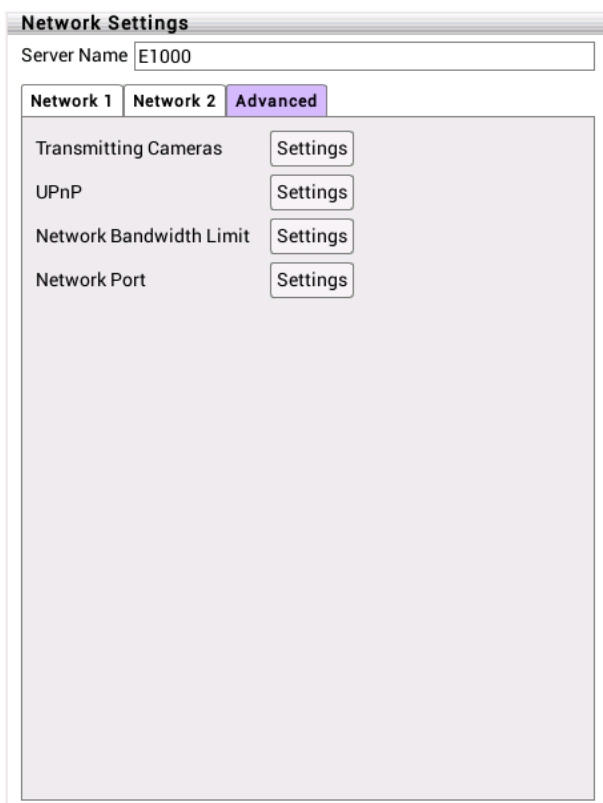


The screenshot shows a window titled "Network Settings". At the top, there is a text field for "Server Name" containing the value "E1000". Below this, there are three tabs: "Network 1", "Network 2", and "Advanced". The "Advanced" tab is currently selected and highlighted in purple. The main area of the window is light gray and contains four settings, each with a "Settings" button to its right:

Setting	Action
Transmitting Cameras	Settings
UPnP	Settings
Network Bandwidth Limit	Settings
Network Port	Settings

2.6.2.1 Setup the Transmitting Camera


Select and click on the camera number in the Transmitting Camera section you want to make it accessible via internet using PCViewer, Remote site control, and iPhone/Andorid Viewer. To select all the cameras, enable the **ALL** check box.

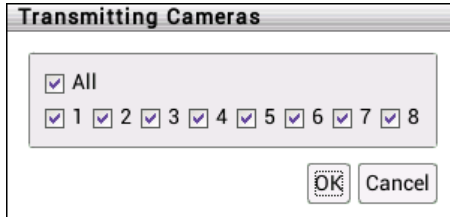

The 'Transmitting Cameras' dialog box has a title bar with the text 'Transmitting Cameras'. Inside, there is a group box containing a list of checkboxes. The first checkbox is labeled 'All' and is checked. Below it are checkboxes for camera numbers 1 through 8, all of which are also checked. At the bottom right of the dialog are two buttons: 'OK' and 'Cancel'.

2.6.2.2 Setup the UPnP


Assign a port number for UPnP service. Click **OK** to save the setting. This function is working when the router had enabled the UPNP function and had opened the port, which had assigned for UPNP setting, for the NVR/DVR system.

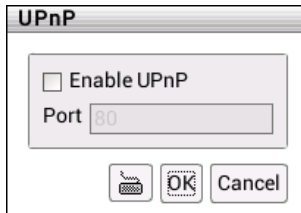

The 'UPnP' dialog box has a title bar with the text 'UPnP'. Inside, there is a group box containing an unchecked checkbox labeled 'Enable UPnP'. Below the checkbox is a text field labeled 'Port' with the value '80' entered. At the bottom right of the dialog are three buttons: a router icon, 'OK', and 'Cancel'.

2.6.2.3 Setup the Bandwidth Limit


Set the network bandwidth consumption limit for remote accessing. Click **OK** to save the setting.

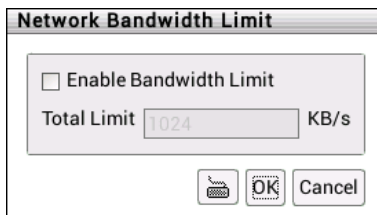

The 'Network Bandwidth Limit' dialog box has a title bar with the text 'Network Bandwidth Limit'. Inside, there is a group box containing an unchecked checkbox labeled 'Enable Bandwidth Limit'. Below the checkbox is a text field labeled 'Total Limit' with the value '1024' entered, followed by the unit 'KB/s'. At the bottom right of the dialog are three buttons: a router icon, 'OK', and 'Cancel'.

2.6.2.4 Setup the Network Port

Assign a **Network Port** for remote accessing connection.

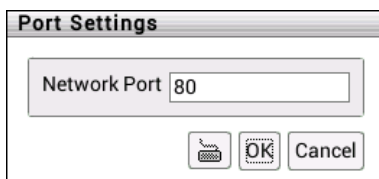


The image shows a dialog box titled "Port Settings". Inside the dialog, there is a label "Network Port" followed by a text input field containing the number "80". Below the input field, there are three buttons: a button with a keyboard icon, an "OK" button, and a "Cancel" button.

2.7 Storage Setting

In storage setting, user can add the storage path, remove the storage path, format hard disk, and set the hard disk recycle time.

Click **Setup** tab > **System Setting**; click **+** to expand list of System Setting and click **Storage**.

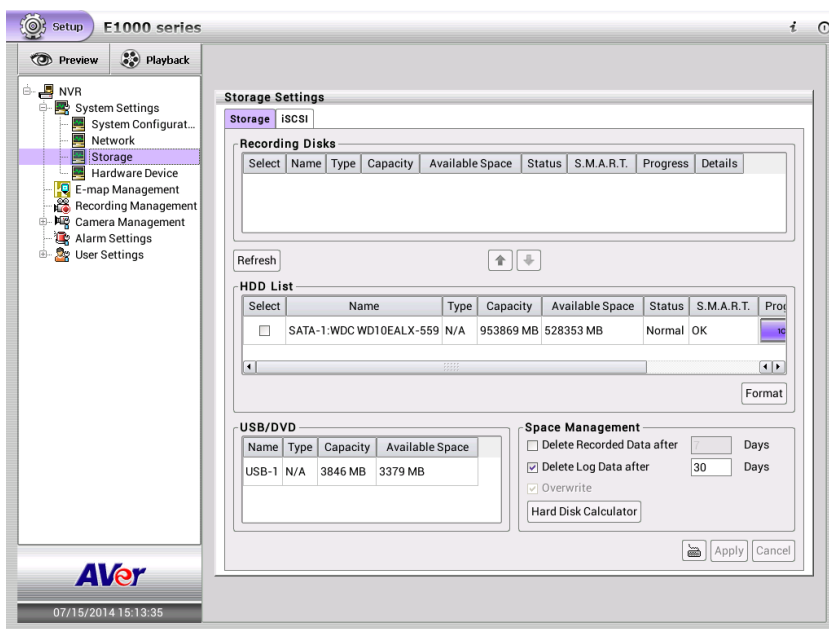


2.7.1 Formatting the Hard Disk

Follow the steps below to format the hard disk for first time installation or re-format the hard disk to the type that can be saved recording video.


- 1. In Storage Setting page, click **Storage** tab.
- 2. In Storage Setting page, user should see the hard disk in Detected HDD section that NVR/DVR system has detected.

 If the installed hard disk drive doesn't show in Free HDD list section, click **Scan** to re-detect it.


- 3. Select the hard disk from Detected HDD section and click **Format** button.

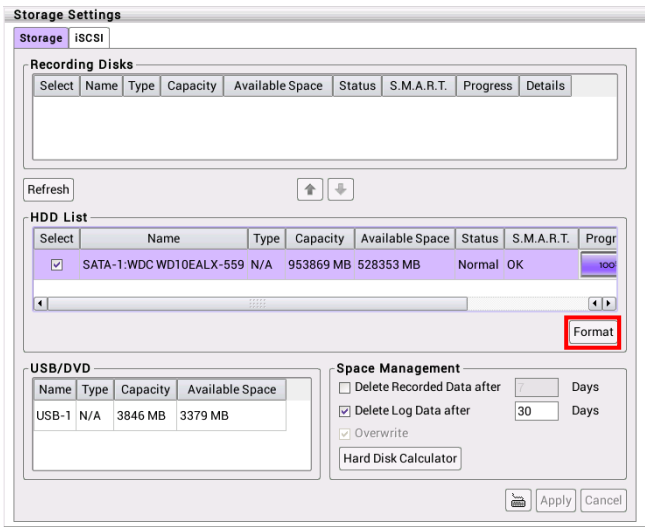

- 4. Click **Yes** to confirm the format process.

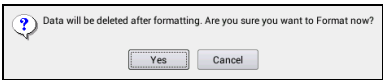

- 5. User will see the format process bar in percentage. When the format process is done, the percentage is displayed in 100% and click **OK** to complete the format process.

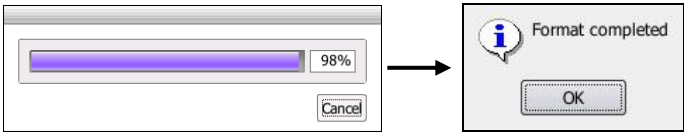

- 6. After formatting, the hard disk is ready to set as a storage path.


2.7.2 Setup Storage Path for Recording Data



Without storage path, the NVR/DVR system won't be able to record.

Add a storage path for saving recording video data.


1. In Storage Setting page, click **Storage** tab. Select hard disk or iSCSI HDD and click  button.

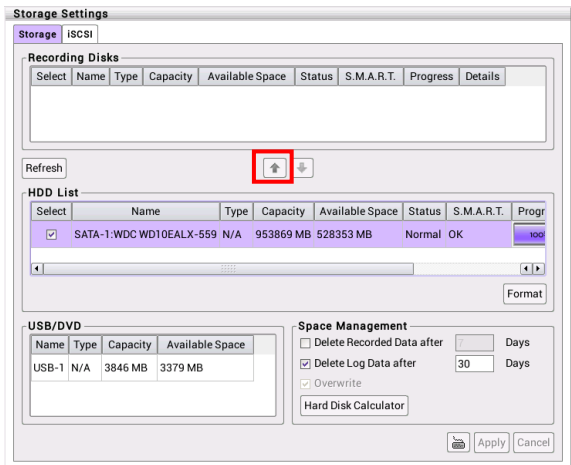

The screenshot shows the 'Storage Settings' window with the 'Storage' tab selected. The 'Recording Disks' section is empty. The 'HDD List' section contains one entry: 'SATA-1:WDC WD10EALX-559' with a capacity of 953869 MB and 528353 MB available space. The 'Up' arrow button is highlighted with a red box.

Select	Name	Type	Capacity	Available Space	Status	S.M.A.R.T.	Progress	Details
☒	SATA-1:WDC WD10EALX-559	N/A	953869 MB	528353 MB	Normal	OK	100%	

2. The selected hard disk or iSCSI HDD will be added into **Use for Recording HDD** section.
3. To remove the hard disk or iSCSI HDD, select hard disk or iSCSI HDD in Use for Recording HDD section and click  button.

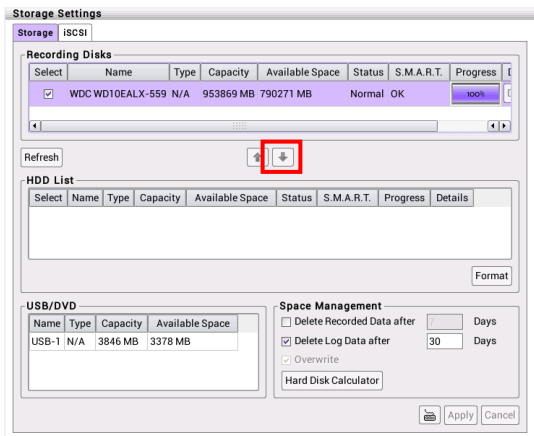

The screenshot shows the 'Storage Settings' window with the 'Storage' tab selected. The 'Recording Disks' section now contains one entry: 'WDC WD10EALX-559' with a capacity of 953869 MB and 790271 MB available space. The 'Down' arrow button is highlighted with a red box.

Select	Name	Type	Capacity	Available Space	Status	S.M.A.R.T.	Progress	Details
☒	WDC WD10EALX-559	N/A	953869 MB	790271 MB	Normal	OK	100%	

2.7.3 Setup Hard Disk and Event Log Recycle Time

- **Delete recorded after Days:** If user wants the system to automatically erase the data after a certain days, enable the **Delete recorded data after** check box and enter the numbers of days in **Days** text box.
- **Delete event and alarm log after Days:** If you want the system to automatically erase the event and alarm log after a certain days, enable the **Delete event and alarm log after** check box and enter the numbers of days in **Days** text box.
- **Overwrite:** When there is not enough free space to record one hour data, the system automatically replaces the oldest data. The default is enabled and cannot be changed.

The image shows a 'Storage Settings' window with four main sections: Recording Disks, HDD List, USB/DVD, and Space Management.

Recording Disks

Select	Name	Type	Capacity	Available Space	Status	S.M.A.R.T.	Progress
☐	WDC WD10EALX-559	N/A	953869 MB	790271 MB	Normal	OK	100%

Refresh [Up Arrow] [Down Arrow]

HDD List

Select	Name	Type	Capacity	Available Space	Status	S.M.A.R.T.	Progress	Details
--------	------	------	----------	-----------------	--------	------------	----------	---------

Format

USB/DVD

Name	Type	Capacity	Available Space
USB-1	N/A	3846 MB	3378 MB

Space Management

☐ Delete Recorded Data after Days

☒ Delete Log Data after Days

☒ Overwrite

Hard Disk Calculator

[Icon] Apply Cancel

2.7.4 iSCSI Setting

Connect the iSCSI server on your network to use as a storage path for saving recorded data.

1. Enter the following information to connect the iSCSI server on your network.
 - **Initiate Name:** The initiate name of iSCSI server. User can find out on iSCSI server.
 - **IP Address:** IP address of iSCSI server.
 - **Port:** The port is used to connect with iSCSI server.
 - **User name:** The user name that is used to login iSCSI server.
 - **Password:** The password that is used to login iSCSI server.

Storage Setting

Storage

iSCSI

iSCSI Setup

Initiate Name

iqn.2

IP Address

192.16

Port

3

User Name

admin

Password

Status

Connected...

Disconnect

iSCSI HDD

Refresh

Name	Type	Capacity	Free Space	Status
iSCSI-6:VessRAID 1720i	iSCSI	6288384 MB	6288384 MB	Unformat

Cancel

2. Click **Connect** button to connect with iSCSI server.
3. When connection is successful, user should see the iSCSI HDD is list in iSCSI HDD section.

4. Click **Storage** tab, user will see the iSCSI HDD is listed in Detected HDD section.
5. To format iSCSI HDD, select it and click **Format** button.
6. To add iSCSI HDD as a storage path, select it and click  button.

Storage Setting

Storage

iSCSI

Use for Recording HDD

Select	Name	Type	Capacity	Free Space	Status	S.M.A.R.T.	Progress	Detail
☐	WDC WD10EALX-559	N/A	953869 MB	790272 MB	Normal	OK	100%	Detail

Refresh

↑

↓

Detected HDD

Select	Name	Type	Capacity	Free Space	Status	S.M.A.R.T.	Progress	Detail
☐	iSCS...	iSCSI	628838...	6288384 ...	Unformat	OK	100%	Detail

Format

USB / DVD

Name	Type	Capacity	Free Space
USB-2	N/A	3846 MB	3827 MB

Space Management

☐ Delete Recorded Data After
 Days

☒ Delete Log Data After
 Days

☒ Overwrite

Hard Disk Calculator

Apply

Cancel

2.8 Camera Setting

To connect and configure the analog and IP camera.

Click **Setup** tab > **Camera Setting**.

The screenshot displays the AVer E1000 series NVR web interface. The left sidebar shows a tree view with 'Camera Management' selected. The main area is titled 'Camera Management' and contains a 'Camera List' table, a 'Capacity' section, a 'Camera Information' form, and a 'Search List' section.

Camera List

No.	Type	IP Address	Protocol	Model	Status	fps	Bitrate	Details
1	IP				Fail	0	0 KB	Settings
2	IP				Fail	0	0 KB	Settings
3	IP				Fail	0	0 KB	Settings
4	IP				Fail	0	0 KB	Settings
5	IP				Fail	0	0 KB	Settings
6	IP				Fail	0	0 KB	Settings
7	IP				Fail	0	0 KB	Settings
8	IP				Fail	0	0 KB	Settings

Capacity

Used (MP) / Available (MP)
All CHs 0.00 / 33.18

Camera Information

Name:
IP Address:
Port: 80
Protocol: AVer
Model: EVS0523
Video Channel: 1
User Name:
Password:
Copy to Camera: 01

Search List

Search Active IP

No.	/	IP Address	Port	Protocol

07/15/2014 15:23:21

2.8.1 Connect the Analog Camera



Analog camera only supports on E1008H model.

1. Connect the DVI cable to the video in port of NVR/DVR.
2. Connect the analog camera to the DVI cable of NVR/DVR and power on the analog camera.
3. In Camera List, select the channel that connect with Analog camera and select **Type** of camera as **Analog**.

Camera Management

Camera List

No.	Type	IP Address	Protocol	Model	Status	FPS	Bitrate	Detail
1	IP	10.100.91.47	AVer	FX2000	Connected	19	1431307	Setting
2	IP	10.100.91.43	AVer	FX3000-R	Connected	23	3365165	Setting
3	IP	10.100.91.32	AVer	FX3000-R	Connected	20	1453660	Setting
4	IP	10.100.91.42	AVer	FB3027	Connected	20	1484118	Setting
5	Analog				Connected	22	1497698	Setting
6	IP				Fail	0	0	Setting
7	IP				Fail	0	0	Setting

Capacity

Used(MP) 1.57 / Available(MP) 15.01

Camera Information

Name camera5

IP Address

Port

Protocol

Model

Video Channel 5

User Name

Password

Add to Camera 05

Apply Cancel Delete

Search List

Search Active IP

IP Address


http://10.100.91.47:80/onvif/device_service

http://10.100.91.32:80/onvif/device_service

4. Next, click **Apply** to make the connection. After connection is successful, user should see the live video of analog camera.
5. To setup detail of analog camera, refer to [Chapter 2.8.3](#).

2.8.2 Connect the IP Camera

1. Click **Setup** tab > **Camera Setting**.
2. In Camera Information page is divided into 4 areas –**Camera List**, **Capacity**, **Search List**, and **Camera Information**.
 - **Camera List:** Lists all camera channels. When the channel has connected IP camera, it displays the IP Address, Protocol, Model, connection Status, FPS, Bitrate, and configure detail button of the connected IP camera.
 - **Capacity:** Displays the all connected IP cameras' resolutions in Used (MP) column and remain resolutions are display in Available (MP) column.
 - **Search List:** To perform the auto search IP camera on your LAN network and list search result. Also, the NVR/DVR system provides **Active IP** function for user to configure **AVer IP cameras series** from NVR/DVR site (see also [Chapter 2.8.2.1](#)).
 - **Camera Information:** For entering the IP camera's parameters when connects the IP camera.

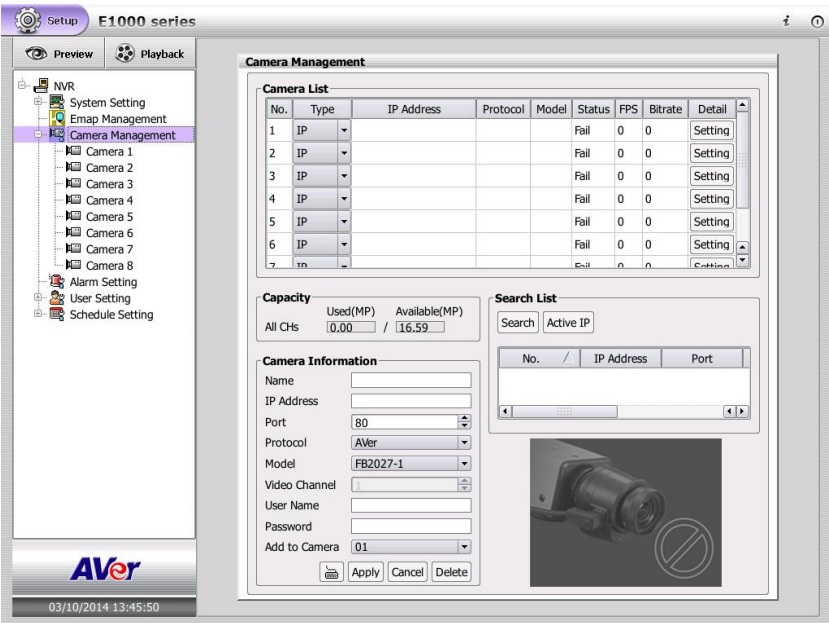

3. Select the **Type** of camera as **IP** in Camera List.
4. Then, click **Search** button to find IP cameras on LAN network.
5. In Search result list, select the IP camera that user wants to connect. Then, select the IP camera channel that user wants to connect the selected IP camera. Enter the **User name** and **Password** of IP camera if the connection authentication is required.
6. Click **Apply** button to make a connection.

Camera Management

Camera List

No.	Type	IP Address	Protocol	Model	Status	FPS	Bitrate	Detail
1	IP				Fail	0	0	Setting
2	IP				Fail	0	0	Setting
3	IP				Fail	0	0	Setting
4	IP				Fail	0	0	Setting
5	IP				Fail	0	0	Setting
6	IP				Fail	0	0	Setting
7	IP				Fail	0	0	Setting

Capacity

Used(MP) Available(MP)

All CHs 0.00 / 16.59

Camera Information

Name

IP Address

Port

Protocol

Model

Video Channel

User Name

Password

Add to Camera

Search List

No.	IP Address
5	10.100.91.47
6	10.100.91.43



7. After connection is successful, user should see the live video is displayed.

Camera Management

No.	Type	IP Address	Protocol	Model	Status	FPS	Bitrate	Detail
1	IP	10.100.91.47	AVer	FX20...	Conn...	20	1450...	Setting
2	IP	10.100.91.43	AVer	FX30...	Conn...	27	3886...	Setting
3	IP	10.100.91.32	AVer	FX30...	Conn...	24	2397...	Setting
4	IP	10.100.91.42	AVer	FB30...	Conn...	1	897431	Setting
5	IP				Fail	0	0	Setting
6	IP				Fail	0	0	Setting
7	IP				Fail	0	0	Setting

Capacity
 Used(MP) Available(MP)
 All Chs 1.23 / 15.36

Camera Information
 Name: camera1
 IP Address: 10.100.91.47
 Port: 80
 Protocol: AVer
 Model: FX2000
 Video Channel:
 User Name: admin
 Password: *****
 Add to Camera: 01
 [Apply] [Cancel] [Delete]

Search List
 Search Active IP
 IP Address
 http://10.100.91.47:80/onvif/device_service
 http://10.100.91.32:80/onvif/device_service

8. Also, user can enter the following data in Camera Information section and click **Apply** button to make a connection of the IP camera.
- **Name:** Give a name for the IP camera.
 - **IP Address:** Enter the IP camera's IP address.
 - **Port:** Enter the port of connecting IP camera.
 - **Protocol:** Enter the brand name of the IP camera. For example: AVer, AXIS...etc.
 - **Model:** Enter the model type of the IP camera. For example: FX3000
 - **User Name:** The user name of IP camera for authentication when connect to the IP camera.
 - **Password:** The password of IP camera for authentication when connect to the IP camera.
 - **Add to Camera:** The channel that is going to connect the IP camera.
9. To configure the IP camera's detail setting, please refer to [Chapter 2.8.3](#).
10. To connect another IP camera, repeat the above steps.

2.8.2.1 Active IP Function

The Active IP function allows user to configure the AVer IP camera series' IP mode, IP address, subnet mask, gateway, port, login ID, and password on NVR/DVR system.



The Active IP function supports AVer IP camera series only.

1. In Camera Information dialog box, click **Search** button. Then, select the IP camera that is in red text from Search List.

Camera Management

Camera List

No.	Type	IP Address	Protocol	Model	Status	FPS	Bitrate	Detail
1	IP	10.100.91.52	AVer	FB20...	Conn...	27	2706...	Setting
2	IP				Fail	0	0	Setting
3	IP				Fail	0	0	Setting
4	IP				Fail	0	0	Setting
5	IP				Fail	0	0	Setting
6	IP				Fail	0	0	Setting
7	IP				Fail	0	0	Setting

Capacity

Used(MP) Available(MP)
All CHs 0.31 / 16.28

Camera Information

Name: camera1
IP Address: 10.100.91.52
Port: 80
Protocol: AVer
Model: FB2027-2
Video Channel: 1
User Name: admin
Password: *****
Add to Camera: 01

Search List


Search ActiveIP

No. /	IP Address
4	10.100.91.44
5	10.100.91.52

Apply Cancel Delete

2. Click **Active IP** button and Active IP dialog box is appeared.

3. In Active IP dialog box, user can change IP mode of the IP camera and configure related parameters.

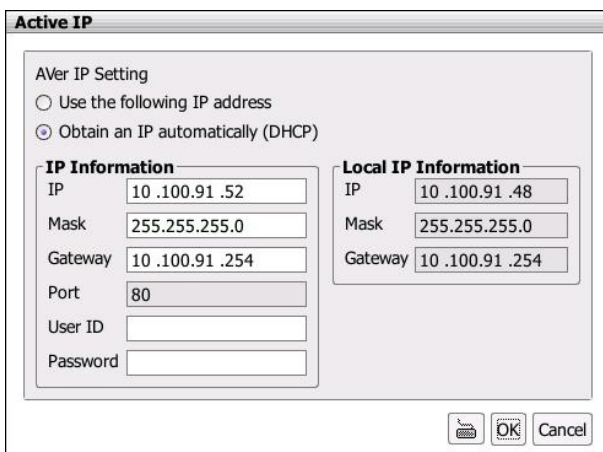

The image shows a software dialog box titled "Active IP". It contains two radio buttons under the heading "Aver IP Setting": "Use the following IP address" (unselected) and "Obtain an IP automatically (DHCP)" (selected). Below these are two panels. The "IP Information" panel on the left contains input fields for IP (10.100.91.52), Mask (255.255.255.0), Gateway (10.100.91.254), Port (80), User ID, and Password. The "Local IP Information" panel on the right contains input fields for IP (10.100.91.48), Mask (255.255.255.0), and Gateway (10.100.91.254). At the bottom right are three buttons: a help icon, "OK", and "Cancel".

Aver IP Setting	
☐	Use the following IP address
☒	Obtain an IP automatically (DHCP)

IP Information	
IP	10.100.91.52
Mask	255.255.255.0
Gateway	10.100.91.254
Port	80
User ID	
Password	

Local IP Information	
IP	10.100.91.48
Mask	255.255.255.0
Gateway	10.100.91.254

Buttons: [Help] [OK] [Cancel]

4. After configuring, click **OK** to save the setting.


2.8.3 Camera Detail Configuration

User can configure the IP/analog camera's detail settings.

Click **Setup** tab > **Camera Setting**; click + to expand list of Camera Setting and click the **Camera number** that user wants to configure. Or, click **Setting** button of IP camera in Camera Management dialog box.



The camera functions are depended on IP/analog camera has supported. The un-available functions are is gray out.

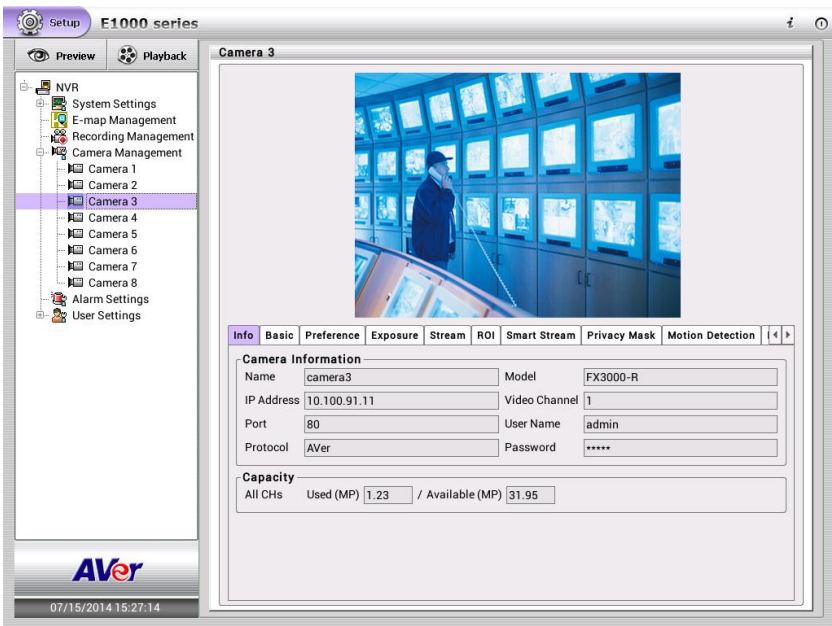


■ Info

Display the name, IP, port, protocol, model, channel, Login ID, password, and resolution of IP camera.

■ Basic

- ✧ **Video Adjustment:** Configure the Brightness, Contrast, Hue, Saturation, and Sharpness of IP camera.
- ✧ **IP Camera:** Enable/disable **Speaker** and **MIC** of IP camera.
- ✧ **Audio:** Enable/disable audio function of IP camera.

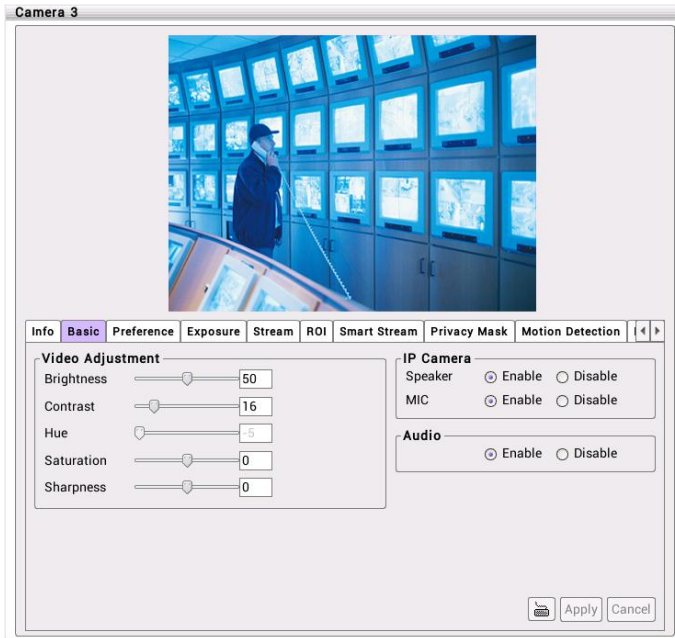


■ Preference

In Preference page, user can tune the IP camera white balance, select display color or black & white, set the flicker frequency, change the video orientation, and adjust the some advance settings. After completing the setting, click **Apply** to save the setting and **Cancel** to keep the old setting.



The Preference setting only support for IP camera.

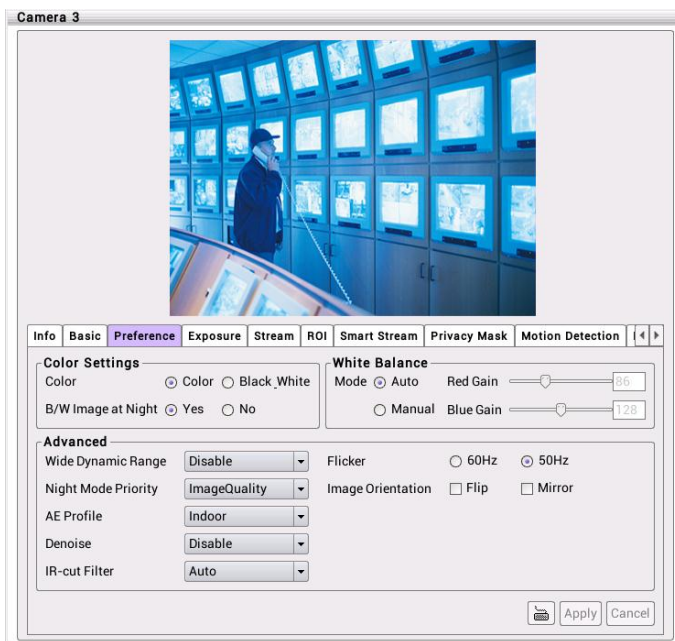

➤ Color Setting


- **Color:** Select the **Color** or **Black&White** mode.
- **B/W Image at Night:** Enable/disable to switch to B/W during night mode.

➤ White Balance: Adjust white balance in auto or manual mode.

➤ Advanced

- **Wide Dynamic Range:** WDR effectively balances the video image on the screen in both bright and dark areas to make it possible to see clear details. There are 3 levels for your choice or disable WDR.
- **Night mode priority:** Select the one you want to prioritize during night mode image quality or frame rate.

- **Denoise:** Select Disable/2D/3D/Auto to reduce the excessive noise on the video image. Select **Auto** and set the **Sensitivity** level.

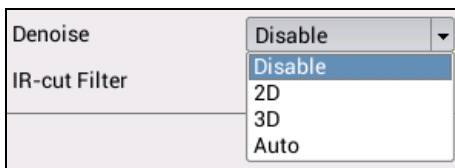

- **AE Profile (Auto Exposure Profile):** Select the auto exposure scenes – Indoor, Outdoor, or ManualIRIS.
- **IR-cut Filter:** The IR cut filter is a mechanism that prevents the infrared light from hitting the sensor. During day time the IR light has an interfering effect on the image quality of the camera, which leads to corruption of color and contrast as well as blurring. At night time, the infrared light is used to achieve more detailed images in the dark or with low ambient light.
 - ✧ **Auto:** automatically switch on/off the IR cut filter. It uses the light sensor in front of the camera to determine the level of ambient light.
 - ✧ **Day Mode:** switch on the IR cut filter at all time to prevent the IR light from hitting the sensor so that the color will not be corrupted.
 - ✧ **Night Mode:** switch off the IR cut filter at all time to let the sensor receives the IR light which could help improve low light sensitivity.
 - ✧ **Schedule:** specify the time on when to switch off the IR cut filter to night mode. The time format is hh:mm and in 24-hour clock time.

IR-cut Filter	Schedule	Night from	0001	(HHMM)	to	0001	(HHMM)
---------------	----------	------------	------	--------	----	------	--------


- **Flicker:** Select the flicker frequency.
- **Image Orientation:** To **Flip** or **Mirror** the video on screen.

■ Exposure

In Exposure page, user can set the exposure area, exposure mode, and calibrate the DC Iris. After completing the setting, click **Apply** to save the setting and **Cancel** to keep the old setting.



The Exposure setting only support for IP camera.

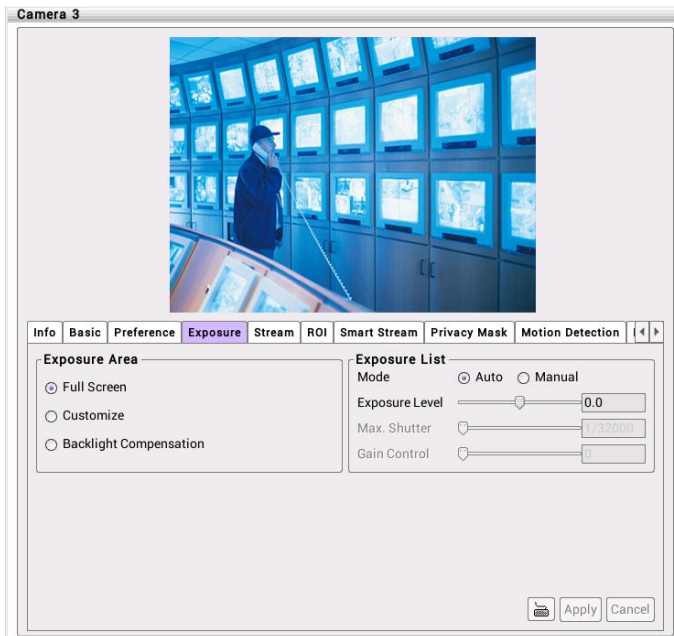


- **Exposure Area:** Select the exposure area to define the light distribution and bring out more details.
 - **Entire screen:** measure the entire screen to adjust the exposure.
 - **Customize:** measure the exposure to where the adjustable and movable frame on the screen is located. Move the spot to dark zone to adjust the light condition.
 - **Backlight compensation:** measure the exposure at the center of the screen.
- **Exposure List:** Select to **Auto** or **Manual** adjust the exposure.
 - **Auto:** adjust exposure level from -2.0 to +2.0.
 - **Manual:** adjust max shutter and gain control.

■ Stream

User can setup **Codec**, **Resolution**, **FPS**, **Bitrate Mode**, and **Quality** of **Stream 1**, and **Stream 2** on the IP camera channel. The Stream 1 is enabled in default. After completing the setting, click **Apply** to save the setting and **Cancel** to keep the old setting.



The NVR/DVR system doesn't support on stream 2 setting.

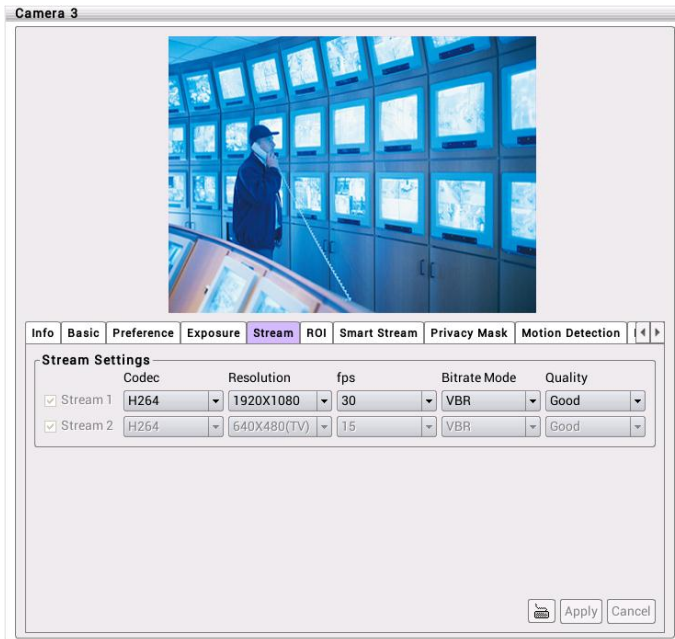


■ ROI

ROI stands for Region on Interest. It helps users to optimize bandwidth and storage. Users can select the key area to transmit as separate streams for targeted preview and recording.



The ROI setting only support for IP camera.

1. Select the **Sensor Mode** and **Stream**.
2. Then, select the **Region of Interest** from drop-down list and a gray frame will show up. The gray frame size is depended on the **Region of Interest** that user has selected. Click on the frame and move it to the region that user wants to select.
3. After completing the setting, click **Apply** to save the setting and **Cancel** to keep the old setting.

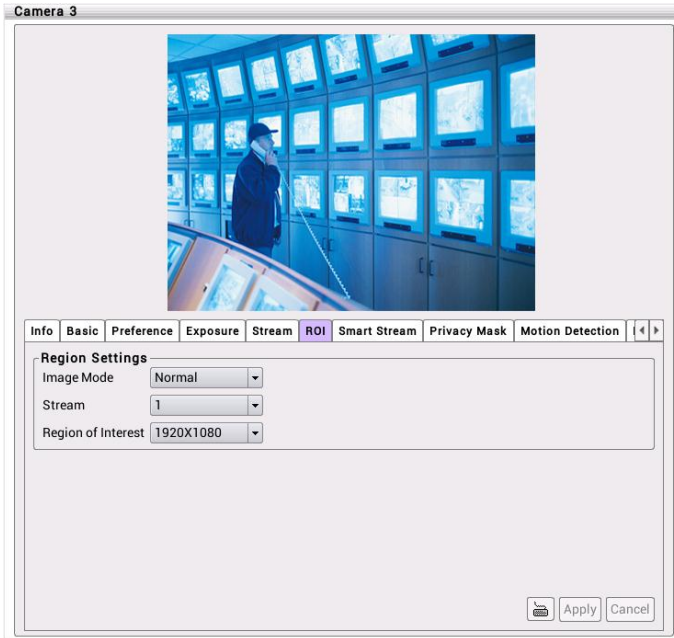

■ Smart Stream


Smart Stream optimizes bandwidth and storage space by increasing or decreasing quality for selected areas based upon criticality. Users can define up to 5 areas per stream to ensure sharp images for crucial areas, while saving bandwidth on non-essential areas. Typical applications include entrances, access gates, production lines, art galleries and museums.

After completing the setting, click **Apply** to save the setting and **Cancel** to keep the old setting.




The Smart stream setting only support for IP camera.

- **Stream:** Select the streaming source. This option is only applied to H.264.
- **Quality:** Select the Region 1/2/3/4/5 and set the high/low. Each region frame is corresponded to the color of text, ex: **Region 1** is red frame. Drag the frame to select the area on screen.
 - **High:** video quality of selected area is better than that of un-selected area.
 - **Low:** video quality of selected area is worse than that of un-selected area

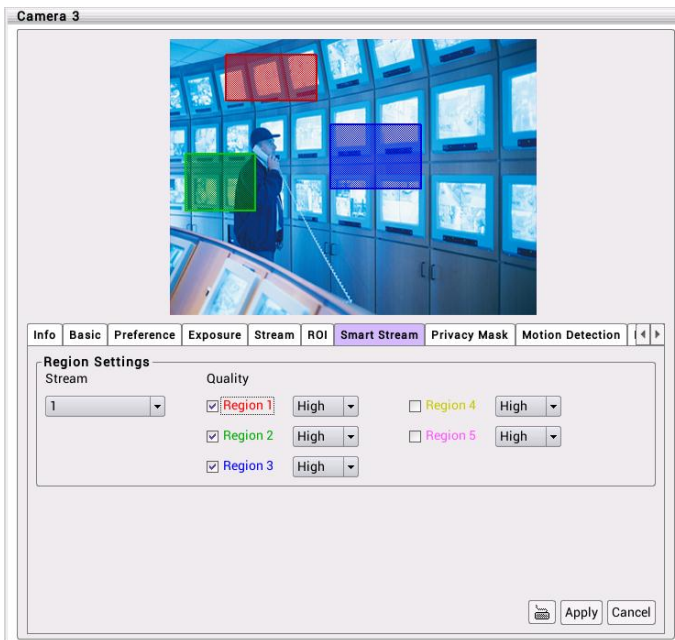


■ Privacy Mask

In Privacy Mask page, user can enable 3 privacy masks. Simply adjust the size and position the mask on the area user wants to conceal. The viewer will not be able to see the masked area. It will cover the video screen with black frame. After completing the setting, click **Apply** to save the setting and **Cancel** to keep the old setting.

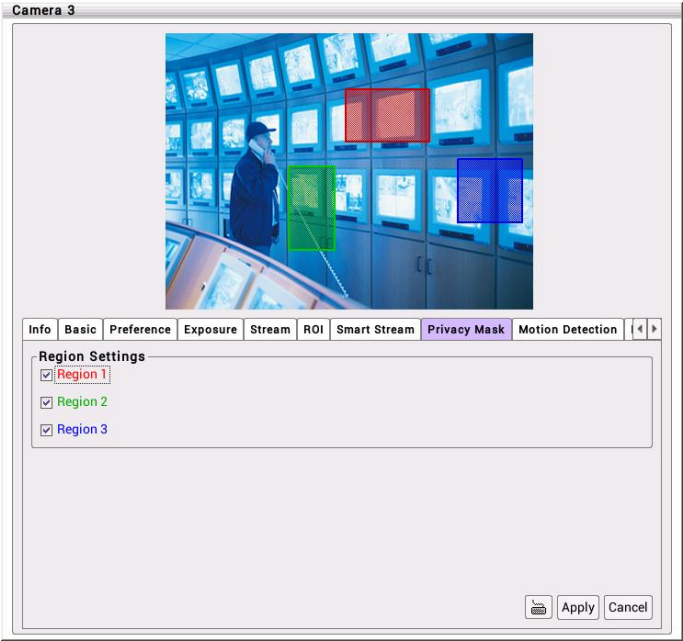

■ Motion Detection


In the motion detection page, the frame will blink when the motion detected has reached the percentage threshold setting. This feature can be utilized to trigger a response in Event setting.

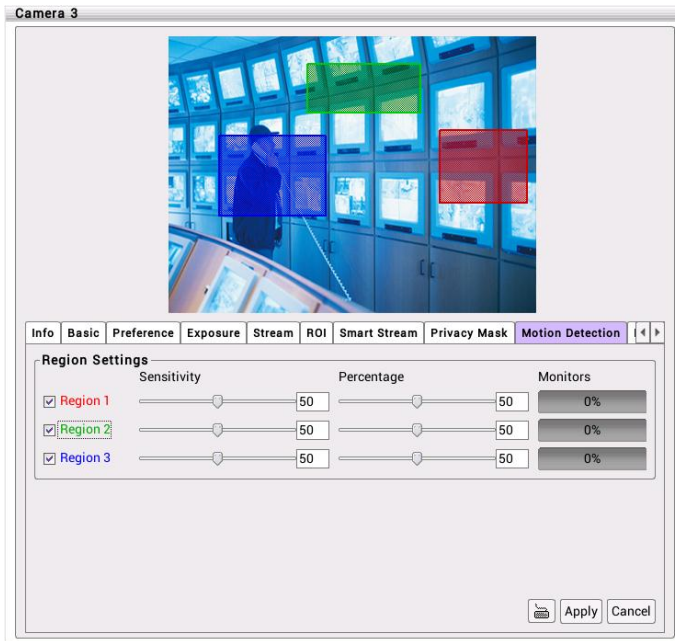

1. Enable the region check box (Region 1, Region 2, Region 3) to create a motion detection frame.
2. Move and adjust the frame to the area you want to detect the motion.
3. Adjust the sensitivity and percentage. Sensitivity detects the motion on the screen and assesses the changes in pixel thru percentage. The motion detection will activate when the Monitor level reaches the defined percentage.
4. After completing the setting, click **Apply** to save the setting and **Cancel** to keep the old setting.


■ IVA

Form drop-down list select the IVA function – Cross detection, Tampering, Missing object, or Suspicious object.

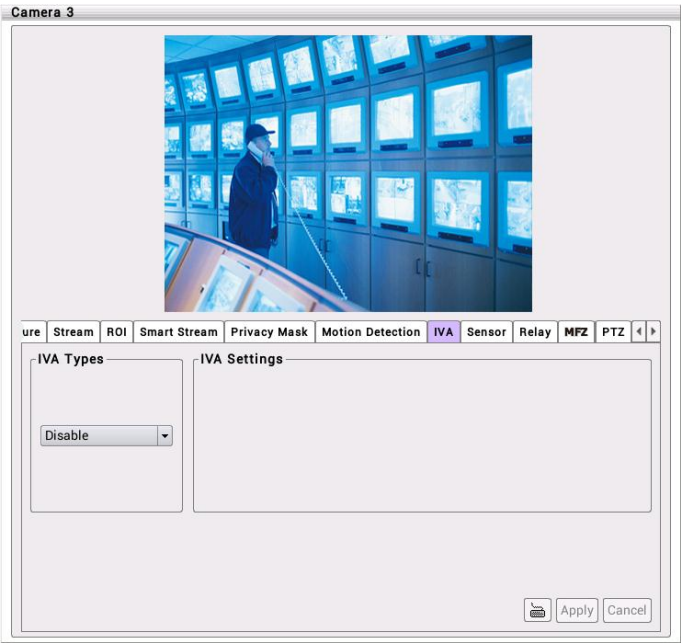


Cross Detection

Cross detection function detects moving objects that cross the virtual lines that user has set up in IP camera application and to trigger the alarm.

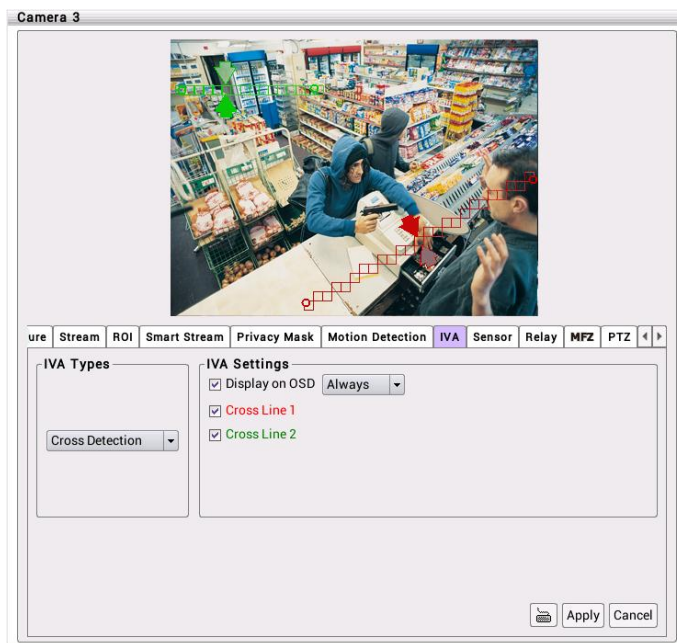


1. Enable Cross line 1/2 check box
2. You will see the red/green line is shown on the video screen.
3. Drag the red line or green line to set the area for cross detection. You can set both lines for cross detection or one of the lines. There is no priority for these 2 lines; the color is just for you to differentiate when both lines are set.
4. After setting the cross detection area, click the arrow of line to set cross detect direction. The arrow point is the direction of cross way.
5. In **Display on OSD**, if user wants to see the cross detection line(s) always display on the screen, select **always**. If user only wants to see the cross detection line(s) when the cross detection has triggered, select the time period (1s, 2s, 3s, 4s, or 5s) for cross line displaying on screen.
6. Click **Apply** to save the settings.

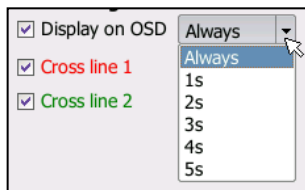

Tampering

Select Enable tamper detection to enable tampering function. And, alarm will trigger when the following situation has occurred.


- **Spray-painting:** Alarm is triggered when the camera has detected the painting sprayed on the camera's view for over 2 seconds.
- **Intention Block /Cover:** Alarm is triggered when the camera has detected the camera's view being blocked intentionally over 2 seconds.
- **Accidental redirection:** Alarm is triggered when someone re-directs the position or direction of camera accidentally.
- **Defocusing:** Alarm is triggered when the camera has lost focus.

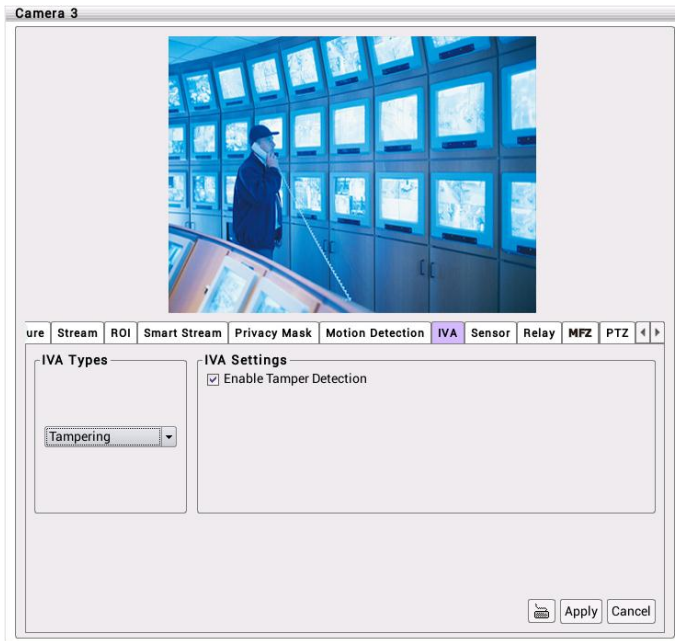

Missing Object

Select a certain object on the screen for the camera system to detect; System gives alarm when the object disappears.


1. Select the **Missing Object** from the drop-down list.
2. A red frame will show up on the screen. Click and drag the red frame to the object position and click the frame to adjust the size of frame.
3. **Detection Duration:** Set the lasting time for camera system to detect the object.
4. **Alert Duration:** Set the alarm lasting time after alarm has been triggered.
5. **Sensitivity:** Set the degree of response of detection.
6. **Display on OSD:** Mark to enable the missing object frame to display on screen when missing object has triggered.

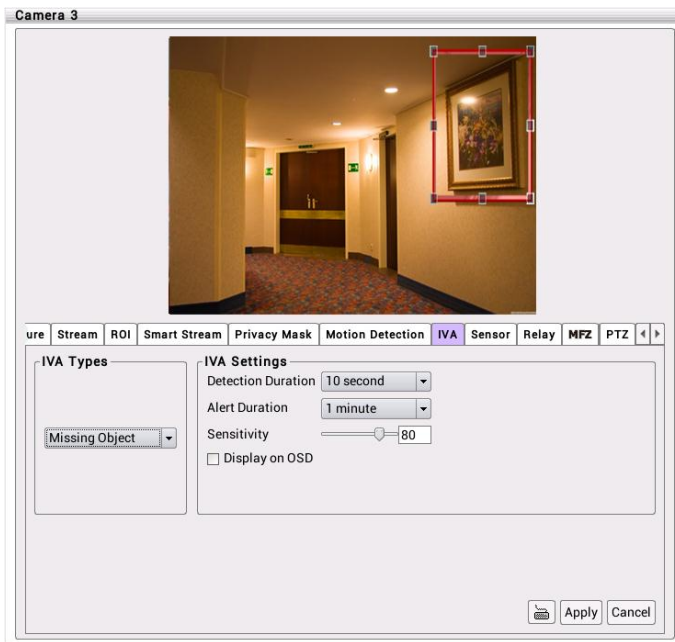

Suspicious Object

Suspicious Object is an unusual object appears on the screen.

1. Select the **Suspicious Object** from the drop-down list.
2. A red frame and green frame will show up on the screen. The red frame is defined as detecting zone and green frame is defined as object size frame. Click and drag the red frame to the position and click the frame to adjust the size of frame. Next, click and drag the green frame the detecting zone and adjust the size of object for detection.
3. **Sensitivity:** Set the degree of response of detection.
4. **Detection Duration:** Set the lasting time for camera system to detect the object.
5. **Alert Duration:** Set the alarm lasting time after alarm has been triggered.
6. **Display on OSD:** Mark to enable the suspicious object frame to display on screen when suspicious object has triggered.

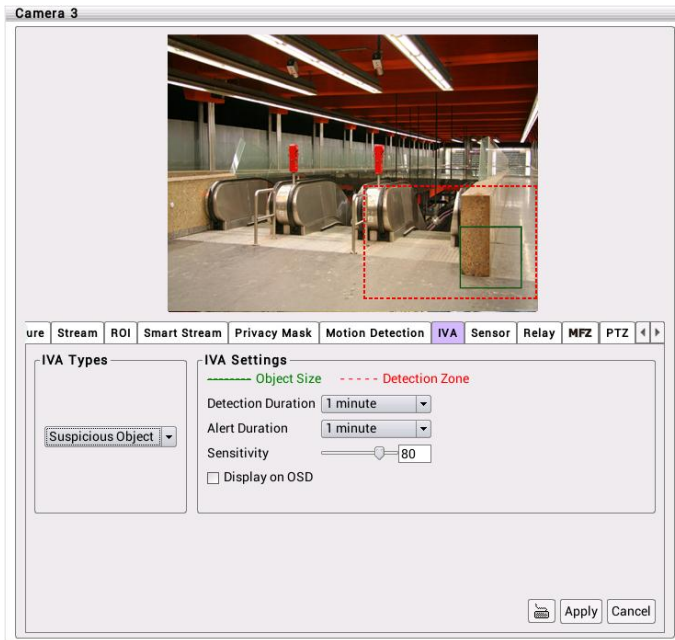

■ Sensor



The Sensor setting only support for IP camera.

Setup the sensor of IP camera.

1. In Camera Management dialog box, click **Sensor** tab.
2. Click the drop-down list and select the sensor ID number.
3. Enter sensor name in **Name** column
4. In the Content section, display the NVR/DVR system automatically detects the camera and input relates information. Enter a short comment for this sensor in **Description** column.
5. In the test section, click **Test** to check the sensor status. **Red** is high and **Green** is low.
6. Click **Apply** to exit and accept the setting and **Cancel** to exit without saving the setting.

■ Relay



The Relay setting only support for IP camera.

Setup the relay of IP camera.

- In Camera Management dialog box, click **Relay** tab.
- Click the drop-down list and select the relay ID number.
- Enter relay name in **Name** column
- In the Content section, display the system automatically detects the camera and input relates information. Enter a short comment for this relay in **Description** column.
- Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

Camera 3

ure Stream ROI Smart Stream Privacy Mask Motion Detection IVA Sensor **Relay** MFZ PTZ ◀ ▶

Relay 01 Name

☒ Enable

Content

Camera

Protocol

Model

Description

Apply Cancel

■ MFZ



- The IP camera has motorized lens can perform MFZ function(motorized focus and zoom).
- MFZ function doesn't support for analog camera.

Adjusting the focus or zoom in/out of IP camera.



Name	Function
 Auto focus	Automatically focus on where focus cursor () has pointed.
 Focus near	To adjust the near side of focus.
 Focus far	To adjust the far side of focus.
 Step zoom in	To zoom in one step by step for fine focus adjusting.
 Step zoom out	To zoom out one step by step for fine focus adjusting.
 Continuous zoom in	Press to zoom in continuous.


Name	Function
 Continuous zoom out	Press to zoom out continuous.
 Reset	To reset the zoom back to the center of screen view in default value (1x).

■ Setup PTZ function


Setup IP Camera PTZ Function

User can enable PTZ function if the IP camera has supported.

1. In Camera Management dialog box , click **Setup** tab
2. Then, select **Camera # > PTZ** tab.
3. In PTZ setup page, mark **Use PTZ** to enable PTZ function.

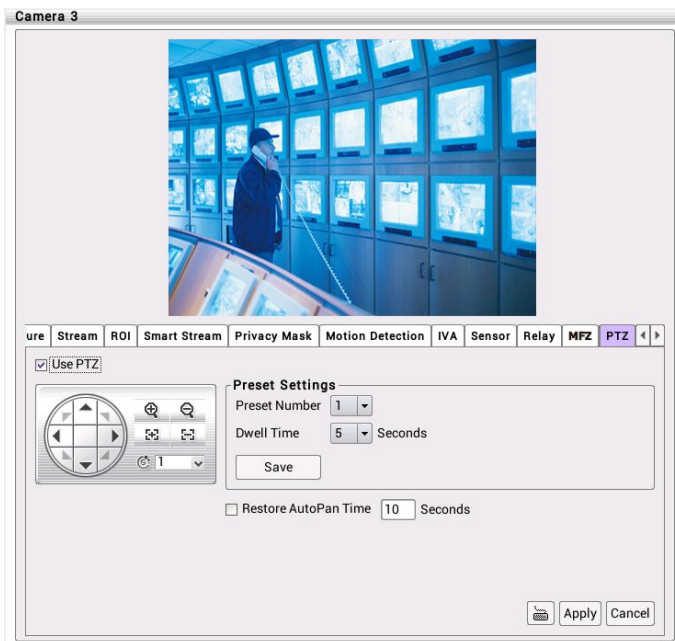

4. **Preset Setting:** use the control panel to adjust the position of the camera and select the **Preset Number** to assign a number for the camera preset position. After is done, click **Save** to keep the settings.

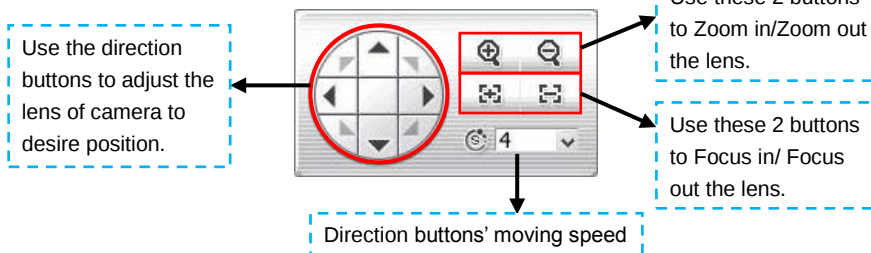


5. **DwellTime:** For how long the camera stays in that position before it moves to the next one

(the setup time period is 1–60 seconds). After is done, click **Save** to keep the settings.

Setup Analog Camera PTZ Function


User can enable PTZ function if the Analog camera has supported.

1. In Camera Management dialog box , click **Setup** tab
2. Then, select **Camera # > PTZ** tab.
3. In PTZ setup page, mark **Use PTZ** to enable PTZ function.

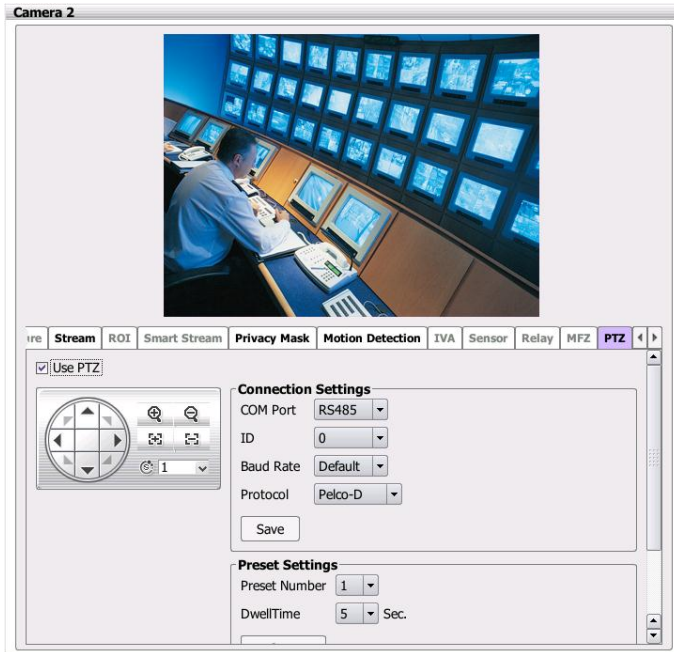

4. **Connection Settings:** select the following selections and click **Save** to apply the settings.
 - ✓ **COMPort:** The connecting port is fixed and can't be changed. The default is RS485 port.
 - ✓ **ID:** Assign an ID number for the PTZ camera.
 - ✓ **Baud Rate:** Please refer to the user's manual of the PTZ camera to make sure the baud rate.
 - ✓ **Protocol:** Please refer to the user's manual of the PTZ camera to make sure what protocol is using.

5. **Preset Setting:** use the control panel to adjust the position of the camera and select the **Preset Number** to assign a number for the camera preset position. After is done, click **Save** to keep the settings.

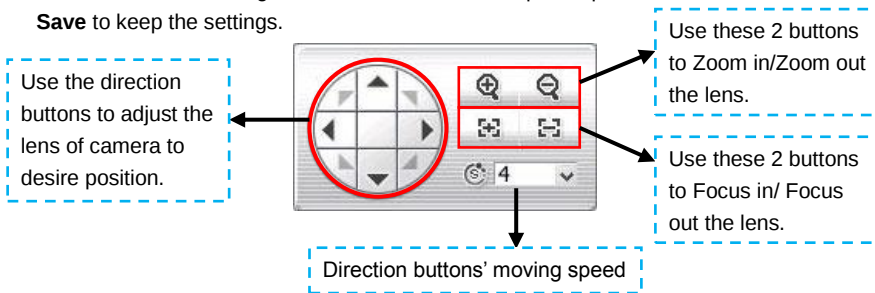

6. **DwellTime:** For how long the camera stays in that position before it moves to the next one (the setup time period is 1~60 seconds). After is done, click **Save** to keep the settings.

Preset Settings

Preset Number

DwellTime Sec.


☐ Restore AutoPan Time Sec.

7. **Restore AutoPan Time:** set a time period for restoring auto path function after the PTZ camera has been moved. Mark the check box and set the time period in second.
8. Click **Apply** to save the settings.
9. After completing the PTZ setting, user can operate the PTZ function through PTZ control panel in preview mode (see also [Chapter 2.8.4](#)).


2.8.4 Familiarizing Functions on PTZ Control Panel

User can control PTZ camera through PTZ control panel in preview mode. Enable and set up the PTZ camera; refer to [Setting PTZ Function](#).

1. In preview mode, click  (PTZ) icon to call out PTZ control Panel.

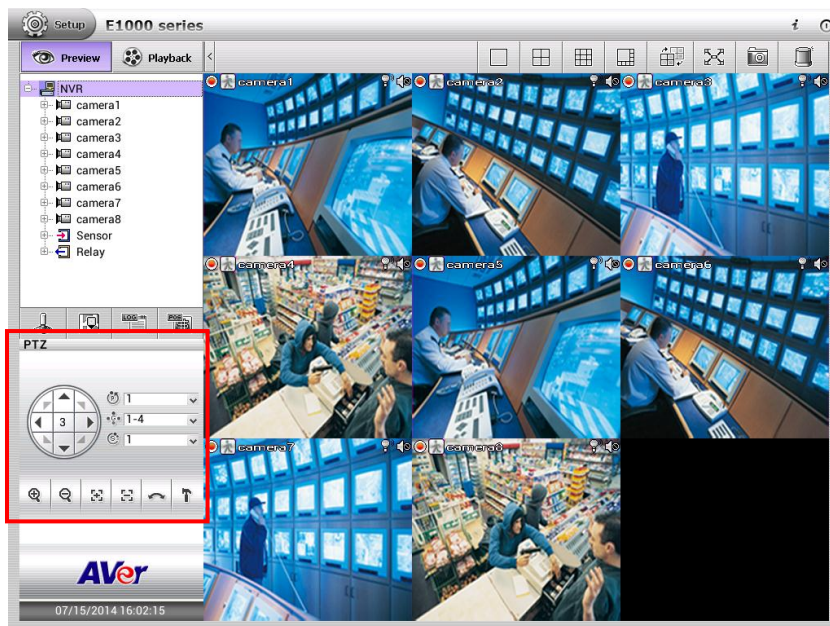

2. The functions' description of PTZ control panel is as following.

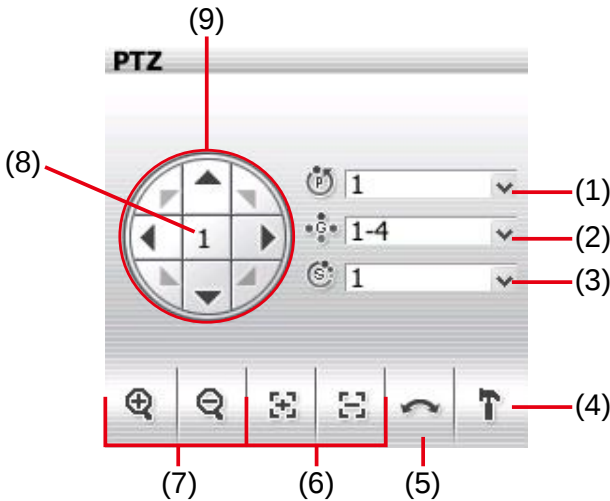

Name	Function
(1) Camera preset position number	Move the PTZ camera to the preset point.
(2) Group AutoPan	Select to automatically operate PTZ camera in group.
(3) Direction buttons' moving speed	Adjust the moving speed of the PTZ camera lens. This speed will apply to the (9) Direction buttons' moving speed only.
(4) Setup	Switch to PTZ setup page.
(5) AutoPan	Operate the PTZ cameras automatically based on the selected camera group preset position number. User needs to select the (2) Group AutoPan , then, click (5) Auto Pan button.
(6) Zoom +/-	Zoom in and out the image.
(7) Focus +/-	Adjust the focus manually to produce clear image.
(8) Camera ID	Display the PTZ camera number that is being operated.
(9) Direction buttons	Move and position the focal point of the PTZ camera. The support of direction button depends on the PTZ camera.

2.9 Record Management




- The recording schedule is always record in default.
- If the storage path is not set, the NVR/DVR system couldn't record.

1. Click **Setup** tab.
2. Then, select **Record Management**.
3. Mark **Enable Optimized Recording** to enable dual stream recording.
4. Select the day for **Days to keep high-quality recorded data** to recycle the high quality record data.



Must enable Active Optimized recording before selecting high-quality record data retain days.


5. Click the **Setting** button of camera that user wants to setup the recording schedule.

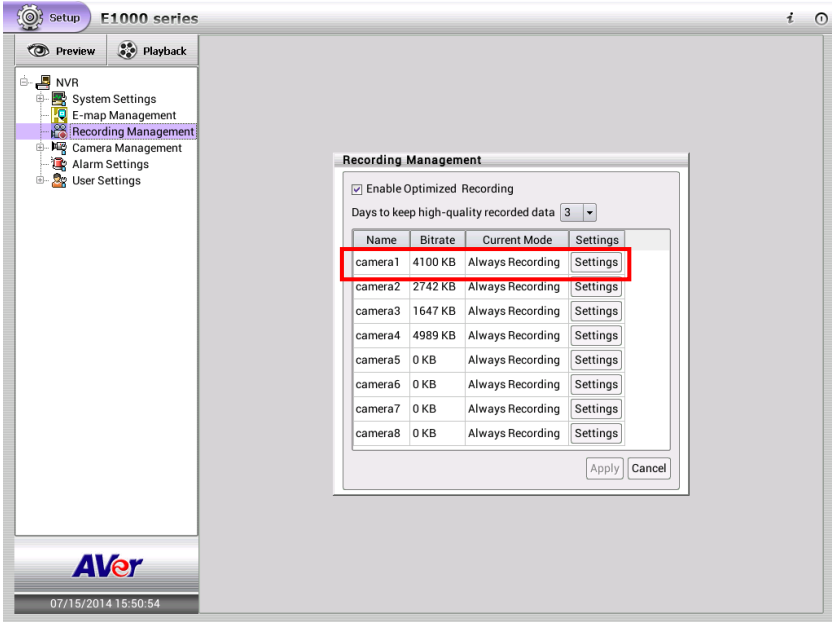

6. In Record Schedule window, select the **Recording Mode** first. The recording modes are listed in following:
 - **Always Recording**
Record the video from the selected camera and save it to the designated storage path.

- **Event Recording**

Start recording the video from the selected camera only when the system detects movement. Once a motion is detected, the system automatically saves the previous frames and stop based on the **Pre-Buffer time (0~10 seconds)** and **Post-buffer Time (0~999 seconds)** settings. Click **Detail** button to view event recording items. Now, only support motion recording on Event recording mode.

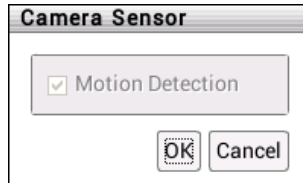


- **Smart Recording**

Automatically switch to recorded once a motion is detected and if there is no motion, it records at key frame only.

- **No Recording**

The system won't do any recording.

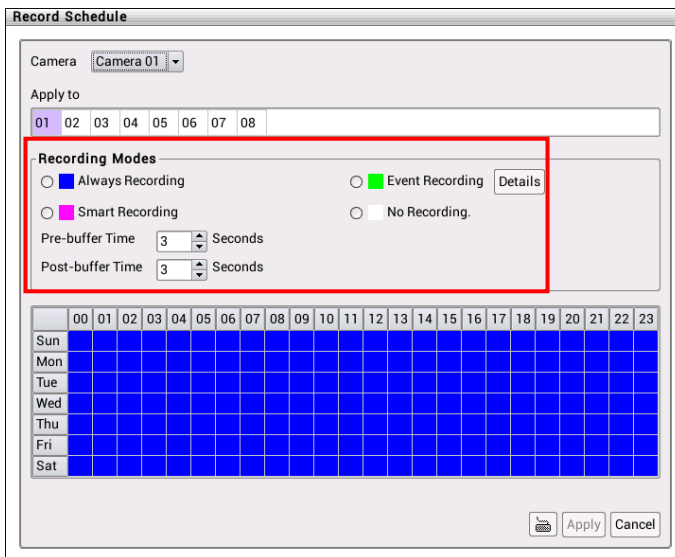A dialog box titled "Record Schedule" with a light gray background. It contains a "Camera" dropdown menu set to "Camera 01". Below it is an "Apply to" section with a row of checkboxes from 01 to 08, where 01 is selected. A red rectangle highlights the "Recording Modes" section, which includes three radio buttons: "Always Recording" (selected), "Event Recording", and "Smart Recording". To the right of these are two more radio buttons: "Event Recording" (with a green square icon) and "No Recording". A "Details" button is next to the second "Event Recording" option. Below the radio buttons are two time input fields: "Pre-buffer Time" and "Post-buffer Time", both set to "3" seconds. At the bottom is a calendar grid showing days of the week (Sun to Sat) and hours (00 to 23). The grid is mostly blue, indicating recording is scheduled. At the bottom right are "Apply" and "Cancel" buttons.

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue
Mon	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue
Tue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue
Wed	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue
Thu	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue
Fri	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue
Sat	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue	Blue

7. After selecting the recording mode, select date and time on date time table.

Record Schedule

Camera: Camera 01

Apply to: 01 02 03 04 05 06 07 08

Recording Modes

Recording: ☒ Event Recording Details

Recording: ☐ No Recording.

Pre-buffer Time: 3 Seconds

Post-buffer Time: 3 Seconds

Calendar

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

 Apply Cancel

To select or un-select all blocks, click the area in red circle.

8. If user wants to apply this record schedule to other or all camera channels, use **Apply to** function to apply to other camera channel.


Apply to: 01 02 03 04 05 06 07 08

9. Click **Apply** to save the recording schedule.
10. To stop recording, select **No Recording** and click on the date and week to disable the recording; then, click **Apply** to save the changes.


2.10 Alarm Schedule

Setting up the schedule for alarm action that user has setup in Alarm setting (see also [Chapter 2.12](#)). According to the alarm schedule, the alarm actions will be active and alarm will be issued when action has matched the conditions.

1. Click **Setup** tab > > **Alarm** > **Alarm Schedule** button.

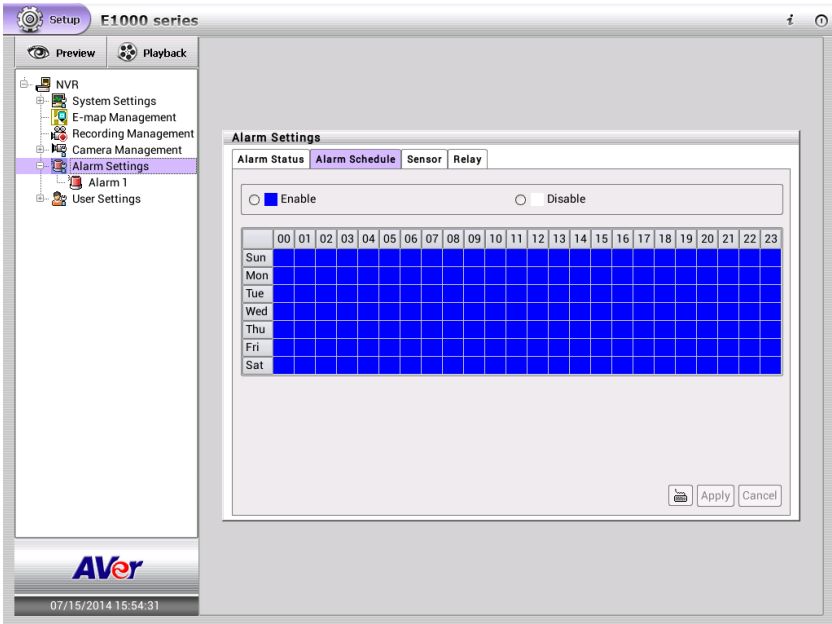

2. Select the **Enable** and click on the date and time to setup the schedule.

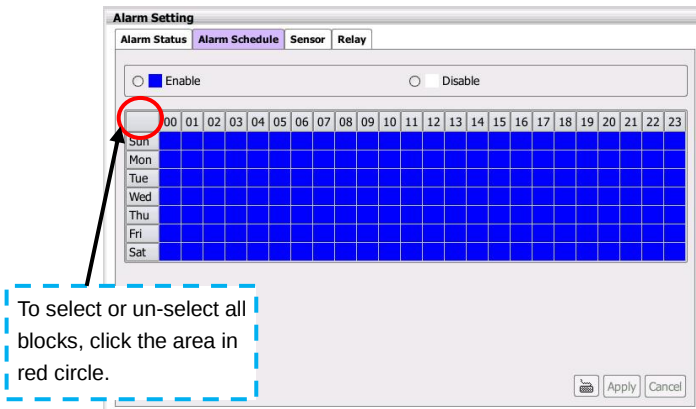


3. Next, click **Apply** to save the setting.
4. To disable the alarm schedule, select "**Disable**" and click on the date and time table and click **Apply** to save the changes.

2.11 Backup Setting

Backup the recorded files to external USB pen drive. In Backup setting, user can select different channels or time period to backup at the same time. The backup files can be playback on PC by Qplayer application that is included when backup. Playing backup file on PC refer to [Chapter 5](#).

1. Click **Playback** tab to switch to playback mode.
2. Click **Backup** () and the Backup dialog box is appeared.
3. In Backup dialog box, select the following settings:
 - **Channel:** Select the channels that user wants to backup. Mark **All** to select all channels.
 - **Select date and time:** Select the date and time period that user wants to backup.
 - **Include Player when backup:** Including the player for playback the backup file on PC.
 - **Backup File Size:** Display the size of the backup file. If there is more than one backup file, there will be total size of all backup files. Click **Calculate Size** button to calculate.
 - **Backup Path:** The path for saving backup file. The NVR/DVR system will detect and list it. If there has more than one backup path is available; user can select it from drop-down list. If storage device is not found, click **Rescan Device** button to detect again.
 - **Folder Name:** Give a name of back folder that will be stored backup files in USB pen drive. To enter folder name, click virtual keyboard and enter the name.
4. After selecting the backup file conditions, click **OK** to start backup.

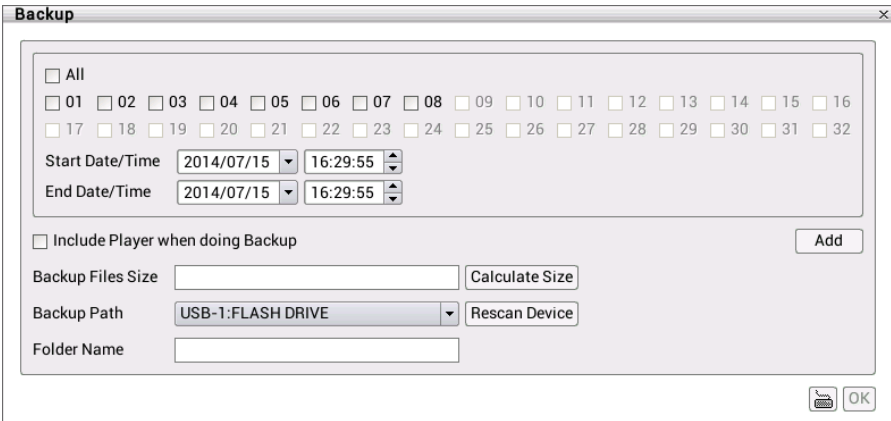

Backup

☐ All

☐ 01 ☐ 02 ☐ 03 ☐ 04 ☐ 05 ☐ 06 ☐ 07 ☐ 08 ☐ 09 ☐ 10 ☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16

☐ 17 ☐ 18 ☐ 19 ☐ 20 ☐ 21 ☐ 22 ☐ 23 ☐ 24 ☐ 25 ☐ 26 ☐ 27 ☐ 28 ☐ 29 ☐ 30 ☐ 31 ☐ 32

Start Date/Time 2014/07/15 16:29:55

End Date/Time 2014/07/15 16:29:55

☐ Include Player when doing Backup Add

Backup Files Size Calculate Size

Backup Path USB-1:FLASH DRIVE Rescan Device

Folder Name

 OK

- User can backup multiple recorded file (different channels and different time period) at the same time. Repeat the above steps to create the backup file and click **Add** button. The different backup files are distinguished by **Folder Name** that user has given. The multiple backup files limit is **3** files at the same time.

☐ All
 ☒ 01
 ☐ 02
 ☐ 03
 ☐ 04
 ☐ 05
 ☐ 06
 ☐ 07
 ☐ 08
 ☐ 09
 ☐ 10
 ☐ 11
 ☐ 12
 ☐ 13
 ☐ 14
 ☐ 15
 ☐ 16
 ☐ 17
 ☐ 18
 ☐ 19
 ☐ 20
 ☐ 21
 ☐ 22
 ☐ 23
 ☐ 24
 ☐ 25
 ☐ 26
 ☐ 27
 ☐ 28
 ☐ 29
 ☐ 30
 ☐ 31
 ☐ 32

Start Date/Time

End Date/Time

☐ All
 ☐ 01
 ☒ 02
 ☐ 03
 ☐ 04
 ☐ 05
 ☐ 06
 ☐ 07
 ☐ 08
 ☐ 09
 ☐ 10
 ☐ 11
 ☐ 12
 ☐ 13
 ☐ 14
 ☐ 15
 ☐ 16
 ☐ 17
 ☐ 18
 ☐ 19
 ☐ 20
 ☐ 21
 ☐ 22
 ☐ 23
 ☐ 24
 ☐ 25
 ☐ 26
 ☐ 27
 ☐ 28
 ☐ 29
 ☐ 30
 ☐ 31
 ☐ 32

Start Date/Time

End Date/Time

☐ All
 ☐ 01
 ☐ 02
 ☒ 03
 ☐ 04
 ☐ 05
 ☐ 06
 ☐ 07
 ☐ 08
 ☐ 09
 ☐ 10
 ☐ 11
 ☐ 12
 ☐ 13
 ☐ 14
 ☐ 15
 ☐ 16
 ☐ 17
 ☐ 18
 ☐ 19
 ☐ 20
 ☐ 21
 ☐ 22
 ☐ 23
 ☐ 24
 ☐ 25
 ☐ 26
 ☐ 27
 ☐ 28
 ☐ 29
 ☐ 30
 ☐ 31
 ☐ 32

Start Date/Time

End Date/Time

☒ Include Player when doing Backup

Backup Files Size

Backup Path

Folder Name

- When all backup files have created, click **OK** button to start archiving the selected file to USB pen drive.

2.12 Alarm Setting


To setup an alarm setting, user needs to complete following steps:

1. Setting up the **alarm conditions** (see also [Chapter 2.12.1](#)).
2. Setting up the **alarm actions** (see also [Chapter 2.12.2](#)).
3. Setting up the **alarm schedule** (see also [Chapter 2.10](#)).

In the following chapter, it describes how to setup the alarm condition and action.

2.12.1 Setup the Alarm Condition

1. Click **Setup** tab > **Alarm Setting**.
2. User should see the Alarm Setting dialog box is displayed.

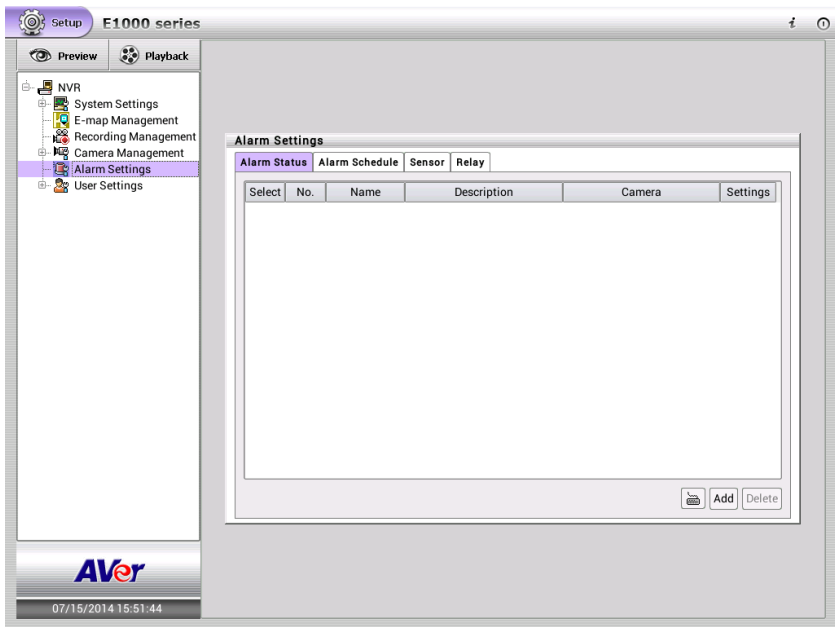

3. Next, click **Add** to create a new alarm condition setting.

4. In **No.** column displays the alarm setting number. The number of alarm is assigned by NVR/DVR system in default.
5. Enter alarm name and description for this alarm setting in **Name** and **Description** column.

Alarm 1

Conditions | **Actions**

No.	Name	Description
0	alarm 1	

Trigger Type ☒ Trigger if Any ☐ Trigger if All

Camera

Motion

01 02 03 04 05 06 07 08 Settings

Video Loss

01 02 03 04 05 06 07 08 Settings

IVA

01 02 03 04 05 06 07 08 Settings

Sensor

High

01 02 03 04

Low

01 02 03 04

IP Camera Sensor

Continuous Trigger Duration 0 Seconds

System

☐ Restart

☐ Abnormal Restart

☐ Hard disk failed.

☐ Fan failed.

Apply Cancel

6. Next, select “**Trigger if any**” to activate alarm if system falls to one of the conditions or “**Trigger if all**” to activate alarm if system falls to all conditions.

Trigger Type ☒ Trigger if Any ☐ Trigger if All

7. In **Camera** section, select and click on the camera number in **Motion** and **Video Loss** to set the condition for the system to alarm.

The screenshot shows a 'Camera' settings window with three sections: 'Motion', 'Video Loss', and 'IVA'. Each section contains a row of buttons labeled 01 through 08, followed by a 'Settings' button. The 'Motion' section is currently selected.

- **Motion:** select and click on the camera number (01 to 08) to set the condition for the system to alarm. Click the **Setting** button to setup the system to send out the alarm when motion is detected and last the time that user has entered in **Continuous trigger duration**. The time range is 0~ 300 seconds.

The 'Motion Detection Settings' dialog box shows a 'Continuous Trigger Duration' of 0 seconds. It includes a speaker icon, an 'OK' button, and a 'Cancel' button.

- **Video Loss:** click the camera number (01 to 08) to set the alarm condition when video is lost. Click the **Setting** button to setup the system to send out the alarm when video is lost and status last the time that user has entered in **Continuous trigger duration**. The time range is 0~ 300 seconds.

The 'Video Loss Settings' dialog box shows a 'Continuous Trigger Duration' of 0 seconds. It includes a speaker icon, an 'OK' button, and a 'Cancel' button.

- **IVA:** click the camera number (01 to 08) to set the alarm condition when IVA functions are triggered. Click the **Setting** button to setup the system to send out the alarm when IVA functions have triggered and status last the time that user has entered in **Continuous trigger duration**. The time range is 0~ 300 seconds.

The 'IVA Settings' dialog box shows a 'Continuous Trigger Duration' of 0 seconds. It includes a speaker icon, an 'OK' button, and a 'Cancel' button.

8. In **Sensor** section, select and click on the sensor number to set the condition for the system to alarm. If the sensor normal status is high, set the sensor condition to low.

Alarm 1

Conditions **Actions**

No. Name Description

 alarm 1

Trigger Type ☒ Trigger if Any ☐ Trigger if All

Camera

Motion

01 02 03 04 05 06 07 08

Video Loss

01 02 03 04 05 06 07 08

IVA

01 02 03 04 05 06 07 08

Sensor

High

01 02 03 04

Low

01 02 03 04

IP Camera Sensor

Continuous Trigger Duration 0 Seconds

System

☐ Restart

☐ Abnormal Restart

☐ Hard disk failed.

☐ Fan failed.

- **IP Camera Sensor:** To adjust sensor high/low that is connected on the IP camera.

IP Camera Sensor

Camera List

Camera: 1 (AVer - SD1306 IP: 10.100.91.60)

Camera: 2 (AVer - FB3027 IP: 10.100.91.50)

Camera: 3 (AVer - FX3000-R IP: 10.100.91.11)

Camera: 4 (AVer - FB3027 IP: 10.100.91.41)

Conditions

No.	Name	High	Low
1		☐	☐
2		☐	☐

- **Continue trigger duration:** Set a time period that when sensor has been trigger and stay in the same status for that period, then the alarm will be sent out.

9. In System section, mark the check box to set the conditions that are caused by system.

The screenshot shows the 'Alarm 1' configuration window with the 'Conditions' tab selected. The window is divided into several sections: 'Camera' (Motion, Video Loss, IVA) and 'Sensor' (High, Low, IP Camera Sensor). The 'System' section is highlighted with a red box and contains the following options:

- ☐ Restart
- ☐ Abnormal Restart
- ☐ Hard disk failed.
- ☐ Fan failed.

At the bottom of the window, there are buttons for 'Apply' and 'Cancel'.

- **Reboot:** when the NVR/DVR system reboot without abnormal condition, the system will send out the alarm message.
 - **Abnormal Reboot:** when the NVR/DVR system reboot in irregular condition, the system will send out the alarm message.
 - **Hard Disk failed:** when the hard disk doesn't work normally, the system will send out the alarm message.
10. After setting all alarm conditions, click **Apply** to save the settings.
11. Next, user needs to set the alarm action when alarm has triggered. Please refer to [Chapter 2.12.2](#).

12. To modify the alarm condition setting, click **Setting** button of Alarm # that user has created. Remember to click **Apply** to save the changes after modification.

Alarm Settings

Alarm Status
Alarm Schedule
Sensor
Relay

Select	No.	Name	Description	Camera	Settings
☐	1	alarm 1			Settings

Add
Delete

13. To delete the alarm #, select the alarm # that user wants to delete and click **Delete** button.

Alarm Settings

Alarm Status	Alarm Schedule	Sensor	Relay		
Select	No.	Name	Description	Camera	Settings
☒	1	alarm 1			Settings

2.12.2 Setup the Alarm Action

Setup the alarm action for system to perform when the alarm condition has been triggered.

1. Click **Setup** tab > **Alarm Setting**.
2. Then, click **Setting** button of Alarm # that user has created in Alarm Information dialog box.

Also, user can select the **Alarm#** from the list under Alarm Setting.

The 'Alarm Settings' dialog box has tabs for 'Alarm Status', 'Alarm Schedule', 'Sensor', and 'Relay'. The 'Alarm Status' tab is active, displaying a table with the following data:

Select	No.	Name	Description	Camera	Settings
☐	1	alarm 1			Settings

At the bottom right of the dialog are buttons for 'Add' and 'Delete'.

3. In Alarm Setting page, select the **Action** tab to switch to alarm action page.

The 'Alarm 1' configuration page has two tabs: 'Conditions' and 'Actions'. The 'Actions' tab is selected.

Conditions:

- No.: 1, Name: alarm 1, Description: [empty]
- Trigger Type: ☒ Trigger if Any, ☐ Trigger if All

Alarm Reset:

- Sensor:**
 - High: 01 02 03 04
 - Low: 01 02 03 04
 - IP Camera Sensor: [checked]
- ☐ Alarm Reset Time: 0 Seconds

Actions:

- ☒ Launch E-Map [Details]
- ☐ Spot Monitor [Details]
- ☒ Enlarge Camera View [Details]
- ☒ Relay Output [Details]
- ☒ IP Camera Relay [Details]
- ☒ Play Warning Sound [Details]
- ☒ Send E-mail [Details]
- ☒ Upload File [Details]
- ☒ PTZ Preset Point [Details]

Buttons at the bottom: [Printer icon], Apply, Cancel.

- The **No.**, **Name**, **Description**, and **Priority** column display the current alarm's information. The **Trigger Type** displays the current alarm's trigger condition.
- In **Alarm Reset** section, click the camera number to set the reset condition of alarm. Once alarm is reset, all alarm action will stop at the moment. If the sensor normal status is high, set the alarm reset condition to low.

- **IP Camera Sensor:** To adjust sensor high/low that is connected on the IP camera.

- **Alarm Reset Time:** Set a time for the alarm auto reset. When an alarm happen such as motion detected and video loss, the alarm will reset at the alarm reset time.


6. In **Action** section, user may now set the alarm action for the system to perform when the alarm condition is activated.

- **Launch E-Map:** Display mini E-map on the screen.

- **Enlarge Camera View**

Switch to only display video in Preview mode from where the alarm is activated.

- Select the camera from drop down list to specify which camera video to be enlarged on screen when the alarm is triggered.
- Retrieve time:** set the waiting duration before system switching back to original Preview mode. If the retrieve time is un-set, the alarm video will keep enlarging until user switch back to Preview mode manually. The retrieve time range is 0~ 300 seconds.

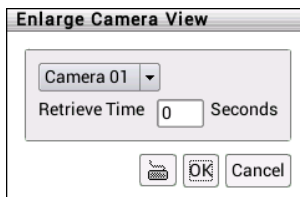


The 'Enlarge Camera View' dialog box features a title bar with the text 'Enlarge Camera View'. Inside, there is a dropdown menu currently showing 'Camera 01'. Below the dropdown is a text input field labeled 'Retrieve Time' containing the value '0', followed by the word 'Seconds'. At the bottom of the dialog, there are three buttons: a small icon button, an 'OK' button, and a 'Cancel' button.

- **Relay Output**

Set to enable/disable the relay operation when the alarm is activated and to extend additional time in second before it stops the relay operation.

- Beside the Relay Output check box, click **Detail**.
- In the Relay Output dialog, select from the available relay list and in the **Status** column, set to **on/off** the relay operation when the alarm is activated.
- In the Retrieve time check box, you may enable/disable to extend the relay operation time and set the duration in second (0 ~ 300 seconds).
- Click **OK** to exit and accept the setting and **Cancel** to exit without saving the setting.

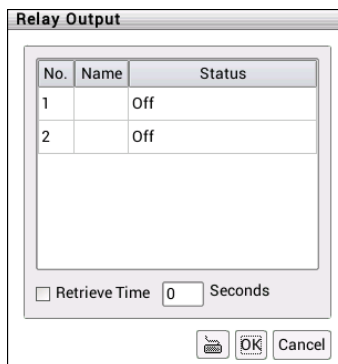


The 'Relay Output' dialog box has a title bar labeled 'Relay Output'. It contains a table with three columns: 'No.', 'Name', and 'Status'. The table has two rows of data, both with 'Off' in the 'Status' column. Below the table is a checkbox labeled 'Retrieve Time' which is currently unchecked, followed by a text input field with '0' and the word 'Seconds'. At the bottom, there are three buttons: a small icon button, an 'OK' button, and a 'Cancel' button.

No.	Name	Status
1		Off
2		Off

- **IP Camera Relay**

Set to enable/disable the relay operation when the alarm is activated.

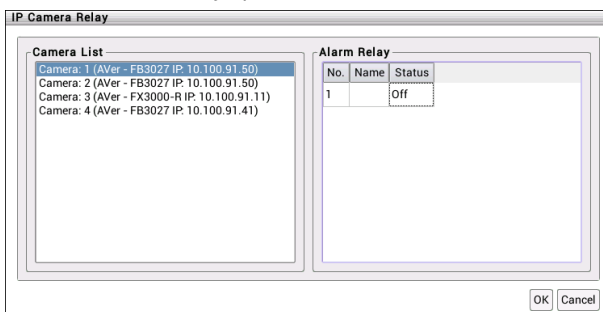

The **IP Camera Relay** dialog box contains two main sections. On the left, the **Camera List** shows four cameras: Camera 1 (AVer - FB3027 IP: 10.100.91.50), Camera 2 (AVer - FB3027 IP: 10.100.91.50), Camera 3 (AVer - FX3000-R IP: 10.100.91.11), and Camera 4 (AVer - FB3027 IP: 10.100.91.41). On the right, the **Alarm Relay** section features a table with columns 'No.', 'Name', and 'Status'. The first row shows '1' in the 'No.' column and 'Off' in the 'Status' column. At the bottom right are **OK** and **Cancel** buttons.

No.	Name	Status
1		Off

- **Play Warning Sound**

Play alarm sound.

- **Send E-mail**

Send an electronic text message. Beside the Send Email check box, click **Detail**.

In the E-mail Setting dialog box, click **OK** to exit and save the setting and **Cancel** to exit without saving the setting.



The **Send E-mail** dialog box is divided into several sections. The **Mail Server** section includes an **SMTP Server** field with a port dropdown set to 25, an **Authentication** checkbox, and **User Name** and **Password** fields. The **Mail** section contains fields for **From**, **To**, **CC**, **Subject**, and a large **Message** text area. Below this is a **Notice Interval** set to 1 minute and a **Test Account** button. The **Snapshot** section has an **Enable** checkbox, a **Select Camera** dropdown (set to Camera 01), and a **Video Size** dropdown (set to 352X240). At the bottom are **OK** and **Cancel** buttons.

■ **Mail Server**

Enter the **SMTP Server** and **port**. If your e-mail system requires user identification, enable **Authentication** check box and enter **ID** and **Password**.

■ Mail

Fill the mailing information. Click **Test Account** button can exam the mail is workable or not.

- ✓ **From:** Enter the sender e-mail address.
- ✓ **To and CC:** Enter the recipient email address and separate it with comma or a semicolon (;).
- ✓ **Subject:** Enter the message title.
- ✓ **Message:** Type the message.
- ✓ **Notice Interval:** Set a time gap for mail re-sending when mail has failed to send.

■ Snapshot

When send out the email, the NVR/DVR system will snapshot image of the selected camera channel.

- ✓ **Select Camera:** Select the channel that will be snapshot when alarm email is sending out.
- ✓ **Video Size:** Select the size of vide that will be taken when snapshot. Auto means default size that chosen by NVR/DVR system.

- Upload File


Upload file to remote computer thru FTP (File Transfer Protocol), YouTube, or Dropbox.



YouTube and Dropbox only can be set one of them.

The 'Video Backup' dialog box is shown with a title bar. It contains three main sections: 'Backup Location' with radio buttons for FTP (selected), YouTube, and Dropbox; 'Upload Video Clip' with a 'Select Camera' dropdown set to 'Camera 01', and two time settings: 'before Alarm' and 'After Alarm', both set to '1' seconds; and 'FTP Settings' with input fields for IP, Port (set to 21), User Name, and Password. At the bottom right are icons for a keyboard, an 'OK' button, and a 'Cancel' button.

- ✓ **Backup Location:** YouTube and Dropbox cannot be enabled at the same time.
- **FTP:** Upload the alarm video clip to the FTP site that user has setup.
 - **FTP Setting**
 - a. **IP:** Enter FTP server's IP address.
 - b. **Port:** Enter the port number of FTP connection.
 - c. **ID& Password:** Enter the ID and Password that use to login FTP server.
- **YouTube:** Upload the alarm video clip to the Youtube space that user has setup.
 - a. Get a Google account. Go to Google website and follow the instruction to get a Google user account.
 - b. Copy the below URL to your Google browser.
<http://www.aver.com/Youtube>
 - c. Using your Google account to login and click "**Allow**" to enable Google WAN storage function.

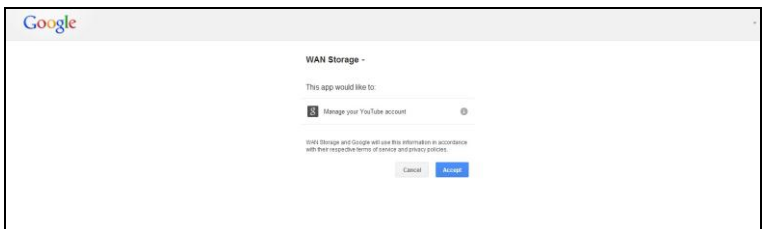

- d. Then, user will see the authorization code is displayed. Keep this web page open and open a new web page.
- e. Enter the below URL to enter authorization code. Please make sure your PC can connect to NVR/DVR server through internet.
<http://NVR/DVR IP/oauth2.html> ex: [http:// 10.1.1.3/oauth2.html](http://10.1.1.3/oauth2.html).
- f. Next, NVR/DVR server will require login authentication. Enter the login username and password of NVR/DVR server.
- g. Then, authorization code input page is displayed. Copy the authorization code into the **Authorization Code** column and click **Apply**.

Please fill the authorization code below

Authorization Code:

- h. Next, go to alarm action setting to setup FTP transmission via FTP(see also [Chapter 2.12.2](#)).

- **Dropbox:** Upload the alarm video clip to the Dropbox space that user has setup.
 - a. Get a Dropbox account. Go to Dropbox website and follow the instruction to get a Dropbox user account.
 - b. Copy the below URL to your browser.
<http://www.aver.com/Dropbox>
 - c. Using your Dropbox account to login and click “**Allow**” to enable Dropbox WAN storage function.
 - d. Then, user will see the authorization code is displayed. Keep this web page open and open a new web page.
 - e. Enter the below URL to enter authorization code. Please make sure your PC can connect to NVR/DVR server through internet.
<http://NVR/DVR IP/oauth2.html> ex: [http:// 10.1.1.3/oauth2.html](http://10.1.1.3/oauth2.html).
 - f. Next, NVR/DVR server will require login authentication. Enter the login username and password of NVR/DVR server.
 - g. Then, authorization code input page is displayed. Copy the authorization code into the **Authorization Code** column and click **Apply**.


Please fill the authorization code below

Authorization Code:

- h. Next, go to alarm action setting to setup FTP transmission via FTP (see also [Chapter 2.12.2](#)).
- ✓ **Upload Video Clip**
 - **Select Camera:** Select the camera that the images will be captured and send when the any alarm is triggered.
 - **Before alarm (sec.)/After Alarm:** To send the recorded image before and after alarm occurs, enter the time that before alarm occurs in **Before alarm (sec.)** and **After alarm**.

- **PTZ preset point**


Position the PTZ camera based on the preset point setting. Beside the PTZ preset point check box, click **Detail**. In the Trigger PTZ Preset Setting dialog box, select the PTZ camera number then select the **Enable** check box. Select the position of the PTZ camera when the alarm is activated and ended. For the PTZ camera end point, user can also select on preset position or **Auto Pan** between preset position groups.

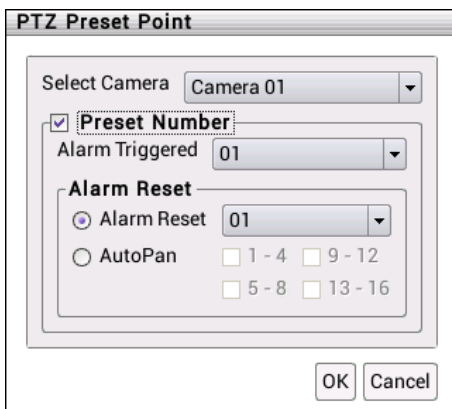

The dialog box titled "PTZ Preset Point" contains the following elements:

- A "Select Camera" dropdown menu with "Camera 01" selected.
- A checked checkbox labeled "Preset Number".
- An "Alarm Triggered" dropdown menu with "01" selected.
- An "Alarm Reset" section with:
 - A radio button selected for "Alarm Reset" with a dropdown menu showing "01".
 - An "AutoPan" radio button.
 - Four checkboxes for preset ranges: "1 - 4", "9 - 12", "5 - 8", and "13 - 16".
- "OK" and "Cancel" buttons at the bottom right.

7. After setup all alarm actions, click **Apply** to save the settings.
8. To modify the alarm condition setting, click **Setting** button of Alarm # that user has created. Remember to click **Apply** to save the changes after modification.

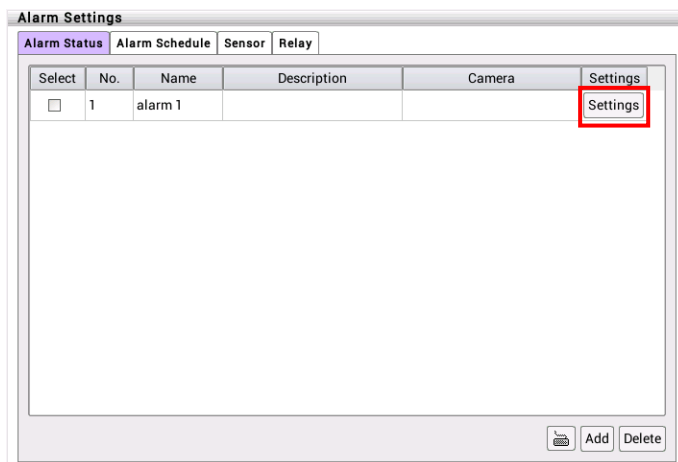

The "Alarm Settings" window has four tabs: "Alarm Status", "Alarm Schedule", "Sensor", and "Relay". The "Alarm Status" tab is active, showing a table with the following data:

Select	No.	Name	Description	Camera	Settings
☐	1	alarm 1			Settings

The "Settings" button in the last column of the first row is highlighted with a red rectangle. At the bottom right of the window are buttons for "Add" and "Delete".

2.13 User Account Setting


Only administrator level authority can access User Setting. The maximum user accounts are 32.

2.13.1 Create the User Account

1. Click **Setup** tab.
2. Then, click **User Setting** and the User Information dialog box is displayed.



The Admin is default user and cannot be deleted.

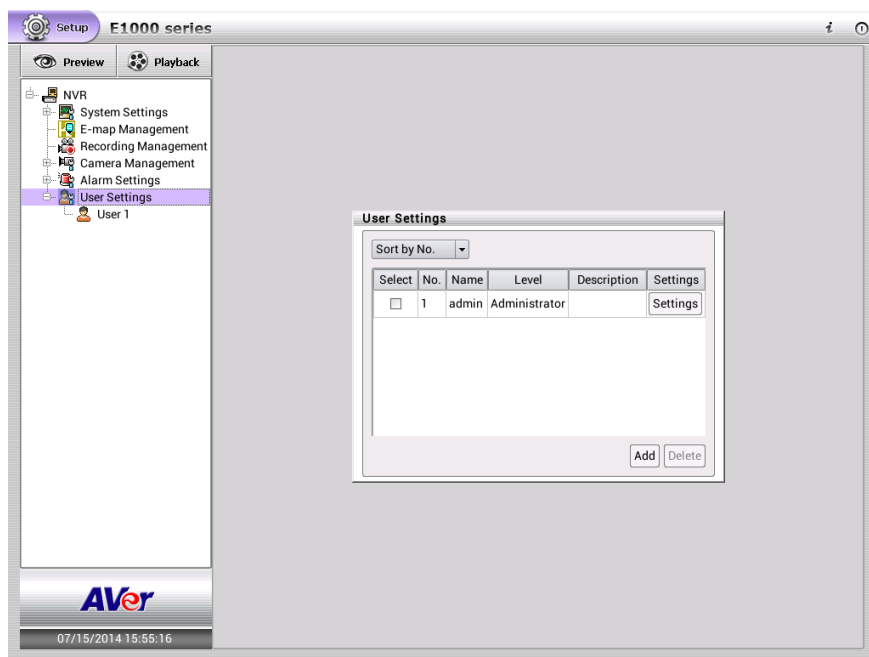

3. In User Information dialog, click **Add** to add a new user account.

4. In User Setting dialog, Select and fill in the following information.

User 2

Name

Description

Password

Confirm Password

Authorization Level

☒ User ☐ Administrator

Visible Camera

☒ All

☒ 1 ☒ 2 ☒ 3 ☒ 4 ☒ 5 ☒ 6 ☒ 7 ☒ 8

Duration

☒ Enable

Activation Date Expiry Date

Remote Access Time

☒ Infinite

Minutes

Control Right

☒ System

☒ Camera

☒ Alarm


☒ Playback

☒ E-map

☒ Power OFF


- **Name:** Enter the user name.
- **Description:** Enter the user description.
- **Password:** Enter the user password.
- **Confirm Password:** Enter the same user password for confirmation.
- **Authorization level:** Select the status of the user. Administrator has full authority of control rights.
- **Visible Camera:** Select the camera number that would allow the user to access or view. To select all the cameras, enable the **ALL** check box.
- **Remote Access Time:** Enable **Infinite** check box to access NVR/DVR without time limit. If you want to set time limit, un-mark and enter the number of minutes in **Minute** text box.
- **Control Right:** Enable the items that would allow the user to access.
- **Time Span:** Set the user account a specific time period that user only can use given account to login NVR/DVR program in that specific period. Mark **Enable** check box and select the **Activation Date** and **Expiry Date**.

5. Click **Apply** to save the account setting. The user account is list in User Setting list.

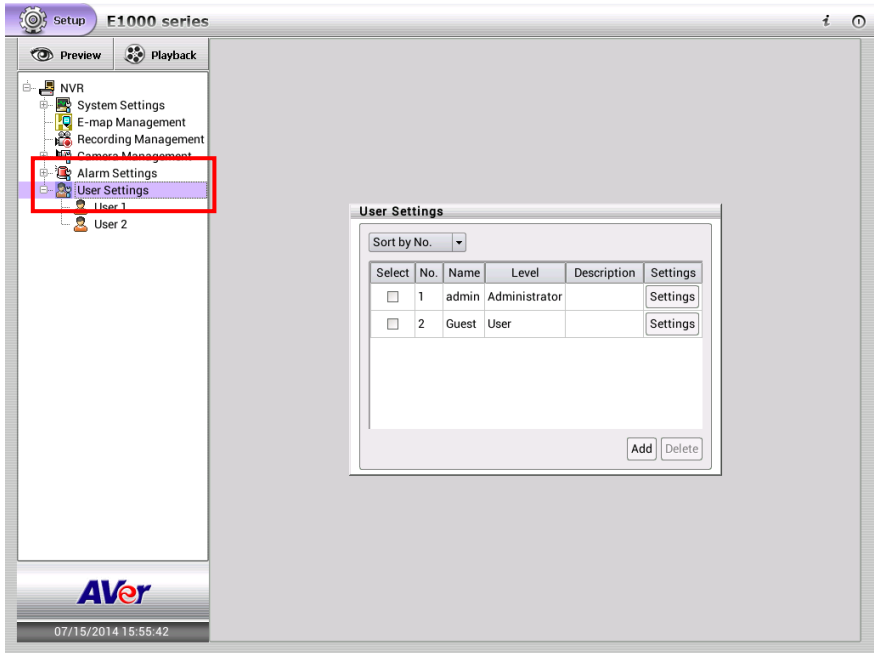

6. Adding another user account, repeat above steps.


7. Modifying the user account; click **Setting** of user account in User Information dialog.

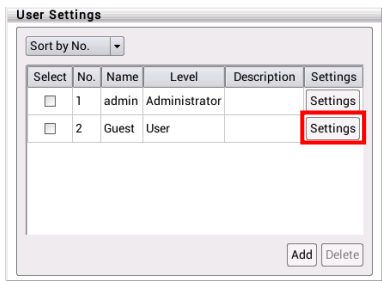

2.13.2 Delete the User Account

User can remove un-wanted or expired user account.

1. Click **Setup** tab in Preview mode.
2. Then, click **User Setting** in Advanced NVR/DVR Setting section and the User Information dialog is displayed.
3. Mark the user account in User Information dialog; then, click **Delete** button.

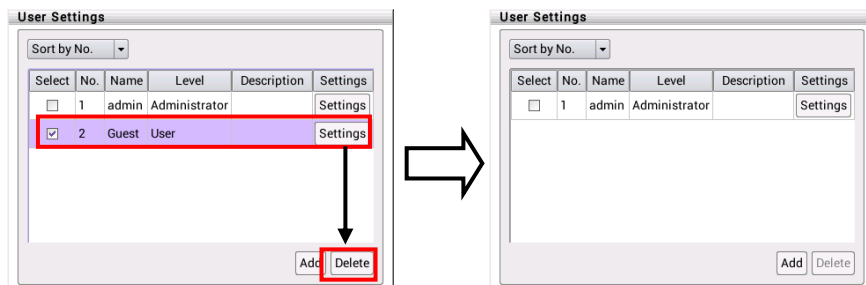


2.14 I/O Setting

Setup I/O device status.

2.14.1 Sensor Setting


1. Click **Setup** tab > **Alarm Setting** > **Sensor** tab.

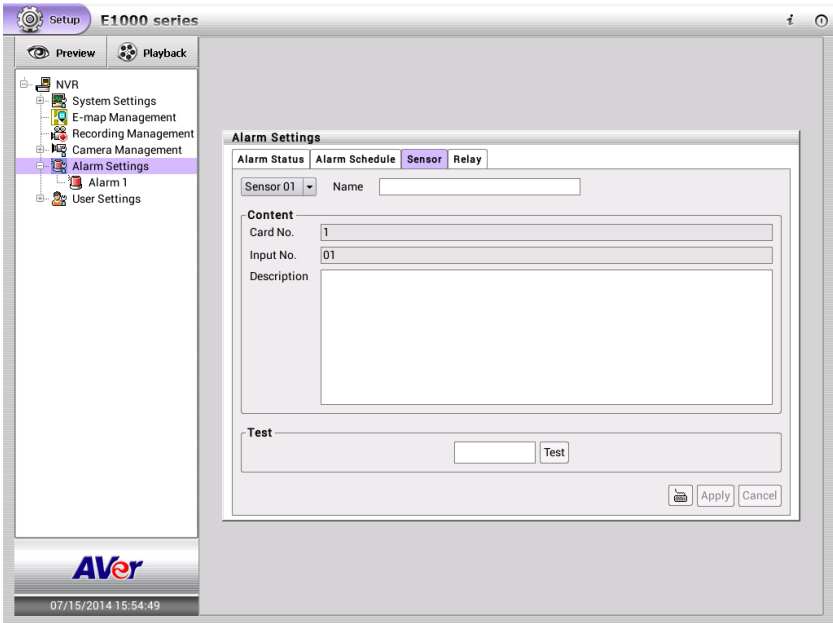

2. Click the drop-down list and select the **Sensor #**.
3. Enter sensor name in **Name** column.
4. The system automatically detects the card and input number. In the **Content** section, user can enter a short description of sensor in **Description** column.
5. In the test section, click **Test** to check the sensor status. **Red** is high and **Green** is low.
6. Click **Apply** to save the setting. To exit without saving the setting, click **Cancel** button.

2.14.2 Relay Setting

1. Click **Setup** tab > **Alarm Setting** > **Relay** tab.

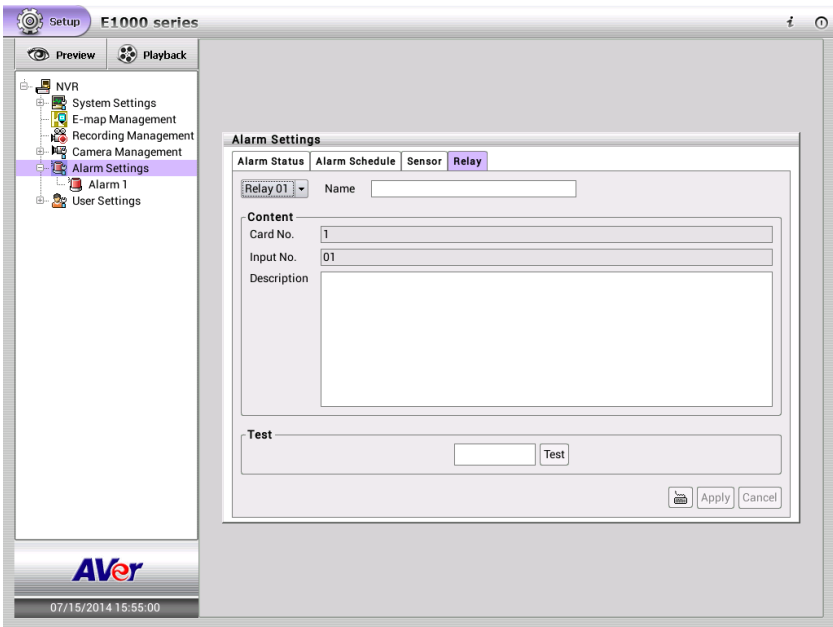


2. Click the drop-down list and select the **Relay #**.
3. Enter relay name in **Name** column.
4. The system automatically detects the card and input number. In the **Content** section, user can enter a short description of relay in **Description** column.
5. In the test section, click **Test** to trigger relay. **Red** is high and **Green** is low.
6. Click **Apply** to save the setting. To exit without saving the setting, click **Cancel** button.

2.15 Emap Setting


E-Map can hold up to 8 maps in *.jpg or *.bmp format. User may locate the camera, sensor and relay on the map.

2.15.1 Setup the Emap


1. Click **Emap Management**.
2. The Emap dialog box will appear on screen.

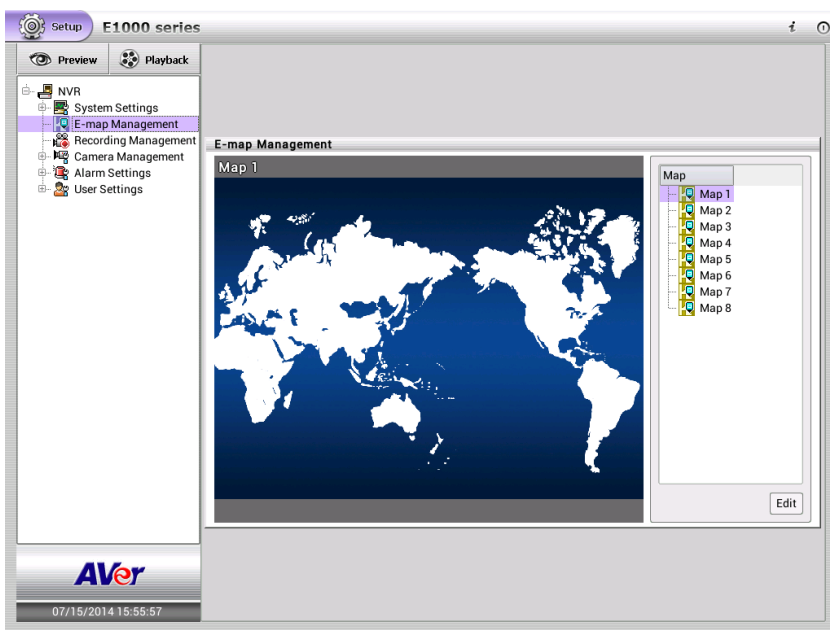


3. Click **Edit** button to switch to Emap setup mode.

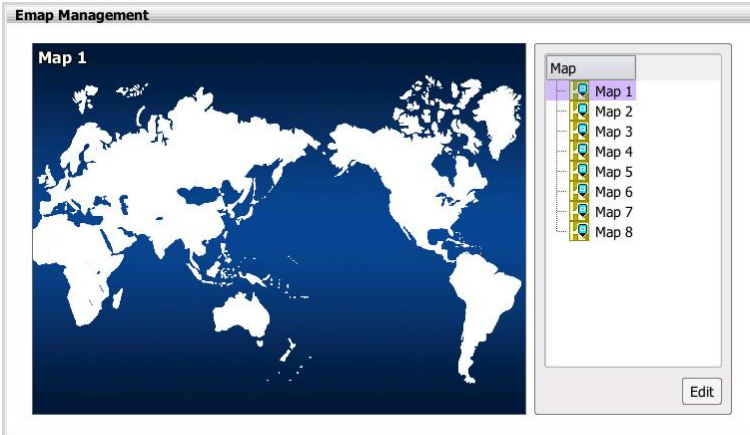

4. Then, click the Map number (1 to 8) that user want to setup.

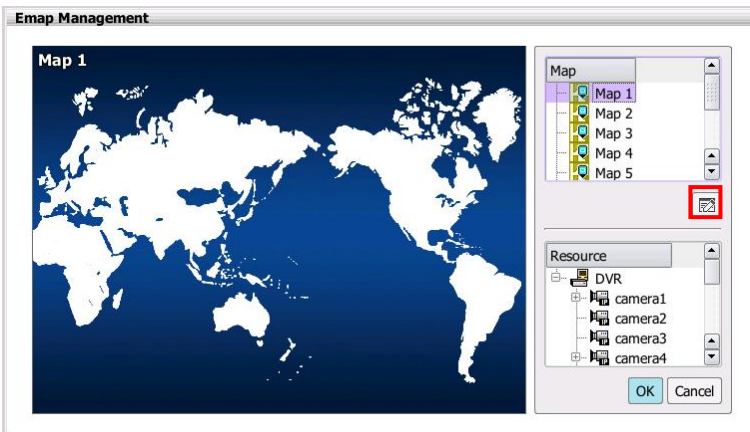


5. Next, click  icon to setup name of Emap and load a map figure. When the Emap Setting dialog box appears, click the open file icon () to locate and select the map. Enter a name for this Emap in **Name** column. Click **OK** to save the setting.

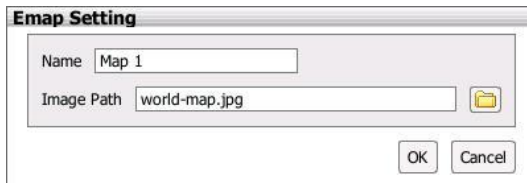

6. When the inserted map appears on the Emap screen, user may now drag the camera, sensor, and relay icons to its place on the map. Icons on the map can be relocated anywhere. If user is going to locate the icon on the map to other area, right-click on the icon on the Emap and click **remove** to put the icon back to the Resource list.



The available icons are look like  (Camera),  (Sensor),  (Relay) and un-available icons are look like  (Camera),  (Sensor),  (Relay).

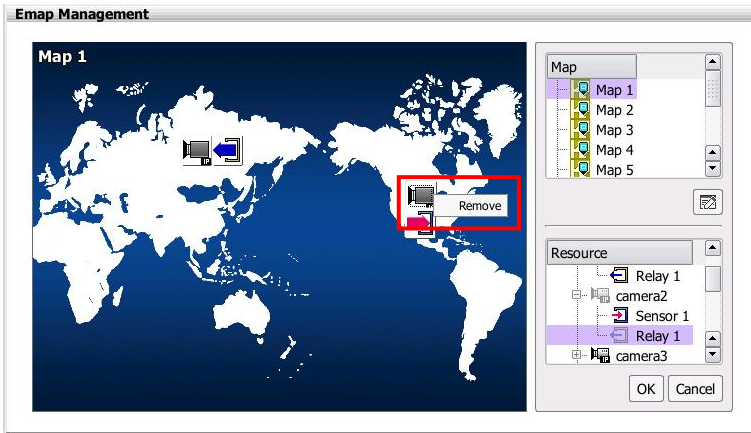


7. When you are done, click **OK** button to save the new setting.

2.16 iPOS Setting

Set from which camera screen to display the data from the POS equipment. Click **Setting**, to set the POS Console Setting.

[Note] Please using USB to RS232 converter (ex: MOXA) to connect with your POS device.

1. Click **Setup** tab. Click + to expand the System Setting list and select **Hardware Device**.
2. User should see the Hardware Device Setting dialog box is displayed.

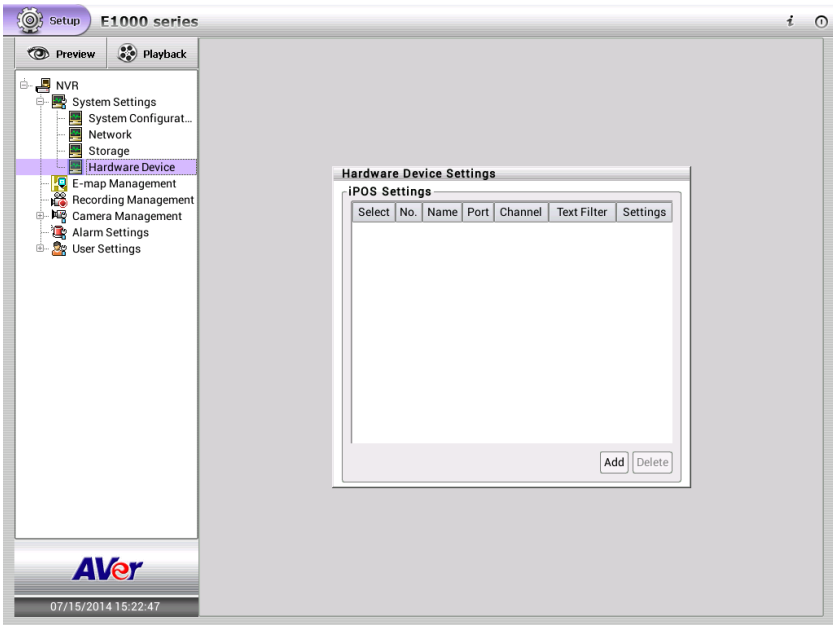

3. In the Hardware Device Setting dialog box, click **Add** to set a new POS setting.
4. In the POS Mapping dialog box, fill and select the following settings. Click **OK** to save the settings and **Cancel** to exit without saving the new setting.
 - **Name:** Enter a name to identify the POS.
 - **Protocol:** Select the protocol.
 - **Skip first:** Set the number of lines you want to be removed.
 - **Font Color:** Select the text color of the POS data.
 - **Port Settings:**
 - **Local:** Select the **COM port** which is connected and **Baud Rate**.
 - **Remote:** Use the TCP or UDP protocol for remote connection if POS system can broadcast to Internet. Enter the IP address of the remote station.
 - **Map to Camera:** Select to which camera number to display the transaction text.

- **Text Filter:** Enter the word you want to be removed.

iPOS Settings

POS

Name

POS1

Protocol

General

Skip first

0

Line(s)

Font Color

Port Settings

☒ Local

COM2

Baud Rate

9600

bps

☐ Remote

TCP

192.168.0.1

:

Map to Camera

MAX 4 Cameras

☐ 1

☐ 2

☐ 3

☐ 4

☐ 5

☐ 6

☐ 7

☐ 8

Text Filter

1.

2.

3.

4.

5.

6.

7.

8.

OK

Cancel

5. To setup another iPOS setting, repeat the above steps.
6. To modify the iPOS setting, click the **Setting** button of iPOS.

Hardware Device Setting


iPOS Setting

Select	No.	Name	Port	Channel	Text Filter	Setting
☐	1	POS1	COM2	ch 1, ch 2,		Setting

Add

Delete

7. To delete the iPOS, mark the iPOS and click **Delete** button.

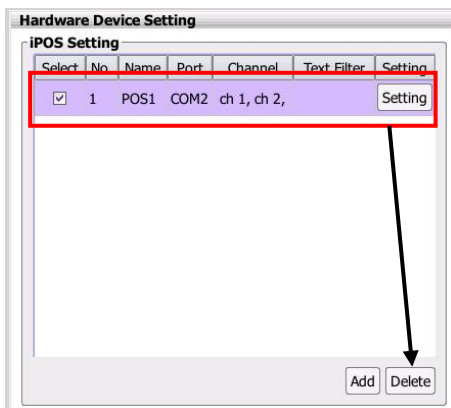

8. To view the iPOS event log, refer to [Chapter 2.17.3](#).

2.17 Log Viewer


Show the record of activities (alarm, event, iPOS) that take place in the system. User can view and search for specific log.

2.17.1 Using the Event Log Viewer

1. Click Event Log icon () in preview mode.
2. The Event Log Viewer dialog box is appeared and located at bottom of left side screen.



User can click  icon to expand the Event Log Viewer dialog box on the screen.

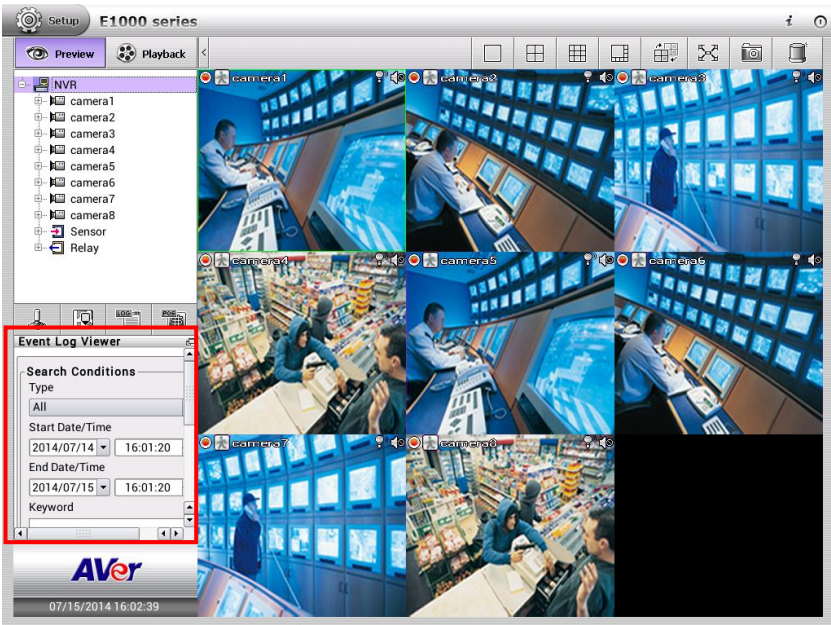

3. To filter the logs, select and click the select **Type -- System, Network, Operation, Event, or All**.

The screenshot shows the 'Event Log Viewer' window. The 'Search Conditions' section includes a 'Type' dropdown menu set to 'All', 'Start Date/Time' and 'End Date/Time' date pickers both set to '2014/07/14' and '16:01:20', and a 'Keyword' text box. A 'Search' button is located below these fields. The 'Search Result' section contains a table with the following headers: 'No. /', 'Camera', 'Type', 'Time', and 'Event'. The table body is currently empty. At the bottom right of the window are buttons for 'Print', 'Export', and 'More'.


4. Set the **Start Date/Time** and **End Date/Time** period to search the logs.
5. User also can search specific logs by specific **Keyword**.
6. Click **Search** button to start searching. The search results are displayed in the below column. Click **More** button to display more event logs.

This screenshot shows the same 'Event Log Viewer' window after a search. The 'Search Conditions' remain the same. The 'Search Result' table now contains seven rows of data:

No. /	Camera	Type	Time	Event
1		System	2014/07/15 15:22:09	Add Recording HDD (2014/0...
2		System	2014/07/15 15:22:29	Remove Recording HDD (20...
3		System	2014/07/15 15:22:34	Add Recording HDD (2014/0...
4	05	Event	2014/07/15 15:59:16	Video Loss
5	06	Event	2014/07/15 15:59:20	Video Loss
6	07	Event	2014/07/15 15:59:25	Video Loss
7	08	Event	2014/07/15 15:59:31	Video Loss

The 'Print', 'Export', and 'More' buttons are still visible at the bottom right.

7. Click on the event log can view the log video.
8. Click **Export** button can output the log result list to external USB pen drive in *.csv file format.

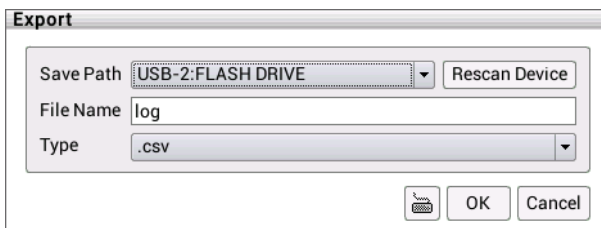

The image shows a software dialog box titled "Export". It contains three input fields: "Save Path" with a dropdown menu showing "USB-2:FLASH DRIVE", "File Name" with a text box containing "log", and "Type" with a dropdown menu showing ".csv". To the right of the "Save Path" dropdown is a button labeled "Rescan Device". At the bottom right of the dialog are three buttons: a floppy disk icon, "OK", and "Cancel".

Save Path	USB-2:FLASH DRIVE	Rescan Device
File Name	log	
Type	.csv	

 OK Cancel

2.17.2 Using the Alarm Log Viewer

The alarm log viewer is both supported in preview and playback mode.

View the Alarm Event


Alert and display warning information.

1. Click Alarm Log icon ().
2. The Alarm Log Viewer dialog box is appeared and located at bottom of left side screen.




User can click  icon to expand the Alarm Log Viewer dialog box on the screen.

3. Then, click **Event** tab to view all alarm events.

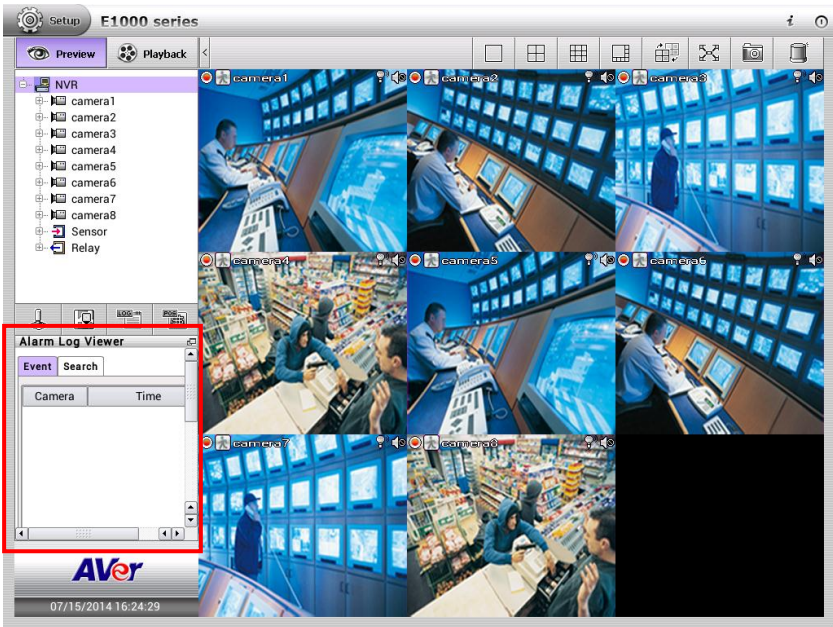

4. Clicking **Alarm reset** button to reset all alarm event status.

5. Clicking **Refresh** button to refresh the alarm events list.

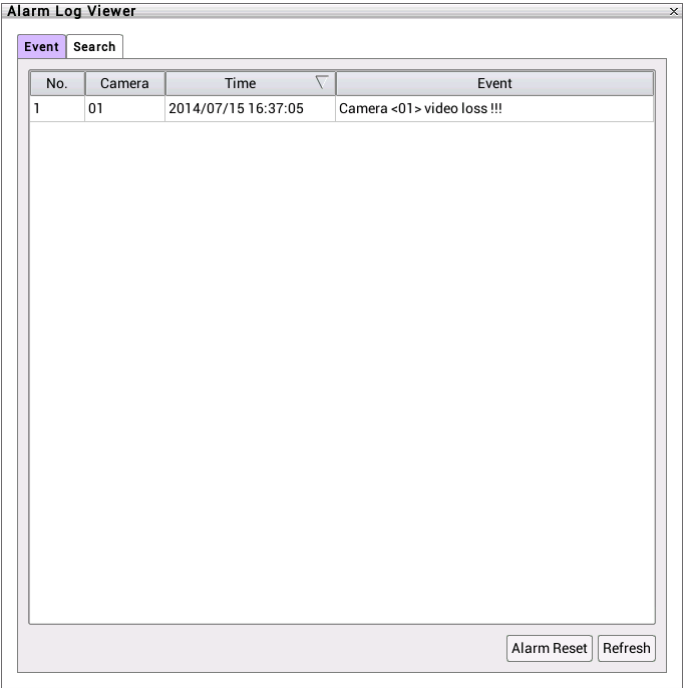

6. Double-click on alarm event can playback the event video.

Search Alarm Event Logs


Searching the specific alarm event.

1. Click Alarm Log icon ().
2. The Alarm Log Viewer dialog box is appeared and located at bottom of left side screen.



User can click  icon to expand the Alarm Log Viewer dialog box on the screen.

3. Then, click **Search** tab in Alarm Log Viewer dialog box.

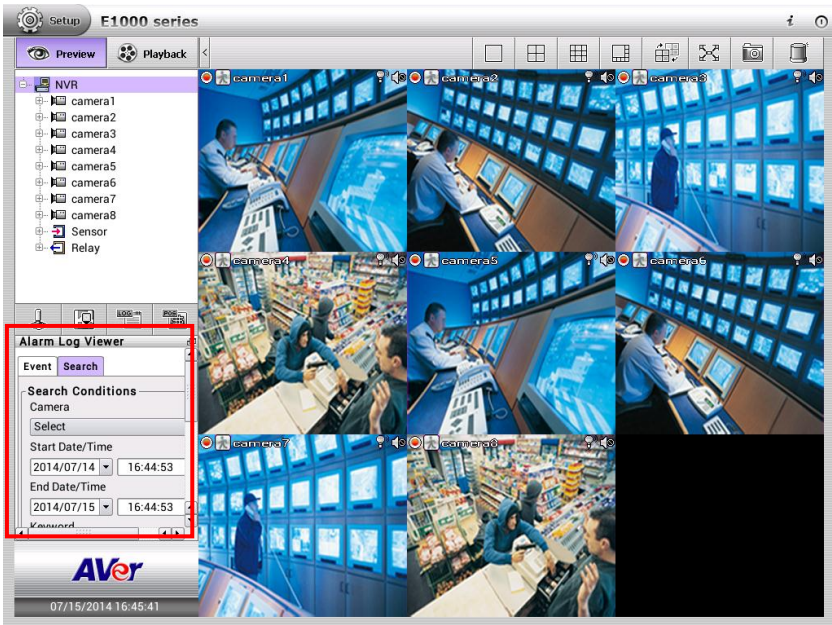

4. In Alarm Log Viewer dialog box, select the **Camera** that user wants to search. Multiple cameras selection is allowed.

Alarm Log Viewer

Event Search

Search Conditions

Camera Select

Start Date/Time 2014/07/14 15:59:45

End Date/Time 2014/07/15 15:59:45

Keyword

Search

Search Result

No. /	Camera	Time	Event
-------	--------	------	-------

Export More

5. Set the searching period at **Start Date/Time** and **End Date/Time** column.
6. Searching by specific keyword, enter the keyword in **Keyword** column.
7. Click **Search** button to start searching.
8. The search result will list in below column. Click **More** button to display more event logs.

Alarm Log Viewer

Event Search

Search Conditions

Camera Camera 1 | Camera 2

Start Date/Time 2014/07/14 16:44:53

End Date/Time 2014/07/15 16:44:53

Keyword

Search

Search Result

No. /	Camera	Time	Event
1	01	2014/07/15 16:37:05	Camera <01> video loss !!!

Export More

9. Click **Export** button can save the search result list to external USB pen drive.
10. Double-click on alarm event can playback the event video.


2.17.3 Using the POS Log Viewer

Search the iPOS event. The POS Log viewer is both supported in preview and playback mode.

1. Click POS Log ().
2. The POS Viewer dialog box is appeared and located at bottom of left side screen.



User can click  icon to expand the POS Log Viewer dialog box on the screen.

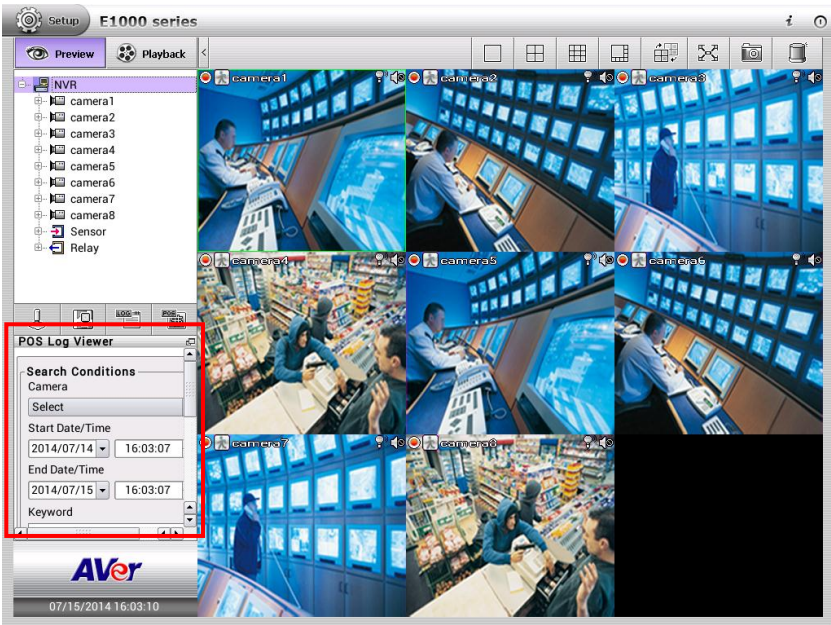

- 3. In POSViewer dialog box, select the **Camera** that user wants to search.
- 4. Set the searching period at **Start Date/Time** and **End Date/Time** column.
- 5. Searching by specific keyword, enter the keyword in **Keyword** column. Mark **Match whole words exactly** option to 100% match the keyword that user has entered.
- 6. Click **Search** button to start searching. The search result will list in below column. Click **More** button to display more event logs.
- 7. Click **Export** button can save the search result to external USB pen drive.

POS Log Viewer

Search Conditions

Camera

Select

Start Date/Time

2014/07/14

16:03:07

End Date/Time

2014/07/15

16:03:07

Keyword

☐ Match All Words

Search

Search Result

No.	Camera	Time	POS Data
-----	--------	------	----------

Export


More

2.18 NVR/DVR System Tools


2.18.1 Hard Disk Calculator

Estimate the hard disk recording capacity. The result of calculation is a rough value which only for reference. The hard disk record capacity will be varied by the real record quality and complexity of video scene.

1. Click **Setup** tab > **System Setting**; click + to expand the list and click **Storage**.
2. In Storage Setting dialog box, click **Hard disk calculator** button.

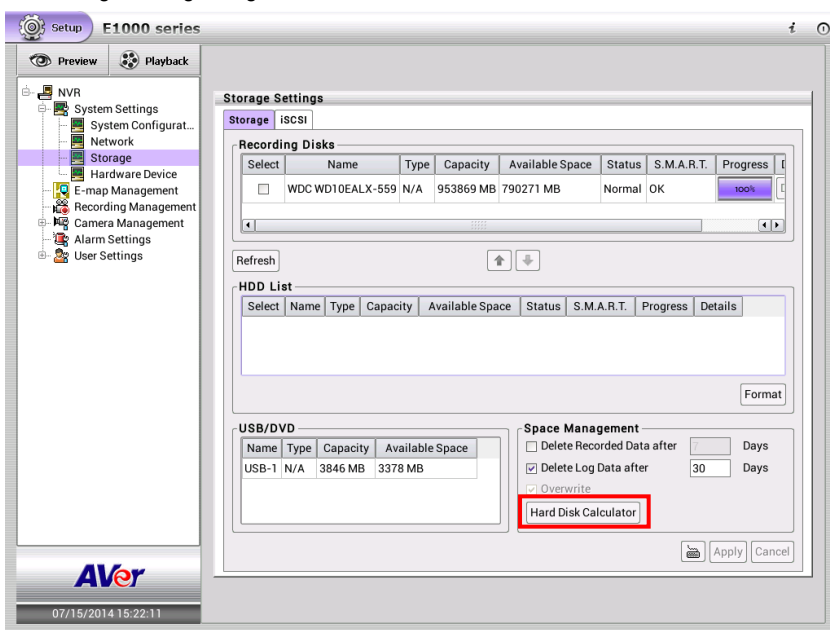

3. In Hard Disk Calculator dialog box, enter the expected hard disk size or expected recording time in **Expected HD Size (GB)** or **Estimated Recording Time (Days)**, and then click **Calculate** button. The **Total Recording Time (Days)** column is shown the current hard disk recording capacity. Click **OK** to exit the hard disk calculator window. The hard disk calculation is based on the recording setup and current hard disk capability.

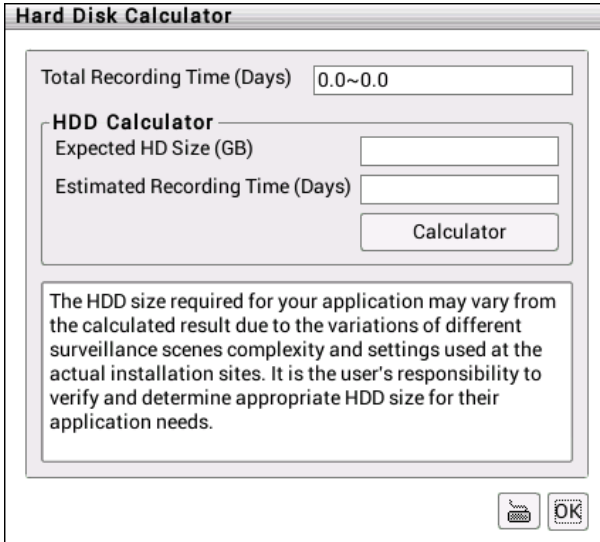

The image shows a dialog box titled "Hard Disk Calculator". At the top, there is a label "Total Recording Time (Days)" followed by a text box containing "0.0~0.0". Below this is a section titled "HDD Calculator" which contains two text boxes: "Expected HD Size (GB)" and "Estimated Recording Time (Days)". To the right of these text boxes is a button labeled "Calculator". Below the "HDD Calculator" section is a text box containing the following text: "The HDD size required for your application may vary from the calculated result due to the variations of different surveillance scenes complexity and settings used at the actual installation sites. It is the user's responsibility to verify and determine appropriate HDD size for their application needs." At the bottom right of the dialog box are two buttons: a button with a keyboard icon and a button labeled "OK".


2.18.2 On Screen Keyboard

User can use the on screen Keyboard to enter require information in setting dialog box. Click  to call out the on screen keyboard. For uppercase, click **Caps** button. To exit, click **Esc**.



Chapter 3 Monitoring the NVR/DVR

After setting up the NVR/DVR system, user can start to monitor the NVR/DVR in preview mode. The following chapters are going to describe the monitoring functions in preview mode.

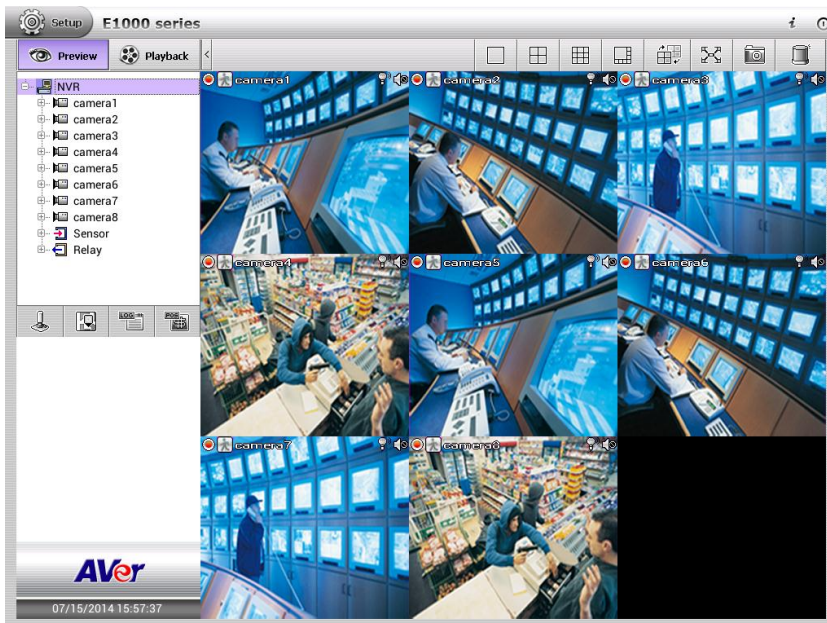


3.1 Manage Camera Channels

User can arrange the channel display position as user is desired.

Select the camera in Camera section. Then, drag the camera to the channel that user wants to be displayed. Next, User should see the live video on the channel screen.

The channels can be switched between each channel; just click the channel and drag the channel to the desire channel position. For example: Camera 01 switches to Camera 08; the Camera 01 will be Camera 08 position and the Camera 08 will switch to the Camera 01 position.


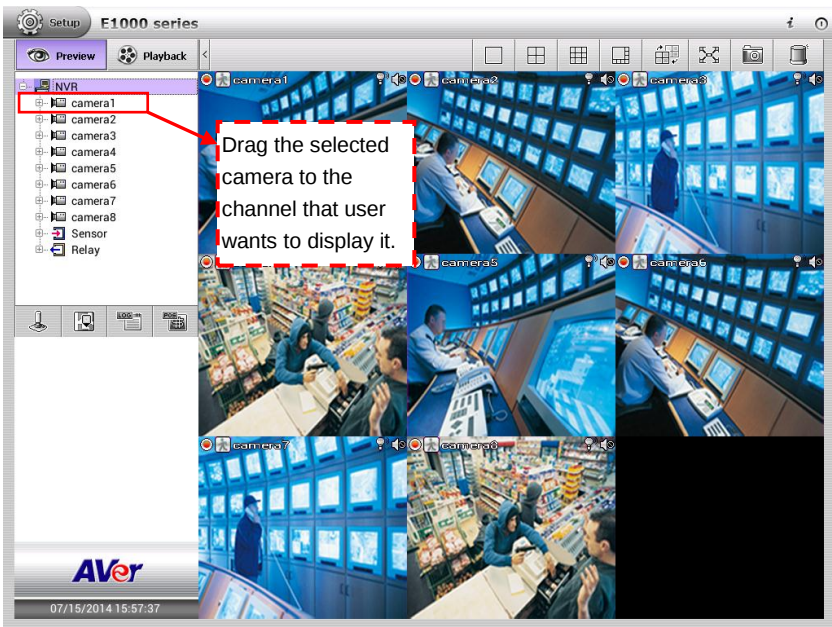


3.2 Meaning of Icons and Figures

■ The description of icons on each channel:

	The first icon is indicated the current recording status. - Red color (): recording - Gray color (): no recording
	The icon is indicated the motion record status. - Red color (): motion recording - Gray color (): no motion recording
	Enable/disable audio play of channel. User can click the icon to enable or disable the play of audio.
	Enable/ disable 2-way audio function [Note] Both NVR/DVR and IP camera need to connect audio input (ex: microphone) and audio output (ex: speaker) device.

■ The meaning of figures on screen: user will see some of figure during the monitoring and playback and their descriptions are as following.

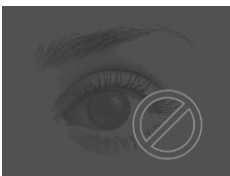
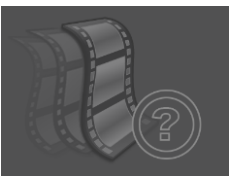
Camera is disabled.	Camera is no video display.	Video loss
		

No recording data (Playback mode)	The camera resolution is over the resolution that NVR/DVR has supported	
		

3.3 Enable/Disable the Camera Channel


In Camera list, user can enable/disable camera. When camera is disabled, monitor and record function are both disable.

Right-click on the camera in Camera list, select disable or enable the camera.

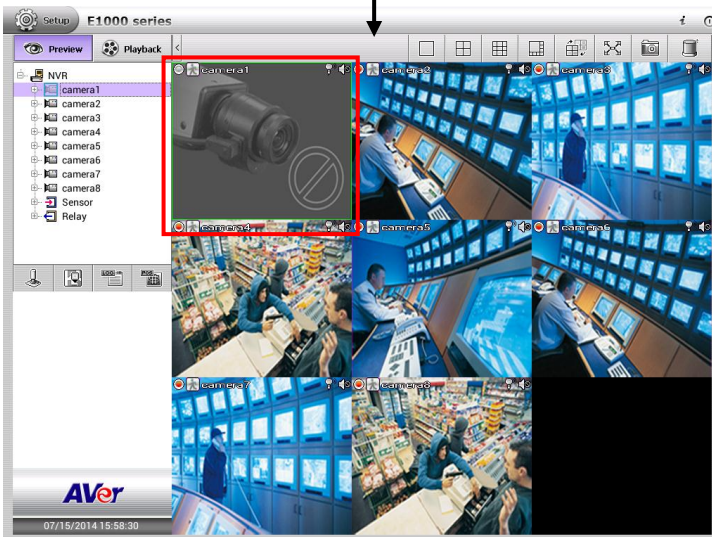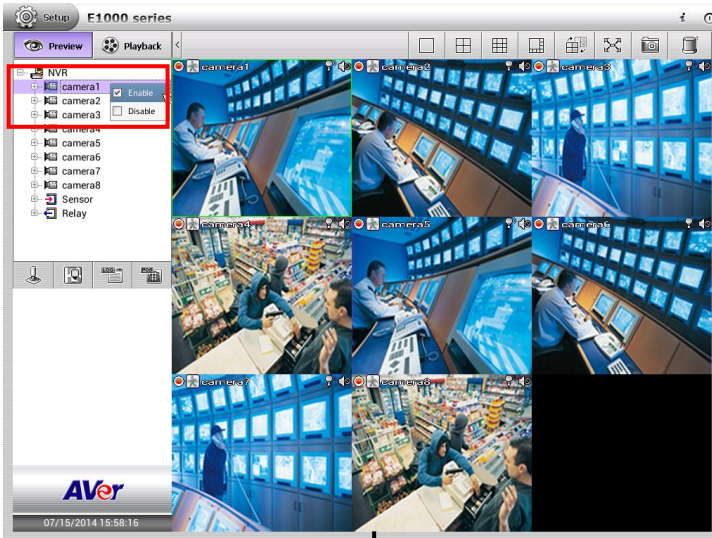



3.4 Screen Channel Display Mode

The NVR/DVR has provided 6 types of screen display mode – single () , QUAD () , 9-split screen () , and 8-split screen () . To select the screen display mode, click on the screen display icon.

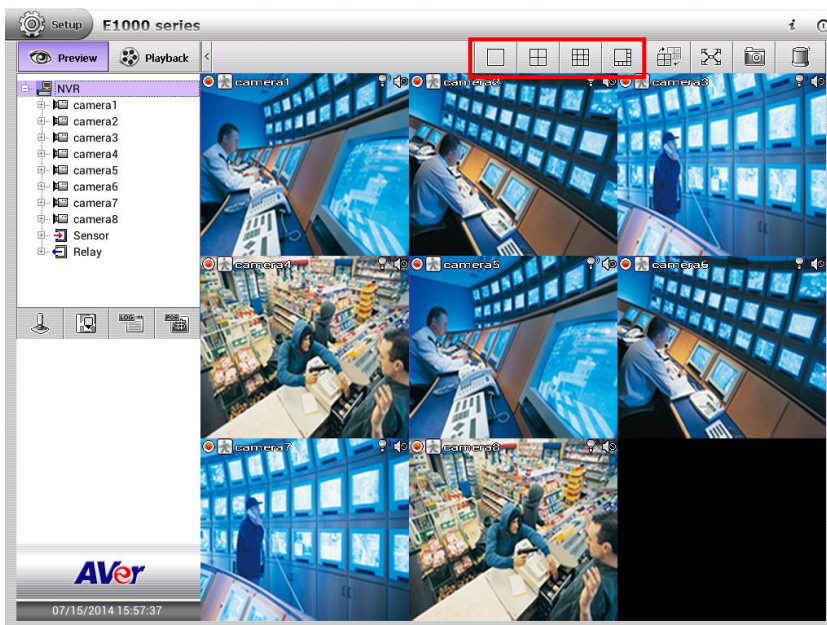


3.5 Enable/Disable the Sound of the Channel

User can click the audio icon (🔊) to mute (🔇) the sound of channel. Click the audio icon (🔇) again to turn on the sound.

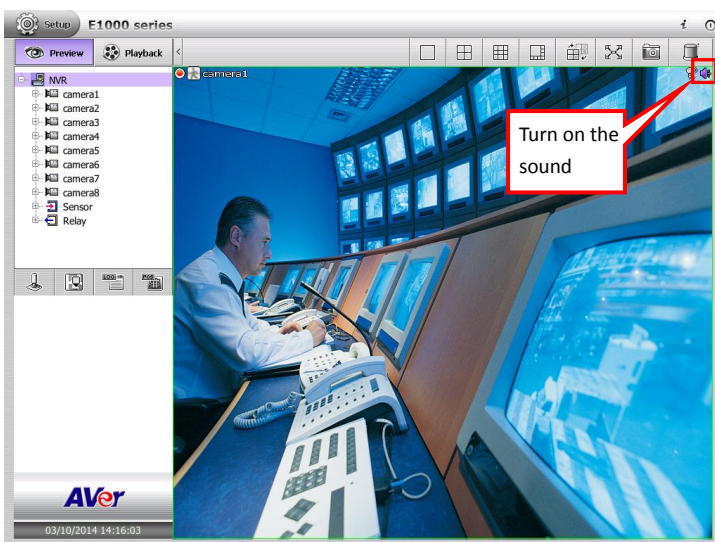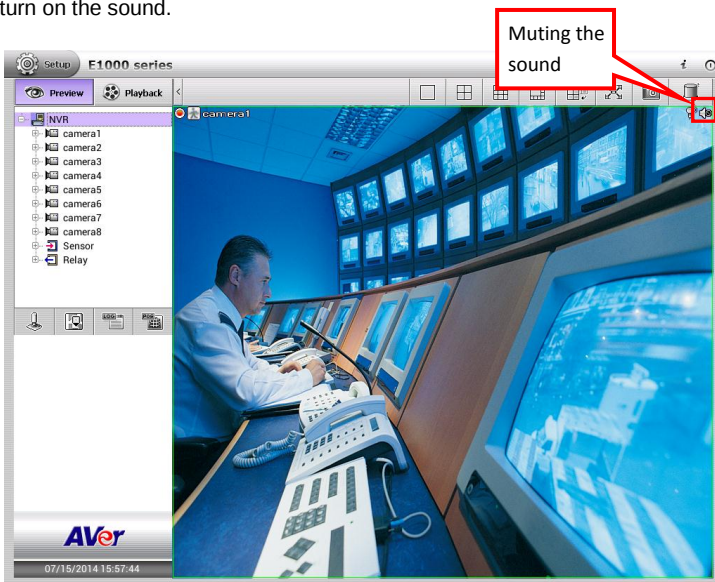


3.6 Switch Multiple Screen to Single Screen Display

In multiple screen display mode, user can double-click on the channel screen to switch to single display screen mode. Double-clicking again on channel screen, the screen display will switch back to multiple screen display mode.

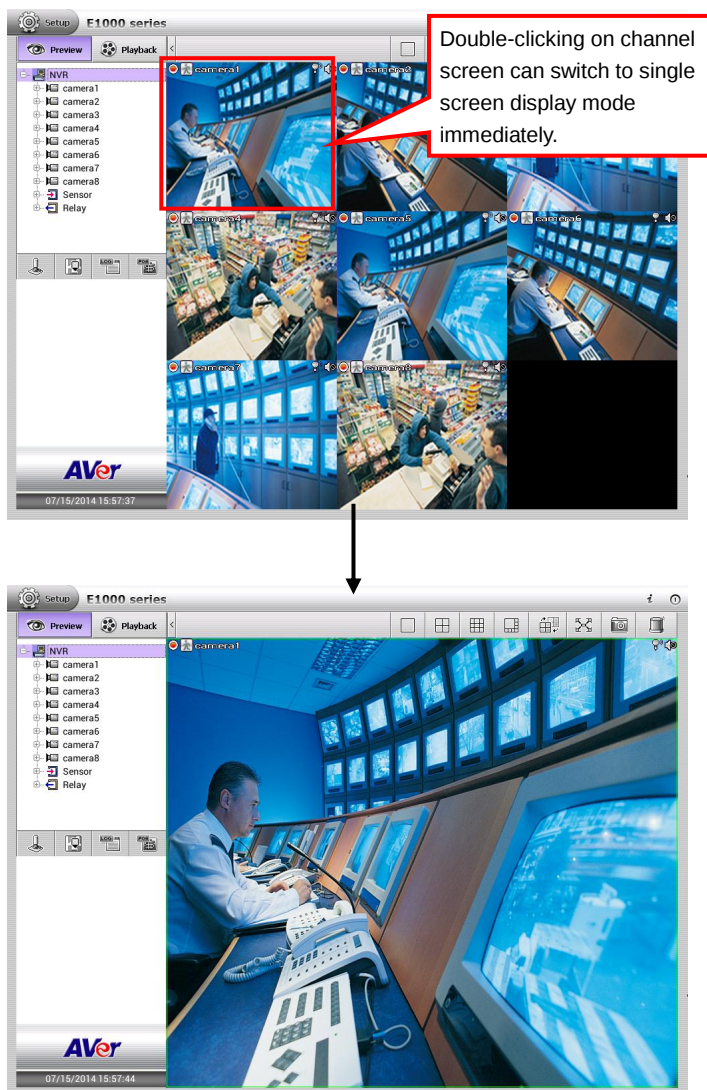

3.7 View the Emap


Click Emap() to call out the Emap dialog box. Click  icon on E-map dialog box to expand the E-map dialog box on the preview screen. When alarm occurred, the icons on the map will turn to flash status. Click Map #(ex: Map 2) can switch to the selected map.

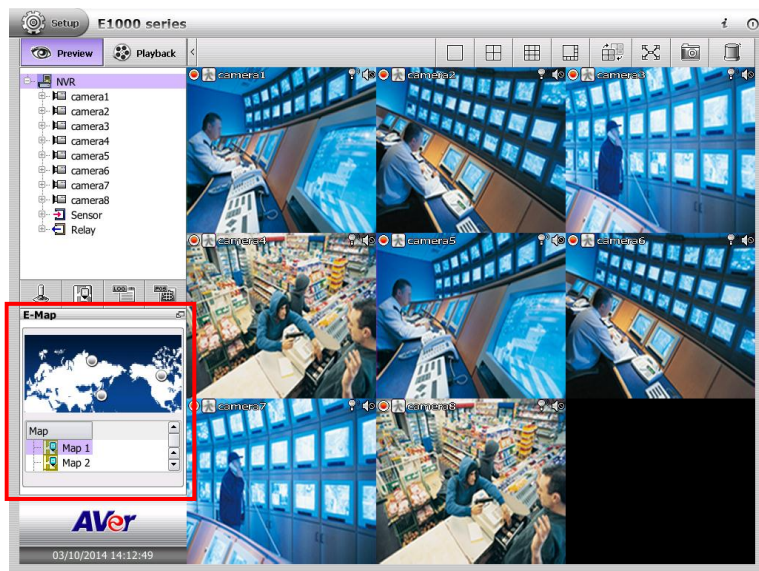


3.8 Snapshot the Screen

Taking a quick capture of current display screen and save in *.jpg format to external USB pen drive.

1. Plug in the USB pen drive to USB port of NVR/DVR unit.
2. In preview mode, Click the snapshot icon () and the snapshot dialog box is appeared.

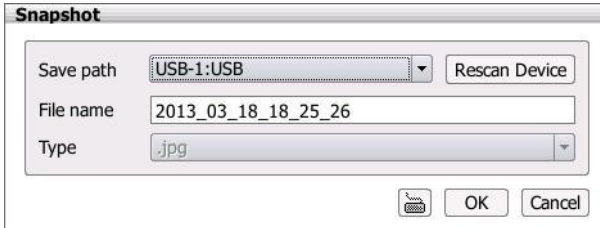


3. User can rename the **File name** by using virtual keyboard.
4. Click **OK** button to save the captured image file to USB pen drive.
5. The captured screen is looks like the figure below. There have date and time shown on the screen snapshot file.

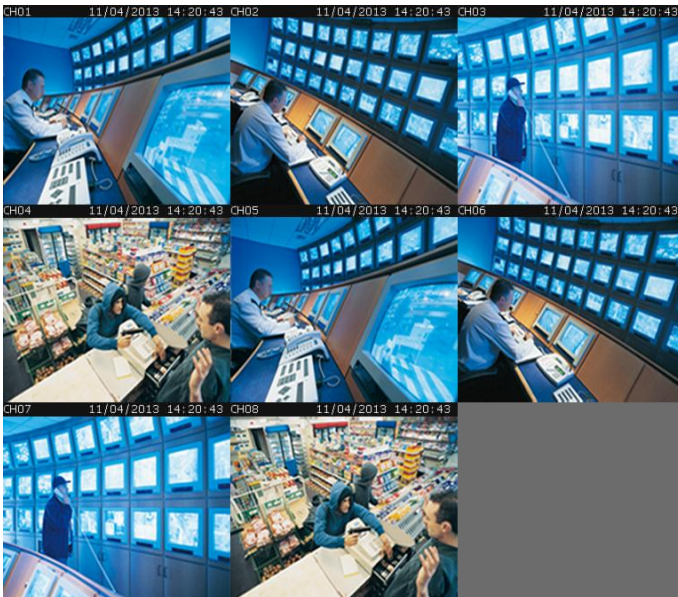

3.9 Full Screen Display

View the surveillance screen in full screen display mode.


In preview mode, click full screen icon () to switch to full screen display. Click the full screen icon () on the bottom of right corner to return back to normal display mode.

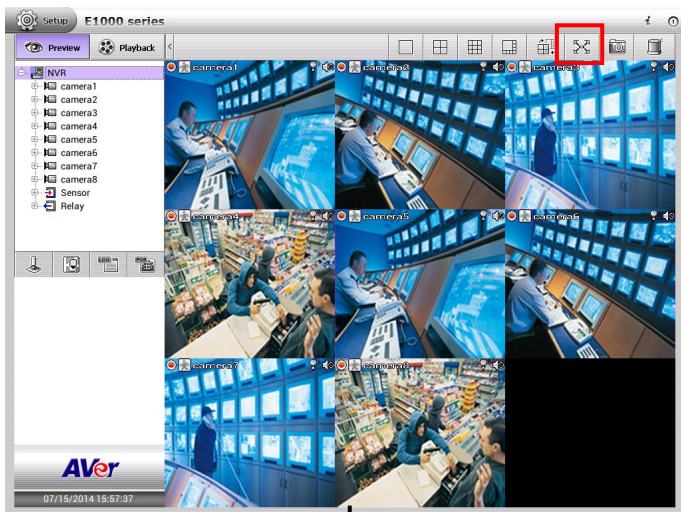


3.10 Hide the Camera List

User can hide the camera list to have larger view of surveillance screen.

In preview mode, click  icon and the camera list will be hidden.

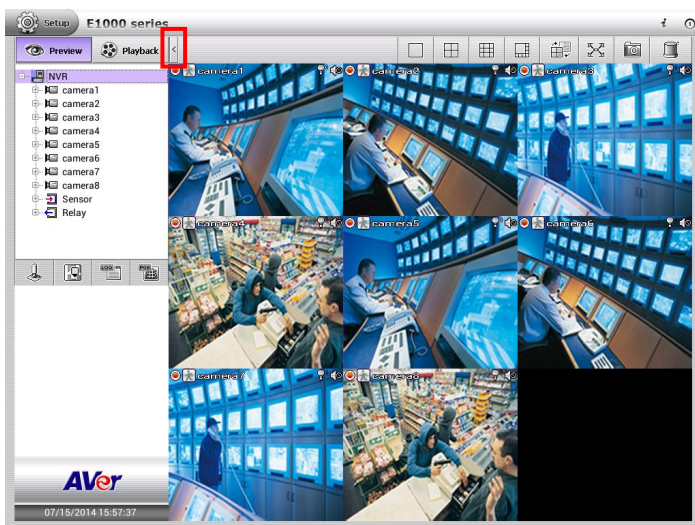


To show the camera list again, click  icon.

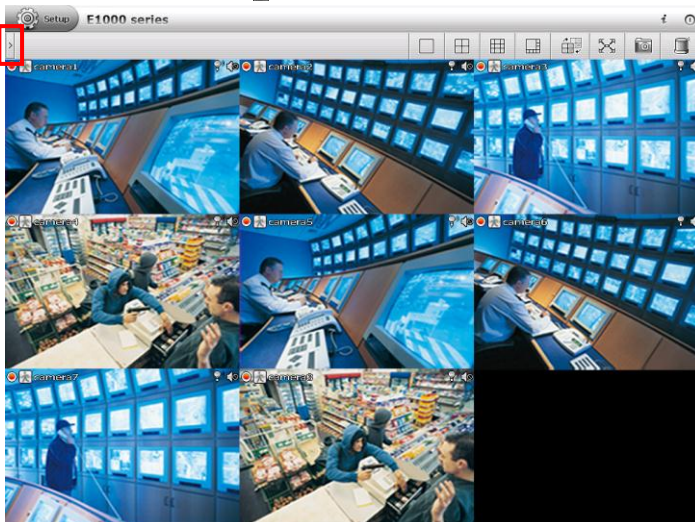

3.11 Auto Display Channel in Cycle

Click  to start channel display in cycle automatically. To stop auto cycle display, click  again. If total channels are 8 channels in 8-split screen display mode, the auto display cycle function won't work.

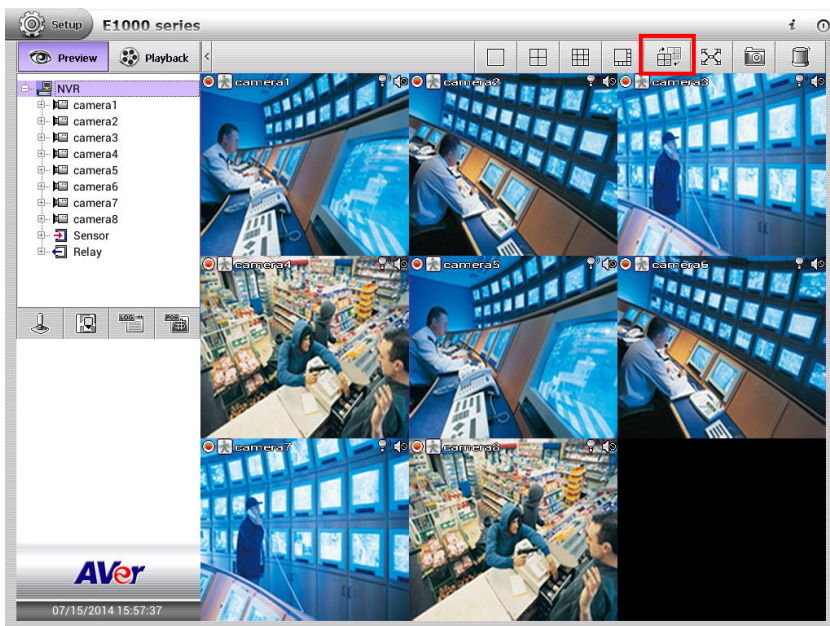

3.12 Enable/Disable 2-Way Audio Function

This function allows the NVR/DVR server site and IP camera site to talk via internet using microphone. Make sure your microphone and speakers work before using this function.

Click  icon to enable 2-way audio function. To disable, click  icon again.




Chapter 4 Playback Recorded Video on NVR/DVR System

In this chapter, it is going to description how to playback recorded video on NVR/DVR system in several ways and introduce some functions that user can operates in playback mode.

4.1 Playback on NVR/DVR System

User can playback the recorded video on NVR/DVR system instantly.

1. Click **Playback** tab in preview mode to switch to playback mode.
2. When switch to playback mode, the NVR/DVR system will start from backward 60 seconds recorded video to playback.

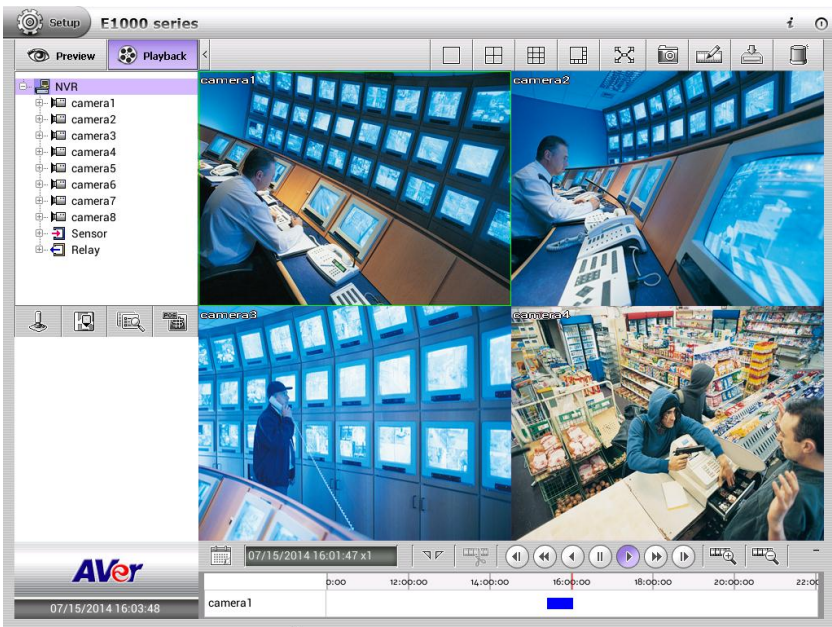


3. The description of function buttons in playback mode refers to [Chapter 3.3](#).

4.2 Playback the Specific Date/Time Period

User can select the specific date and time period to playback.


1. In playback mode, click **Calendar**  icon.
2. In Calendar dialog box, select the date (date, month, year) that user wants to playback. The date in bold text indicates it has recorded data. Click  and  icon to switch the date or click  icon next to month to select the month. To switch the year, click on the text of year and click spin button to select.
3. In Time box, select the hour, minute, or second to setup the playback start up time. Click the hour and use spin button to adjust the hour. Using the same way to select the minute and second.
4. After selecting the date and time, click **OK** to start playback.

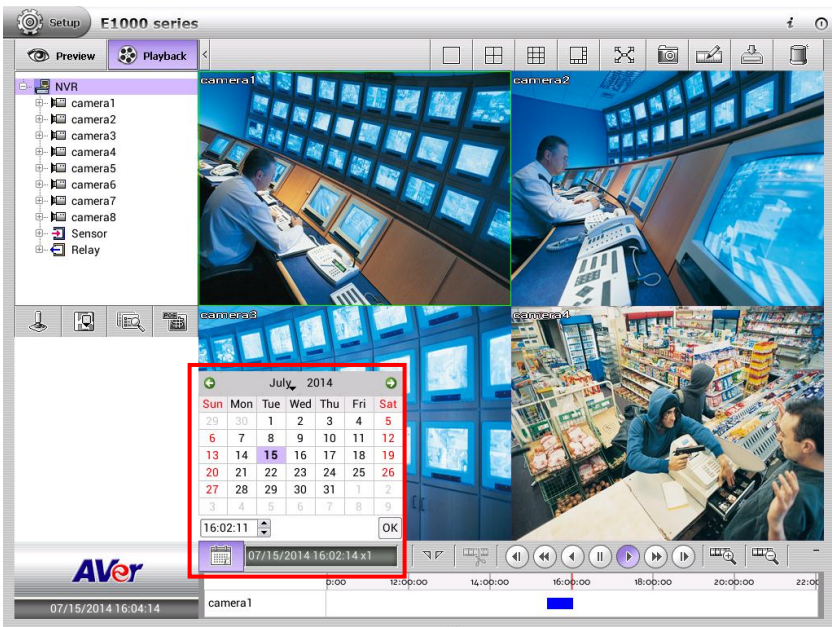

4.3 Using the Event Search to Playback the Event

In playback mode, user can use Event Search to find the specific event to playback.

1. Select the channel that user wants to search.
2. Click  (**Search**) icon >>  (**Event Search**) Then, the Event Search dialog box would appear at side area.

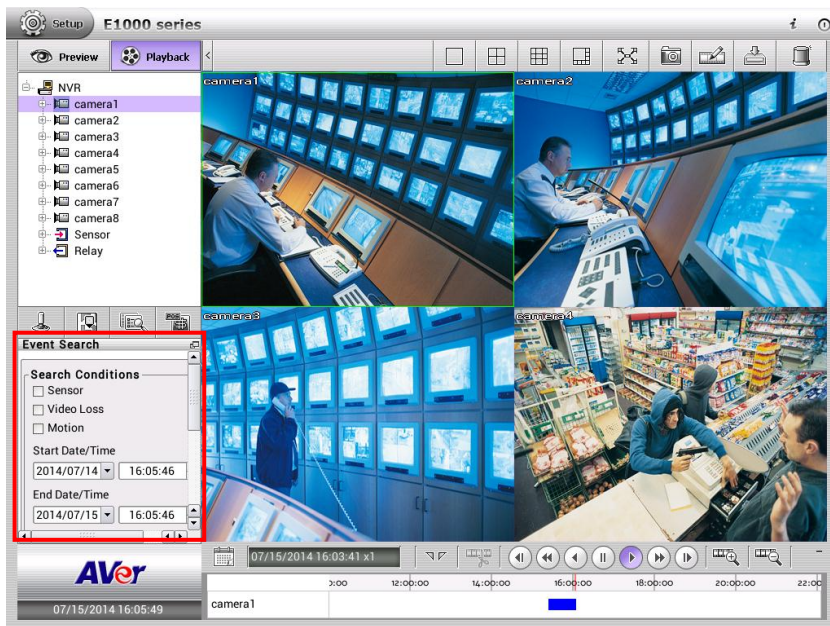

3. In the Event Search dialog box, check the type of condition user wants to search. Then, set the **Start Date/Time** and **End Date/Time**.
4. Next, click **OK** to start searching.

5. When the Event list appears, click and select the item user wants to view; but not all the events can be playback such as Sensor.
6. To close the Event Search dialog, click  icon.

Event Search

Search Conditions

☒ Sensor

☒ Video Loss

☒ Motion

Start Date/Time

2014/07/14

16:05:46

End Date/Time

2014/07/15

16:05:46

Search

Search Result


No. /	Camera	Type	Start Date/Time	End Date/Time
1	01	Video Loss	2014/07/15 15:24:54	2014/07/15 15:24:54

More


4.4 Using the Visual Search to Playback the Specific Time

In playback mode, user can use Visual Search to find the specific time to playback.

1. Click  (**Search**) icon, then select  (**Visual Search**) icon. The Visual Search dialog box would appear under the area.
2. In the Visual Search dialog, select the date. Click  and  icon to switch the month or click  icon next to month to select the month. To switch the year, click on the text of year and click spin button to select.
3. Next, setup the search time period by clicking spin buttons to setup the hour, minute, and second.
4. Then, click **Search** to start searching.

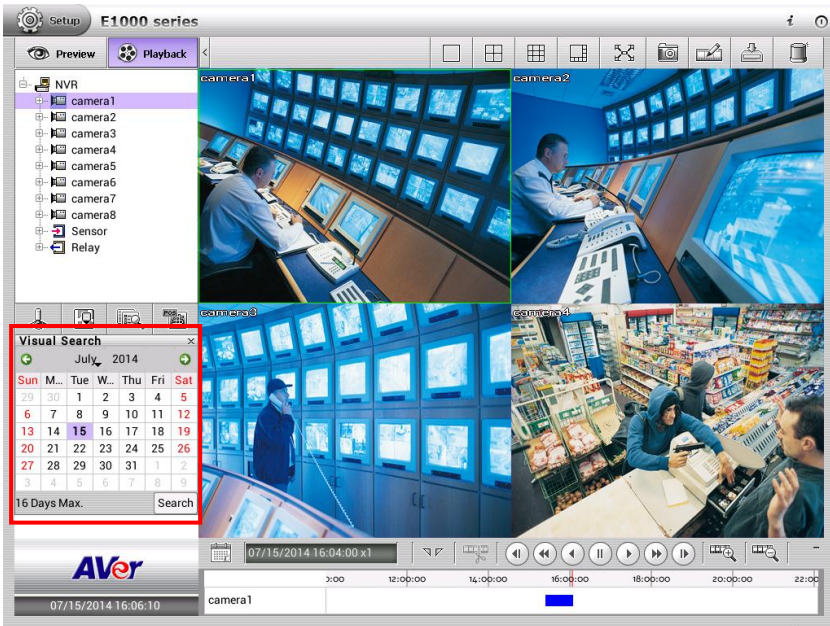

5. When a series of frames appear by date, click on the frame to display another series of frames and search by every 2 hours of that date, every 8Minutes of that hour, and every 30seconds of that minute. Using  and  to go to hour, minute, and second page.
6. To playback the selected video, click  button or double-click on selected video screen.

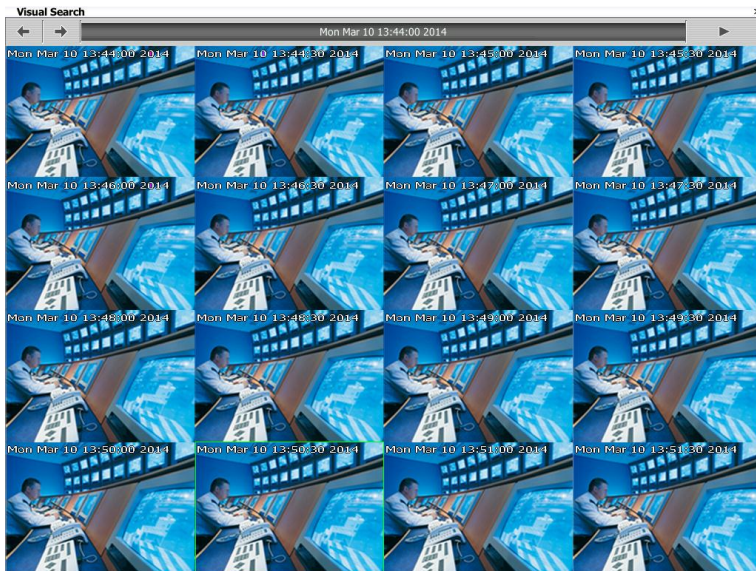


4.5 To Bookmark a Section of the Video

User can bookmark a specific time of video section.


1. Using the mouse to move the playback time progress bar to the time that user wants to bookmark.



2. Then, click  icon. The Bookmark dialog box is appeared on the screen.

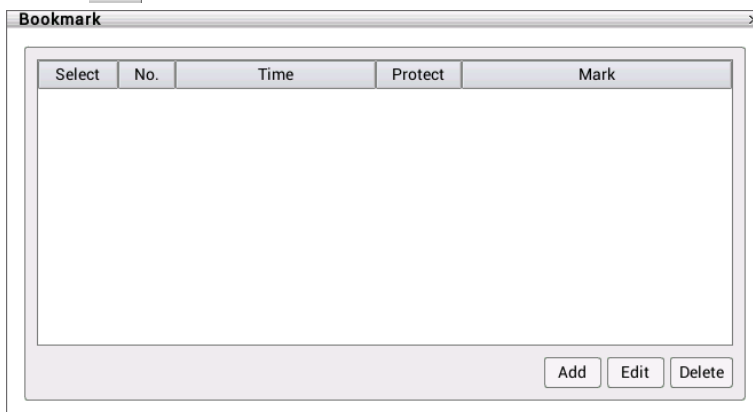

3. Click **Add** button to create the new reference mark in the bookmark list. Enter a short description or name for the mark. Mark **File Protect** option the protect file will not be deleted even the recycle function has enabled. Then, click **Apply** button to save the bookmark. To exit bookmark Editor dialog box, click **Cancel** button.

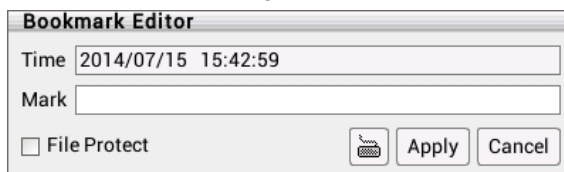

4. Select and click one in the bookmark list to review the file.

Bookmark

Select	No.	Time	Protect	Mark
☐	1	2014/07/15 15:42:59	Yes	1
☐	2	2014/07/15 15:57:23	No	2

Add

Edit

Delete

5. To modify the bookmark, select the bookmark and click **Edit** button.
6. To delete the bookmark, select the bookmark and click **Delete** button.
7. To close the Bookmark dialog box, click  icon.


4.6 Use the Playback Mode

4.6.1 Manage Channel Display Position

User can arrange the channel display position that user is desired.

Select the camera in camera list section. Then, drag the camera to the channel that user wants to playback. Next, User should see the video playback on the channel screen.

The channels can be switched between each channel; just click the channel and drag the channel to the desire channel position. For example: Camera 01 switches to Camera 09; the Camera 01 will be Camera 09 position and the Camera 09 will switch to the Camera 01 position.

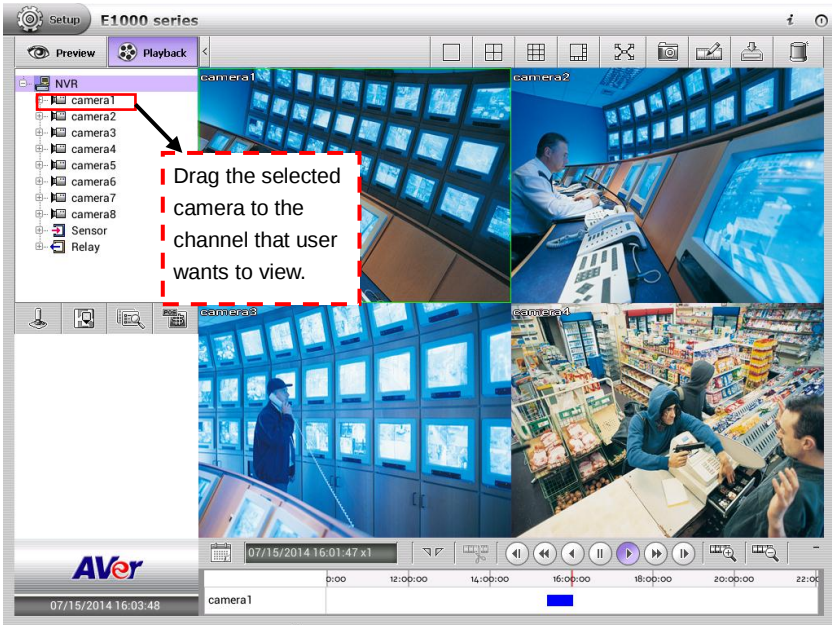



4.6.2 Enable/Disable Sound of the Channel

First, switch to single screen display mode. Then, Click the  icon on the channel screen to disable the sound play. Click  again to enable sound play.



4.6.3 Switch Multiple Screen Display to Single Screen Display


In multiple screen playback mode, user can double-click on the channel screen to switch to single display screen mode. Double-click on channel screen again; the screen display will switch back to multiple screen playback mode.

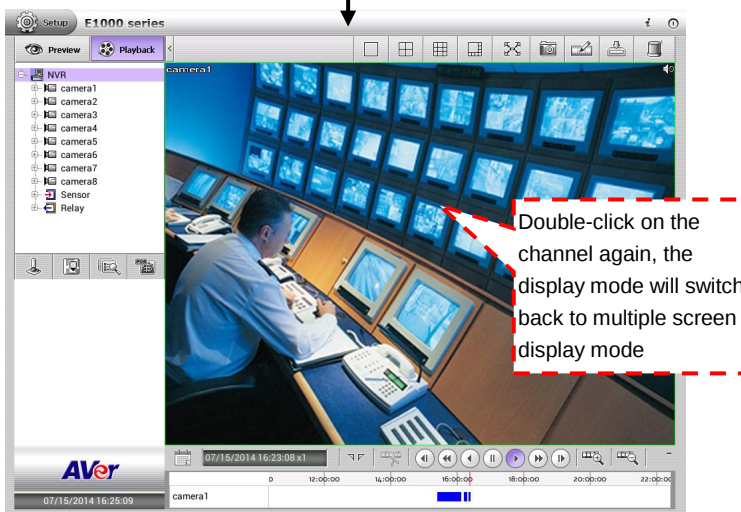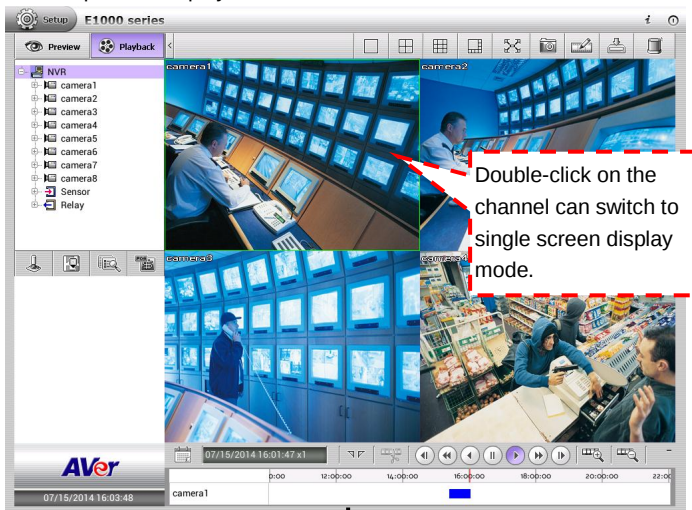

4.6.4 Full Screen Display

View the playback screen in full screen display mode.


In playback mode, click full screen icon () to switch to full screen display. Click full screen icon () on the bottom of right corner to return back to normal display mode

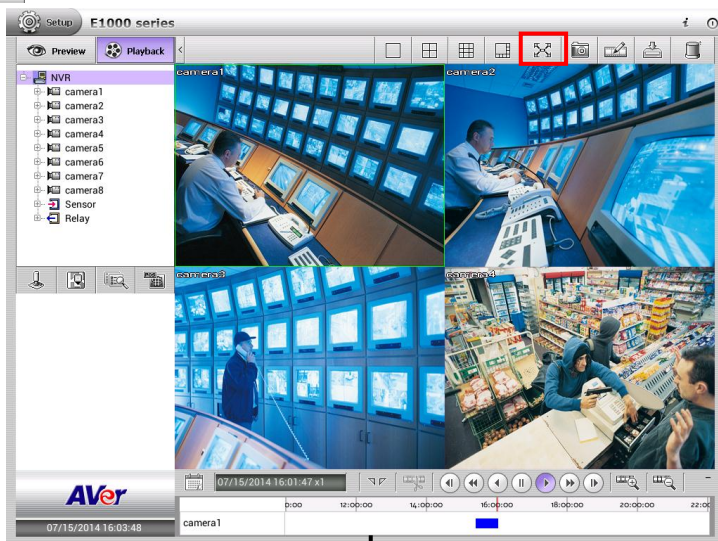

4.6.5 Hide the Camera List


User can hide the camera list to have larger view of surveillance screen.

In playback mode, click  icon next to preview tab and the camera list will be hidden. To show the camera list again, click  icon.

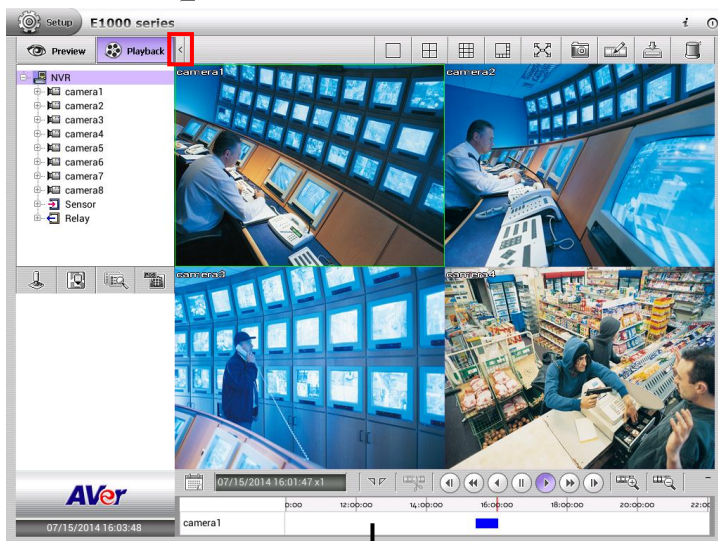


4.6.6 Output a Video Clip to a USB Pen Drive


1. Switch the playback screen to 1 single screen display mode.
2. Using  and  button to expand the time bar for easy to set the segment period.
3. Click  (**Segment**) button to set the mark.

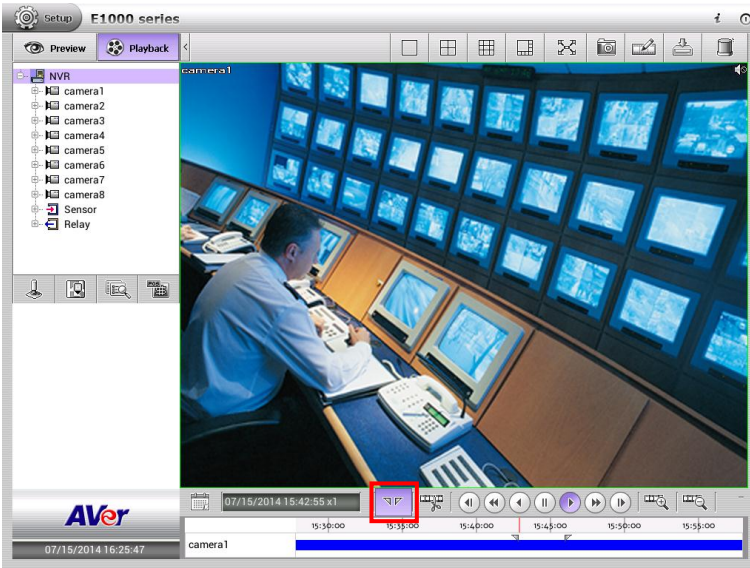

4. Then, drag the  mark (**segment**) to set video period portion. To cancel segmentation, click  button (**Segment**) again.

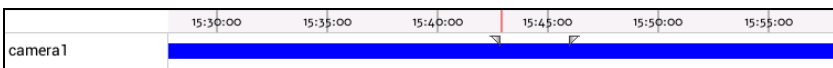


5. Click **Output Video Clip** button () and the Output Video Clip dialog box is appeared.

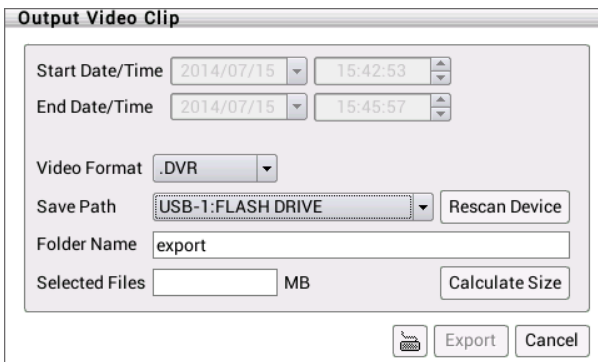

- **Start Date/Time:** Displays the begin time and date of segment video file.
 - **End Date/Time:** Displays the end time and date of segment video file.
 - **Video Format:** Select the video format -- ***.DVR** or ***.mp4** that user wants to save.
 - **Save path:** Where to save the segment video file. Click **Rescan Device** to detect the external USB pen drive if NVR/DVR system didn't detect it.
 - **Folder Name:** Give a name for segment video file. Using virtual keyboard to enter the name.
 - **Calculate size:** To calculate the file size of segment video file. The calculate result is displayed in **Select File** column.
 - **Selected Files:** Displays the file size of segment video file.
6. Click **Export** button to save wanted segment portion.
 7. To playback the export video clip, please refer to [Chapter 5](#).

4.6.7 Snapshot the Screen View

1. Select the channel or all channels.
2. Plug the USB pen drive to NVR/DVR unit.
3. Click **Snapshot** () button.
4. In Snapshot dialog box, check the Save path has been detected by NVR/DVR system. If the save path doesn't found, click **Rescan Device** button to re-detect it.

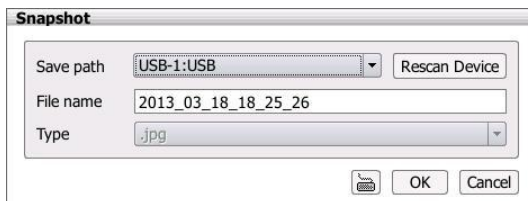

5. If user wants to re-name the **File name**, call out the on-screen keyboard and enter the new file name in File name column.
6. Click **OK** to capture and save the screen shot.
7. The captured and saved screen image can be viewed on PC.

Chapter 5 Playback by Qplayer

You can playback the backup files by using QPlayer applications on the PC. When you back up the recorded file, QPlayer applications are automatically included in the backup folder if user has enabled the selection of **Inculde player when backup** when backup recorded file. With QPlayer, it is similar in Playback mode and supports different split screen types to view all the video at the same time.

To run the application, go to backup folder and select Qplayer folder, then, double-click **Qplayer.exe**.



Chapter 5.1 Familiarizing Functions of Qplayer

In Qplayer main UI, click File > Open File to located the backup file folder.




Please copy the whole backup folder under hard disk direction of PC (ex: C:\).

The functions of Qplayer will be described in following:





Name	Function
------	----------

- (1) File
- Click it to open the backup file. A File List dialog is appeared and listed all available playback files. User can click the file to playback.

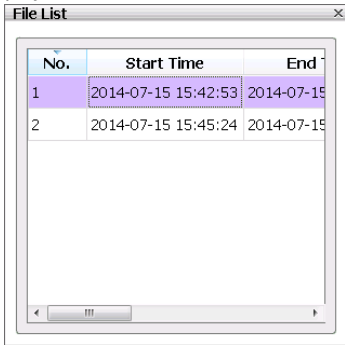

Name	Function
(2) Split Screen Mode	Select from 7 kinds of split screen type to playback the recorded video file of all the camera, or one camera over the other or alongside on a single screen.
 To only display one of the video in the multiple-screen mode, double click on the video screen you only want to display.	
(3) Camera list	Lists all cameras. Click + to expand the list. User can select and drag the camera to desire channel location.
(4) Date and Time	It shows the current date and time.
(5) Export	Export function includes 2 functions – Snapshot and Print. - Snapshot: Catch a static current screen image and save it as a JPG file on local hard disk. - Print: Print out the current Qplayer screen.
(6) Bookmark	Mark a reference point when reviewing the recorded video file to which you may return for later reference (see also Chapter 5.1.1).
(7) Full screen	Use the entire area of the screen to only display the video. To return, press the right button of the mouse or ESC on the keyboard or click the arrow icon.
	
When you switch to full screen in multiple-screen mode, Left click to toggle to only display one of the video in the multiple-screen mode or all.	
(8) System Information	Click it to view NVR/DVR system's version and copyright.
(9) Minimize	To minimize the Qplayer on the task tray.

Name	Function
(10) Power button	Call up the Power dialog box. In the Power dialog box, user may do the following: - Exit: To shutdown the NVR/DVR system. - Cancel: To exit Logout dialog box.
(11) On Screen Keyboard	If the keyboard is not available, you may use the Virtual Keyboard.
(12) Status bar	Display the recorded date, time and play speed.
(13) Playback Control Buttons	From left to right order: Begin: Move at the beginning of the recorded video file. Previous: Go back to the previous frame. Slower: Play the recorded video file at the speed of 1/2x, 1/4x, or 1/8x. The playback speed will show on the screen. Rewind: Wind back the recorded video file. Pause: Briefly stop playing the recorded video file. Play: Play the recorded video file. Faster: Play the recorded video file at the speed of 2x, 4x, 8x, 16x, 32x, or 64x. The playback speed will show on the screen. Next: Go to the next frame. End: Go to the end of the recorded video file.
(14) / (Zoom in/Zoom out)	To expand the playback time bar from an hour to minute.
(15) Close up progress	Click to close up the progress bar. Click again to open up.

 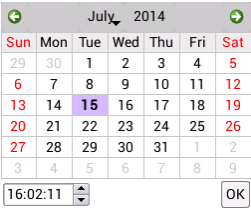Name	Function
bar	
(16) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track. Using the Zoom In/Out button to expand the playback time from an hour to minute.  Meaning of color in progress bar: - Red: Alarm record - Green: Motion record - Blue: Always record(normal record) - Yellow: Video loss - White: No record date
(17) Calendar	Select the date on the calendar and the time to where to start playing the recorded video file. Click OK to start playback.  - Date: click the date on calendar to select. The date in blod text indicates there has recorded file. Click 🔄 and ➡ icon to switch the date or click ▼ icon next to month to select the month. To switch the year, click on the text of year and click spin button to select. - Time: In Time box, select the hour, minute, and second to setup the playback start up time. 


5.1.1 To Bookmark a Section of the Video for Playback

User can bookmark a specific time of video section.


1. Using the mouse to move the playback time progress bar to the time that user wants to bookmark.




2. Then, click  icon. The Bookmark dialog box is appeared on the screen.

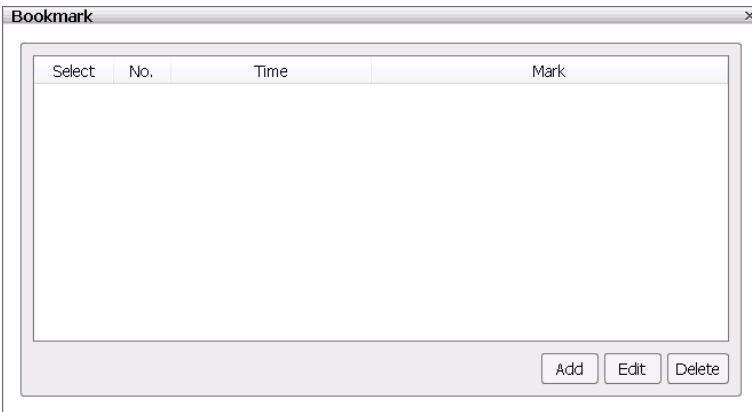

3. Click **Add** button to create the new reference mark in the bookmark list. Enter a short description or name for the mark and click **Apply** button to save the bookmark. To exit bookmark Editor dialog box, click **Cancel** button.

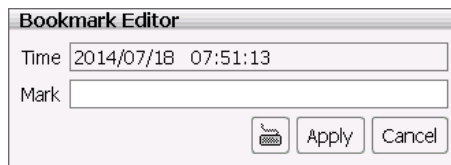

4. Select and click one in the bookmark list to review the file.

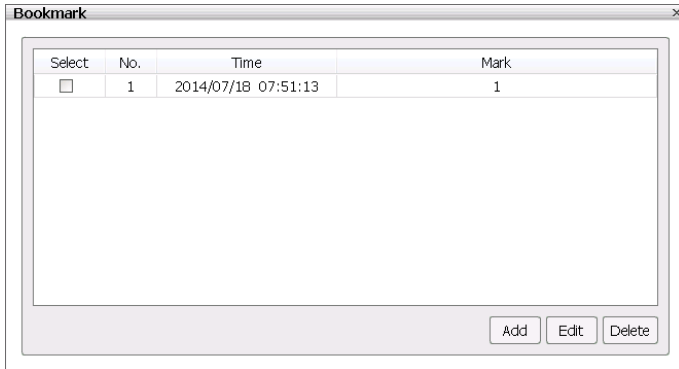


5. To modify the bookmark, select the bookmark and click **Edit** button.
6. To delete the bookmark, mark the bookmark and click **Delete** button.
7. To close the Bookmark dialog box, click ☒ icon.

Chapter 6 Using the PCViewer

User can use Microsoft Internet Explorer to access NVR/DVR system by entering the IP address. To use this feature, make sure that your PC and NVR/DVR server both are connected to the internet and the Network feature is enabled.

Accessing this feature for the first time you need to install plugin component, allow or click to install and you should be able to connect and login afterwards.

After installing the plugin component and when connecting to the NVR/DVR system, you are required to enter account ID (default is **admin**) and password (default is **admin**) and select the type of network. Admin account has the authority to remote setup the NVR/DVR system configuration on PCViewer.

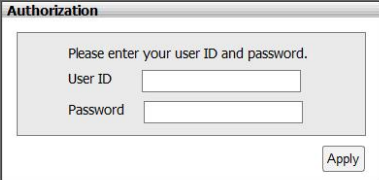

The image shows a screenshot of an 'Authorization' dialog box. The title bar says 'Authorization'. Inside the dialog, there is a text prompt: 'Please enter your user ID and password.' Below this, there are two input fields: 'User ID' and 'Password'. To the right of the 'Password' field is an 'Apply' button. At the bottom of the dialog, there is a warning message: 'Warning: Please do not open multiple WebViewer pages on single PC'.

[Note]


1. PCViewer supports on Windows 7 (IE9, IE10, IE11) and Windows 8 (IE10 & IE11).
2. One PC/NB only can operate one PCViewer application.
3. PCViewer doesn't support the IE browser of Windows 8 metro version.

6.1 Familiarizing Functions of Preview Mode



Name	Function
(1) Playback	Click it to switch to playback mode and playback recorded video form remote NVR/DVR server(see also Chapter 6.2).
(2) Preview	Click it to switch to preview mode.
(3) Camera list	Lists all cameras. Click the camera # to view in single screen display mode or click camera group to view in multi-screen display mode.
(4) Information	It shows the current date, time, transmit data information.
(5) Split Screen Mode	Select from 3 kinds of split screen type to view live video of remote NVR/DVR server.
(6) Information	Click it to view NVR/DVR server's model name, S/W version and PCViewer FW version.
(7) Logout	To exit the application.
(8) 2-way audio	This function allows the NVR/DVR server site and PCViewer site to talk via internet using microphone. Make sure your microphone and speakers work before using this function.

6.2 Familiarizing Functions of Playback Mode

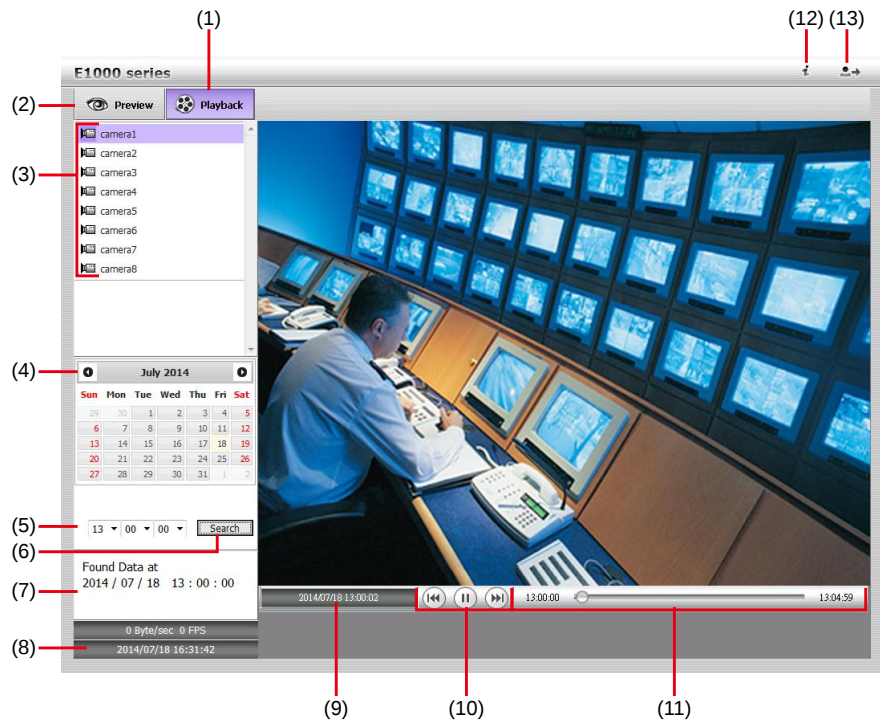

Name	Function
(1) Playback	Click it to switch to playback mode
(2) Preview	Click it to switch to preview mode (see also Chapter 6.1).
(3) Camera list	Lists all cameras. Click the camera # to view in single screen display mode or click camera group to view in multi-screen display mode.
(4) Date select	Select the date to playback. Click ◀ ▶ to switch to different month. Click on date to select the date user wants to search the recorded file for playback.
(5) Time select	Click it to select the time period to search the recorded file for playback.
(6) Search button	Click it to search the selected date and time of recorder file for playback. When the recorded data is found, the playback will start automatically.

Name	Function
(7) Result display area	Display the search result of found recorded data.
(8) Date and Time	It shows the current date and time.
(9) Status bar	Display the recorded date, time and play speed.
(10) Playback Control Buttons	From left to right order:  Previous: Click it to go to previous time period. The playback time period is 5 minutes for a segment.  Next: Click it to go to next time period. The playback time period is 5 minutes for a segment.  Pause: Briefly stop playing the recorded video file. While playback time, the pause button will show.  Play: Play the recorded video file. While stop playback, the play button will show.
(11) Progress bar	Show the progress of the file being played. You may move the bar to seek at any location of the track. The time is shown in 5 minutes for a segment.
(12) Information	Click it to view NVR/DVR server's model name, S/W version and PCViewer FW version.
(13) Logout	To exit the application.



Appendix Recovery NVR/DVR System through the USB port

Save the firmware on USB pen drive and through the USB port on NVR/DVR unit to recovery the firmware of NVR/DVR system. All the configuration will be erased after recovery process.


1. Download the firmware from website <http://surveillance.aver.com/> >> **Support** >> **download Center**. Then, click **Search** button to search firmware.
2. After download the firmware file, un-zip the file and save on USB pen drive.

[Note] Copy the entire firmware file folder into USB pen drive.

3. Power off the NVR/DVR system.
4. Plug the USB pen drive that contains recovery firmware into USB port that is located in front of NVR/DVR unit(upper one).
5. Then, power on NVR/DVR unit. While the NVR/DVR is reading file, the screen is black. Please wait for a System Recovery Procedure window to show up.
6. When System Recovery Procedure window show up, click **Yes** to continue it. If user wants to cancel the firmware upgrade procedure, click **No**.

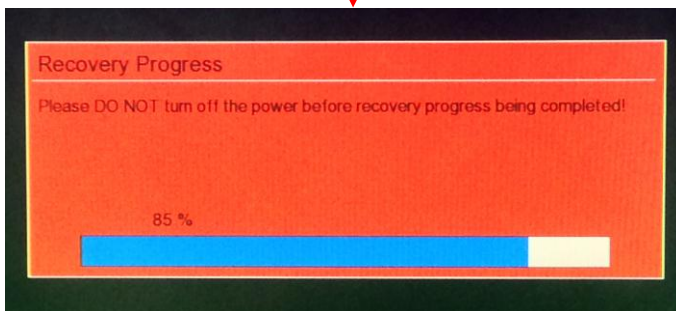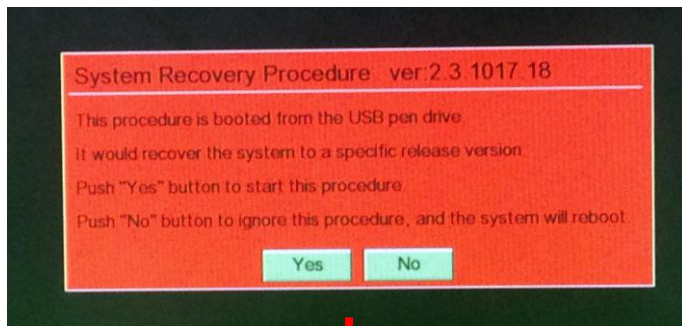

7. After all procedures have completed, the Reboot window is show up. Remove the USB pen drive from NVR/DVR unit and click **Reboot** button to restart NVR/DVR system.

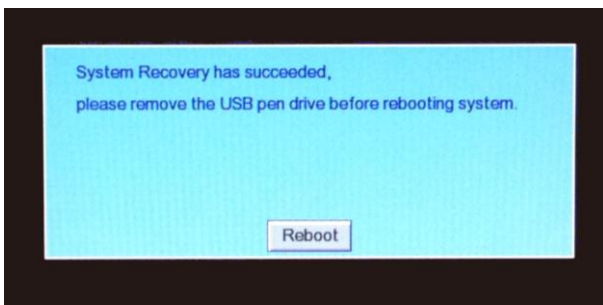

WARRANTY NOTICE

LIMITED WARRANTY

AVer Information, Inc. warrants this product to be free of defects resulting from faulty manufacture or components under the following terms:

WARRANTY LENGTH

Labor is warranted for (3) three year from the date of purchase.

Parts are warranted for (2) two year from the date of purchase.

Replacement products will be warranted for the remainder of the one year warranty period or (30) thirty days, whichever is longer

WHO IS PROTECTED

This warranty is enforceable only by the first consumer purchaser

WHAT IS AND IS NOT COVERED

Except as specified below, this warranty covers all defects resulting from faulty manufacturing of this product. The following are not covered by the warranty.

1. Any product on which the serial number has been defaced, modified, or removed
2. Damage, deterioration, or malfunction resulting from:
Accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, commercial or industrial use, unauthorized product modification, or failure to follow instructions included with the product.
Misapplication of service by someone other than the manufacturer's representative
Any shipment damages (Claims must be made with carrier)
Any other cause which does not relate to a product defect
3. Cartons, cases, batteries, cabinets, tapes, or accessories used with product
4. AVer Information Inc. does not warrant that this product will meet your requirements; it is your responsibility to determine the suitability of this product for your purpose

WHAT WE WILL AND WILL NOT PAY FOR

We will pay labor and material expenses for covered items. However, we will not pay for the following:

1. Removal or installation charges
2. Shipping charges
3. Any incidental charges

EXCLUSION OF DAMAGES

THE MANUFACTURER'S SOLE OBLIGATION AND LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT OF A DEFECTIVE PRODUCT AT OUR OPTION. THE MANUFACTURER SHALL NOT, IN ANY EVENT, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE (INCLUDING, BUT NOT LIMITED TO, DAMAGES RESULTING FROM INTERRUPTION OF SERVICE AND LOSS OF BUSINESS) OR LIABILITY IN TORT RELATING TO THIS PRODUCT OR RESULTING FROM ITS USE OR POSSESSION.

LIMITATIONS OF IMPLIED WARRANTIES

There are no other oral or written warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose. Any implied warranties are limited in duration to one year from the date of purchase

STATE LAW AND YOUR WARRANTY

This warranty gives you specific legal rights, and you may also have other rights granted under state law. These rights vary from state to state

CONTACT INFORMATION

Taiwan & International

No. 157, DA-An Rd., Tucheng Dist., New Taipei City, Taiwan

TEL: 886-2-2269-8535

Web Site: <http://www.aver.com/>