


## How to share the presentation from SfB side to SVC/EVC?

Please follow up the below steps:

### Step 1: Open AVer ScreenShare software

1. Download AVer ScreenShare software from AVer official website Download Center. Download link: <http://communication.aver.com/model/screenshot>
2. Install completed then Click the icon , open AVer ScreenShare software.



 

### Step 2: Sign-in the target EVC/SVC

1. Fill-in the Connection Profile, the default access code is 1234
2. Press OK to SAVE.




### Step 3: Share your PC screen to EVC/SVC

1. Select the connection -> Press “Log in” -> Press “Share” -> Start Sharing.
2. Please narrow down your SfB application to avoid the ScreenShare display includes your camera image.

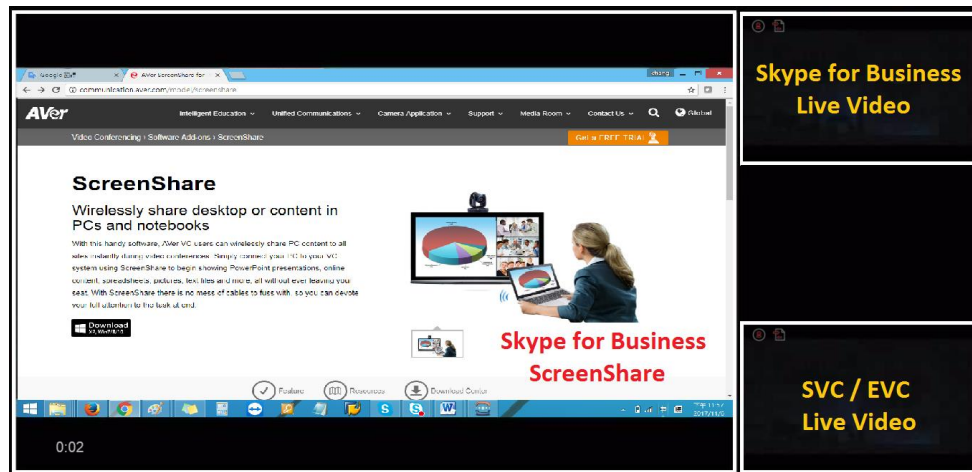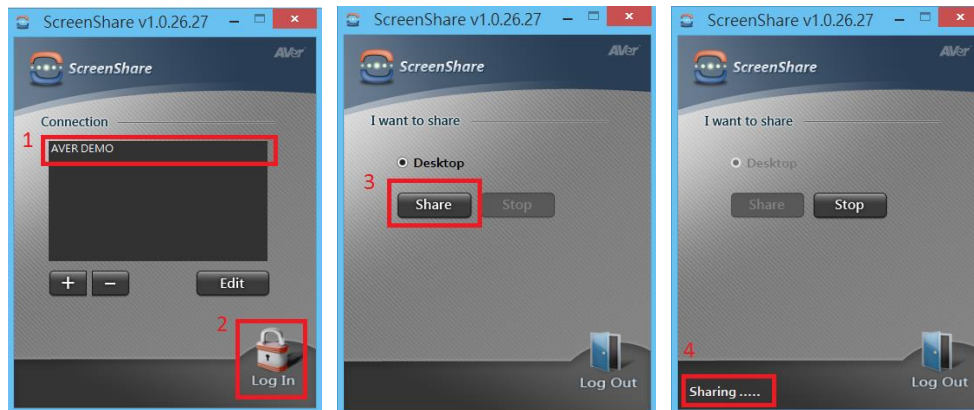

### Step 4: Stop your PC screen share to EVC/SVC

1. Press “Stop” -> Press “Log Out”
- \*The Screen share sharing will be covered by the next presentation source.
  - \*The Screen share does not stop automatically when you leave SfB meetings.

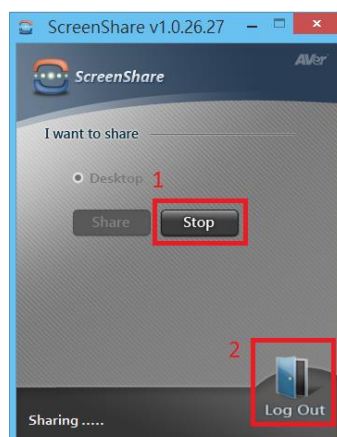


## The sharing performance:

1. Sharing to EVC, up to 720p, 5fps
2. Sharing to SVC, up to 720p, 15fp

## Troubleshooting:

1. Please ensure object EVC/SVC has enable the share function, please go to EVC/SVC side > Settings > General Settings > Administrator > Enable VCLink/Screenshare.

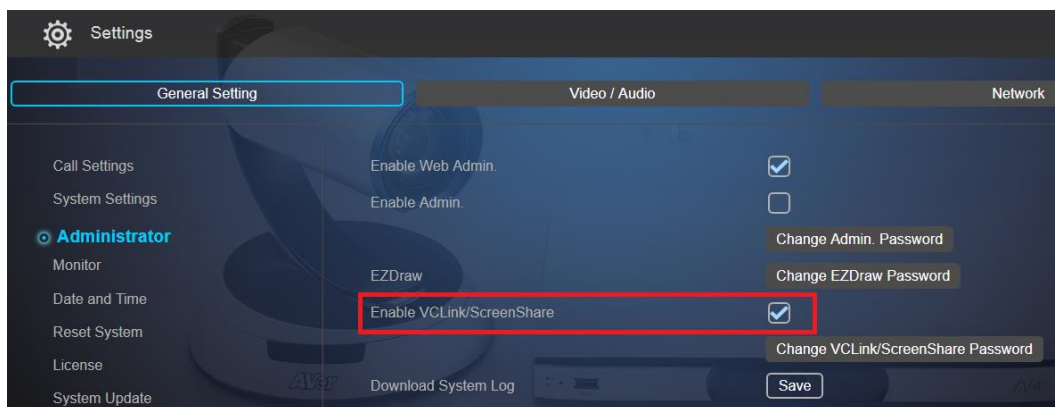

2. When you share object EVC/SVC was installed in external network environment, please open the firewall port 5000 and 5001 in EVC/SVC side for Skype for Business side screen image file share.

The Port	Functions	Type
50000, 50001	Receive ScreenShare streaming from Internet	UDP and TCP