 


AVer

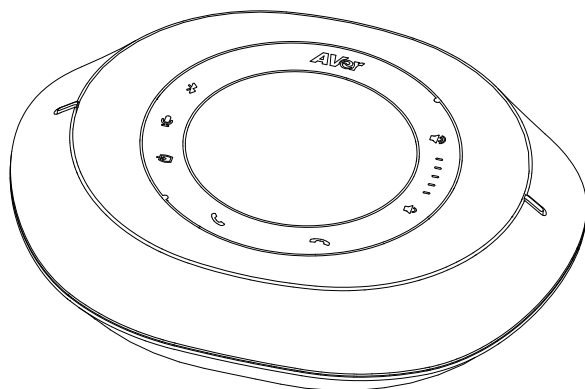

FONE540

Conference Speakerphone

— **User Manual** —

Warning

- To reduce risk of fire or electric shock, do not expose this appliance to rain or moisture. Warranty will be void if any unauthorized modifications are done to the product.
- Do not drop the speakerphone or subject it to physical shock.
- Use correct power supply voltage to avoid damaging speakerphone.
- Do not place the speakerphone where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Europe – EU Declaration of Conformity

This device complies with the essential requirements of the Radio Equipment Directive (2014/53/EU). The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the Radio Equipment Directive (2014/53/EU)

Industry Canada statement:

This device complies with RSS-247 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-247 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

FOR PORTABLE DEVICE USAGE (<20m from body/SAR needed eg. BT dongle, smartphone)**Radiation Exposure Statement:**

The product comply with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

FOR MOBILE DEVICE USAGE (>20cm/low power e.g. AP routers)**Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

PSTI Statement of Compliance

Please refer to the following website: <https://www.aver.com/product-security-advisory>

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVer Information Inc. be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

“AVer” is a trademark owned by AVer Information Inc. Other trademarks used herein for description purpose only belong to each of their companies.

COPYRIGHT

©2026 AVer Information Inc. All rights reserved. | January 9, 2026

All rights of this object belong to AVer Information Inc. Reproduced or transmitted in any form or by any means without the prior written permission of AVer Information Inc. is prohibited. All information or specifications are subject to change without prior notice.

More Help

For FAQs, technical support, software and user manual download, please visit:

Non-USA

Download Center: <https://www.aver.com/download-center>

Technical Support: <https://www.aver.com/technical-support>

USA

Download Center: <https://www.averusa.com/business/support>

Technical Support: <https://averusa.force.com/support/s/contactsupport>

Contact Information

Headquarters

AVer Information Inc.
8F, No.157, Da-An Rd., Tucheng
Dist., New Taipei City 236042,
Taiwan
Tel: +886 (2) 2269 8535

USA Branch Office

AVer Information Inc., Americas
44061 Nobel Drive, Fremont, CA
94538, USA
Tel: +1 (408) 263 3828
Toll-free: +1 (877) 528 7824

Europe Branch Office

AVer Information Europe B.V.
Westblaak 134, 3012 KM,
Rotterdam, The Netherlands
Tel: +31 (0) 10 7600 550

Japan Branch Office

アバー・インフォメーション株式会社
〒160-0023 日本東京都新宿区西新宿
3-2-26 立花新宿ビル 7 階
Tel: +81 (0) 3 5989 0290
お客様サポートセンター(固定電話の
み): +81 (0) 120 008 382

Vietnam Branch Office

Công ty TNHH AVer Information
(Việt Nam)
Tầng 5, 596 Nguyễn Đình Chiểu, P.3,
Quận 3, Thành phố Hồ Chí Minh
700000, Việt Nam
Tel: +84 (0) 28 22 539 211
Hỗ trợ kỹ thuật: +84 (0) 90 70 080 77

Korea Office

한국 에버 인포메이션 (주)
서울시 종로구 새문안로 92
(신문로 1 가,
광화문오피시아빌딩) 1831,
1832 호
Tel: +82 (0) 2 722 8535


Contents

Warning	2
Overview	1
Package Contents	1
Optional Accessories	1
Dimensions	1
Parts Info	2
LED Indicators	3
Installation	4
Audio Signal Receive Range	4
Connections	5
Device Connection	5
Phone Connection	5
Expansion Speakerphone or Expansion Microphone Connection	6
Get Started	7
Make an Audio Call	7
Access the Web Interface	7
AVer Device Utility	7
Room Management	8
Log In for the First Time	9
Web Interface	10
Audio	10
Network	12
System	13


Room Management.....	15
Configure Settings on Room Management	15
Upgrade Expansion Speakerphone Firmware on Room Management.....	16

Overview

 
Package Contents




Speakerphone

 


Power Adapter &
Power Cord

 


Micro USB 2.0 to
Type-A Cable (5 m)

 

 3.5 mm Audio Cable
(0.9 m)




Quick Start Guide

 


Warranty Card

 Optional Accessories





Expansion
Speakerphone with Cable

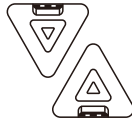 


Expansion
Microphone (x2) with
Cable

* For detail on optional accessories, consult your local dealer.

    
Dimensions

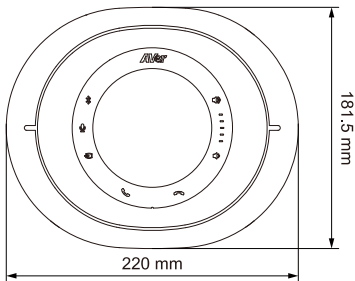



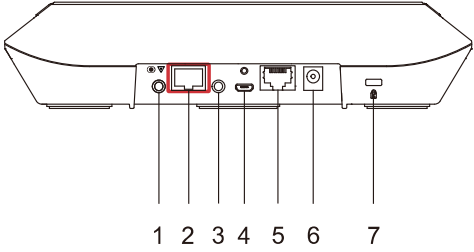

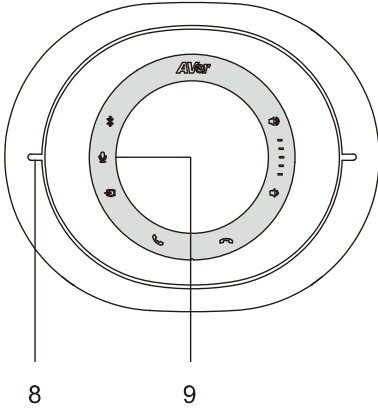


Parts Info



1. Phone In Port
2. Expansion Port (red)
3. Line Out Port
4. Micro USB 2.0 Port
5. Ethernet Port
6. DC Power Jack
7. Kensington Lock
8. Speakerphone Indicators
9. Control Panel



Tap the icons to:




-  Pair, turn Bluetooth on or off
-  Mute, unmute microphone
-  Turn phone in on or off
-  Answer call
-  End call
-  Volume down, tap and hold to mute speaker
-  Volume up, tap to unmute speaker

LED Indicators

- **Speakerphone**

Color	Status
Solid blue	Normal
Solid orange	Standby
Solid red	Microphone muted
No light	Power off


- **Control Panel**

Color	Status	
	Solid white	Bluetooth off
	Solid blue	Bluetooth on
	Solid white	Unmuted
	Solid red	Muted
	Solid white	Phone in off
	Solid blue	Phone in on
	No light	Not connected to phone

Installation

Audio Signal Receive Range

 
The best distance for the speakerphone to receive audio signal is within 7.5 ft radius. When connecting two or more speakerphones, the distance between the speakerphones must be 9 ft.

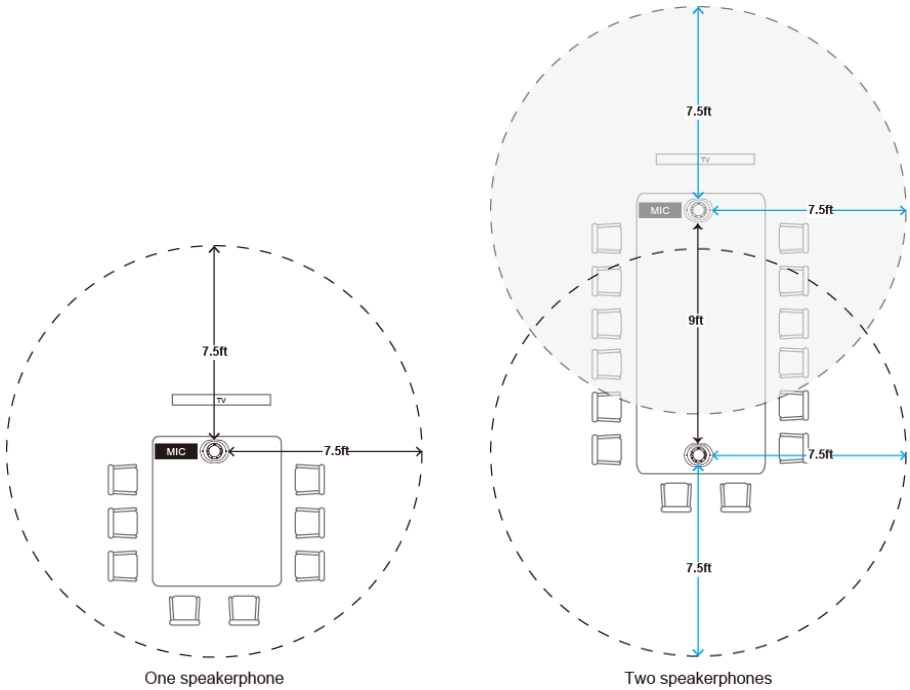


Connections


Device Connection

- **Bluetooth**

 
1. Tap the **Bluetooth** icon  on the control panel to start pairing.
2. Open the Bluetooth settings on your computer and select FONE540 to connect.

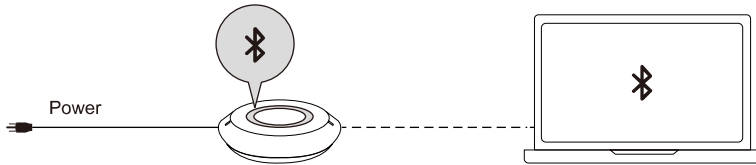


- **Wired**

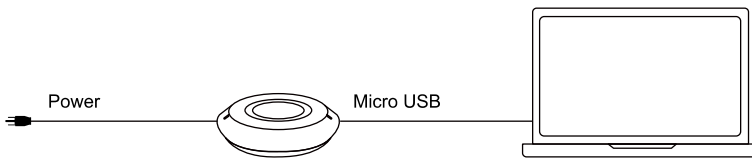 

Phone Connection

 1. Connect a mobile phone to the FONE540 speakerphone with the 3.5 mm audio cable.
2. Tap the **phone in** icon  to turn on phone in (solid blue light), and tap again to turn off phone in (solid white light).
3. When you unplug the audio cable, the indicator will go off.


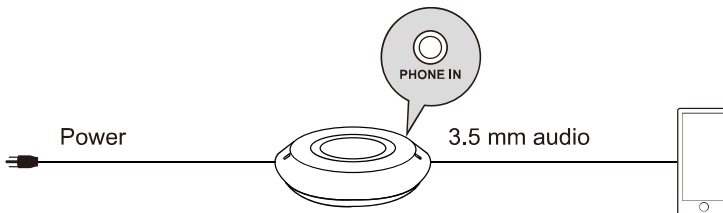


Expansion Speakerphone or Expansion Microphone Connection

FONE540 Speakerphone (firmware version 7000.44 or later) can daisy-chain up to 2 expansion speakerphones or 4 expansion microphones.

Note:

  - When you daisy-chain, the total cable length must be shorter than 40 m. If the total cable length is longer than 20 m, connect the expansion speakerphones to a power source.
- The expansion microphone can't be used alone.

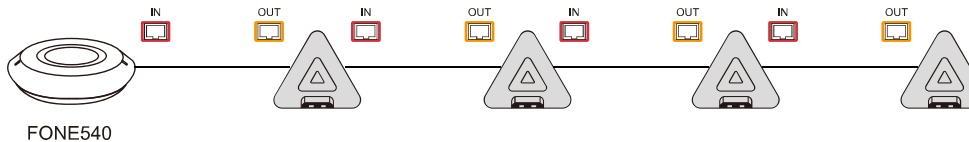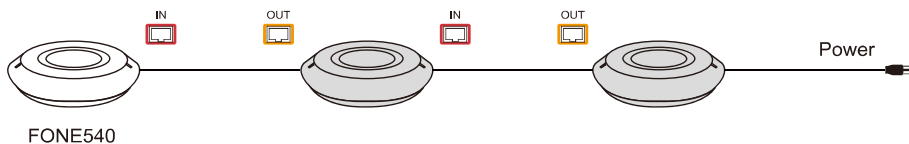

Get Started

Make an Audio Call

The FONE540 is a plug-n-play conference speakerphone. Open your video conferencing software and select the FONE540 for **Audio**.

Access the Web Interface

 
To access the web interface of the speakerphone, you can use any of the following software to find its IP address:

- AVer Device Utility
- Room Management

Note:

- The speakerphone default network is DHCP.
- The speakerphone default password is **aver4321**.

AVer Device Utility

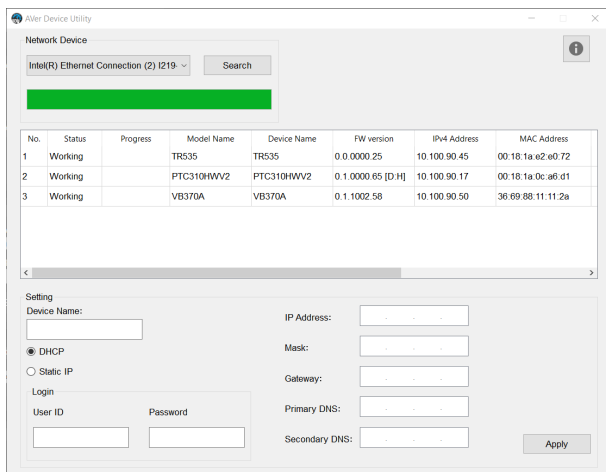

To access the web interface:

1. Download and install AVer Device Utility to your computer from AVer Download Center (<https://www.aver.com/download-center>) and launch the software.

2. Click **Search** to see available devices on the same local area network (LAN).

Note:

 
- Make sure your speakerphone has internet.
- AVer Device Utility and speakerphone must be on the same LAN.

3. Double-click on your speakerphone's IP address in the **IPv4 Address** column to open the web interface in your browser.

To change your network to DHCP or static IP:

1. Select the checkbox of your speakerphone.
2. Enter the changed password in the **Login** field.
3. Select **DHCP** or **Static IP**, then enter your network settings if applicable in the **Settings** section.
4. Click **Apply**.

Room Management

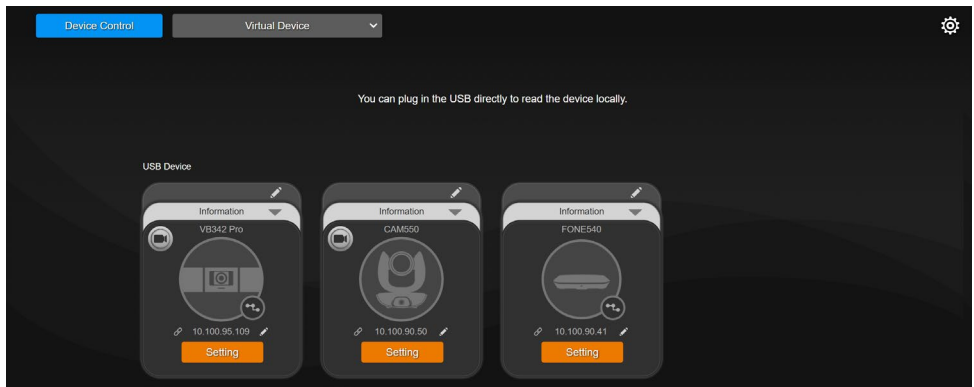


To access the web interface:


1. Download and install Room Management to your computer from AVer Download Center. (<https://www.aver.com/download-center>) and launch the software.

Note:

- Make sure your speakerphone has internet.
- Room Management and speakerphone must be on the same LAN.

2. Connect your device to your computer using the included micro USB cable. Your device should appear under the **Device Control** page.
3. Click the **hyperlink** icon  on the device card to open the web interface in your browser.

To change your network to DHCP or static IP:

1. Click the **pencil** icon  on the device card.
2. Select **DHCP** or **Static IP**, then enter your network settings if applicable.
3. Click **Confirm**.

 
Log In for the First Time

When you log in for the first time, enter the default password **aver4321**. You will be prompted to set up a new account and password. The account and password cannot be the same.

- Account: Use 1-32 characters.
- Password: Use 8-32 characters and a combination of uppercase letters, lowercase letters, numbers, and symbols (! \$ % ' () * + , - . / < = > ? @ [\] ^ _ { } ~).

Web Interface

Audio

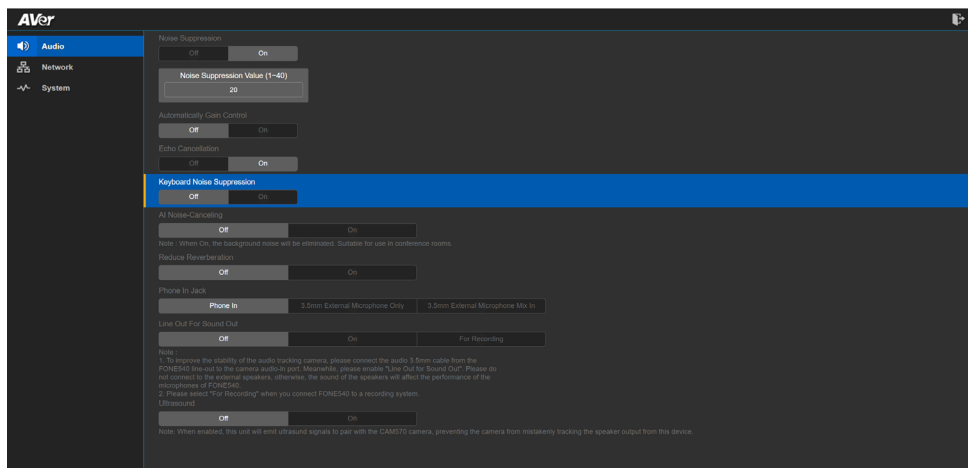


Item	Description
Noisie Suppression	Reduce ambient noise.
Automatically Gain Control	Turn automatic gain control on or off.
Echo Cancellation	Reduce echo.
Keyboard Noise Suppression	Reduce keyboard noise.
AI Noise-Canceling	Reduce the sound of crying babies or barking dogs.
Reduce Reverberation	Reduce the sound reverberation within a room.
Phone In Jack	Select an option based on the device connected to the phone in port and use case: <ul style="list-style-type: none"> Phone In: Connect a smartphone to communicate with remote participants. 3.5 mm Microphone Only: Use only your connected external microphones as audio source. 3.5 mm Microphone Mix In: Use both the FONE540 and your connected external microphones as audio source.
Line Out For Sound Out	To improve the stability of a voice-tracking camera: <ol style="list-style-type: none"> Connect the line out port on the FONE540 and the audio in port on the camera with the 3.5mm audio cable. Turn on Line Out for Sound Out. Do not connect external speakers to the FONE540. Doing so may interfere with the microphones of FONE540.
Ultrasound	Turn on to share ultrasonic signal with the CAM570 camera.

The signal tells the camera what to cancel out so it doesn't accidentally track the sound coming from your own speakers.

To use ultrasound:

1. Turn on **Ultrasound** for either speakerphone via the web interface or Room Management.
2. Select **Ultrasound** as Audio Reference for the camera via Room Management.
3. While playing audio through the speaker, you will see a reception test meter. Red or yellow levels indicate the path between devices is too far or blocked. Adjust the device placement to keep the meter in the green range.

 Network

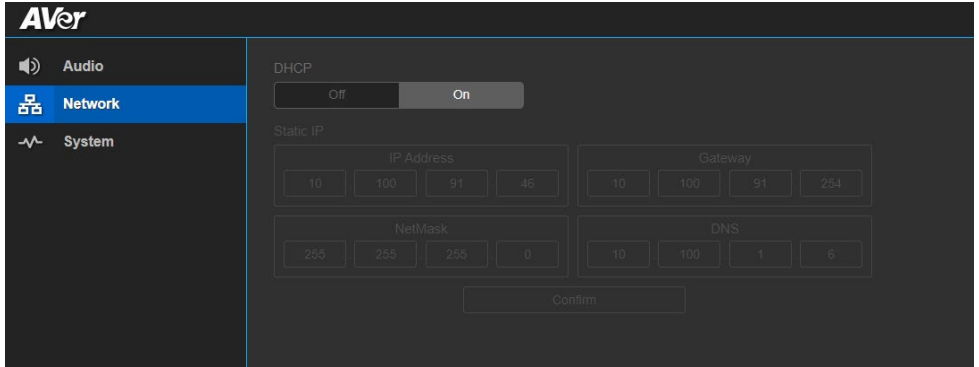

Item	Description
DHCP	Turn DHCP on or off.
Static IP	To assign a static IP address: <ol style="list-style-type: none">1. Turn off DHCP.2. Enter IP Address, Gateway, Net Mask, and DNS.3. Click Confirm.

System

The screenshot shows the AVer system configuration interface. The left sidebar has 'System' selected. The main content area is divided into several sections:

- Language:** Buttons for English (selected), 繁體中文, and 日本語.
- Forget Paired Device:** Off (selected) and On buttons.
- FW Update:** Auto Update and Manual Update buttons.
- Factory Default:** Reset button.
- Regular Reboot:** Schedule Reboot (selected) and No Reboot buttons.
- Note:** Recommend periodically rebooting to maintain smooth operation of the machine.
- Next Reboot Time:** Year / Month / Day (2020 / 1 / 8) and Hour : Minute (18 : 04).
- Confirm:** Button.
- Re-Occur:** 3 Days (selected).
- Note:** When the set time is reached and the device is processing or outputting audio, it will not shut down immediately but will instead check every hour until there is no active audio input or output, at which point it will proceed with the reboot.
- Change Password:** Change WEB Access Password button.
- SSL Certificate:** Import button.
- Date Format:** yyyy-mm-dd (selected), mm-dd-yyyy, dd-mm-yyyy.
- Time Format:** 24-Hour (selected), 12-Hour.
- Time Correction Mode:** Auto, Manual (selected).
- Year / Month / Day:** 2020 / 01 / 08.
- Hour : Minute:** 08 : 04.
- Confirm:** Button.
- Information:**


Model Name	Fone540	Firmware Version	0.0.7008.99	Serial Number	5102545812354
IP Address	10.100.95.67	MAC Address	00:18:1A:CC:BB:AB	Time	2026/1/6 06:05

Item	Description
Language	Select a language for the web interface.
FW Update	<p>Update your speakerphone's firmware.</p> <ul style="list-style-type: none"> Auto Update: Checks and updates online. Manual Update: Update the firmware using a file offline. <p>Note: The speakerphone will reboot and the connection will be lost. Please wait a few minutes and keep the power cable</p>

	connected. Unplugging the cable during this process may damage the device.
Factory Default	Reset your speakerphone to factory default settings. You can choose to keep the IP address by selecting the checkmark. <ul style="list-style-type: none"> ● If you forgot your password, use Room Management to reset the web interface password to the default aver4321.
Regular Reboot	Schedule regular reboots to clear RAM and maintain smooth performance. Reboots occur only when no audio is streaming. <ul style="list-style-type: none"> ● Next Reboot Time: Click the pencil icon to enter a specific reboot time. When finished, click Confirm. ● Re-Occur: Select the reboot frequency from the drop-down list. The default setting is to reboot every 3 days.
Next Reboot Time	
Re-Occur	
Change Password	Change the web interface password. <ul style="list-style-type: none"> ● If you forgot your password, use Room Management to reset the web interface password to the default aver4321.
SSL Certificate	Upload an SSL certificate.
Date Format	Select a date format.
Time Format	Select a time format.
Time Correction Mode	Select a time correction mode. <ul style="list-style-type: none"> ● Auto: Enter your Network Time Protocol (NTP) server URL to synchronize the clock. The default NTP server is located in the US. ● Manual: Enter the date and time to set up the clock.
Information	Displays your speakerphone information such as IP address.

Room Management

 
Configure Settings on Room Management

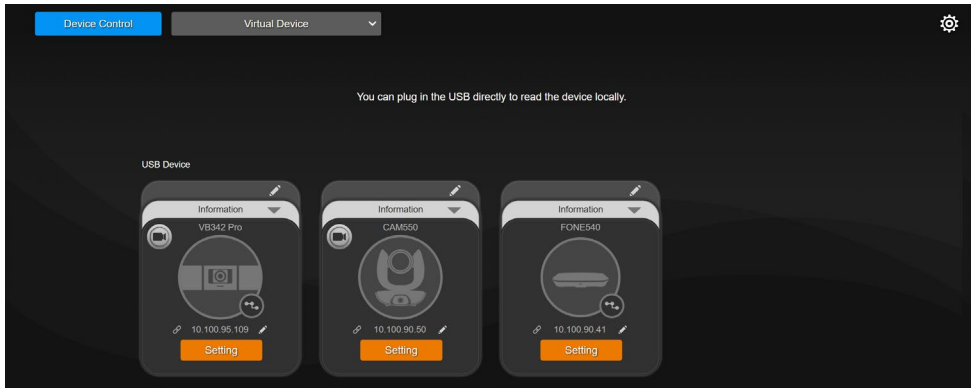

1. Download Room Management from AVer Download Center to your computer and launch the application.
2. Connect your device to your computer using the included micro USB cable. Your device should appear under the **Device Control** page.
3. Click **Setting** to control audio settings.
For additional information, please refer to Room Management user manual.



 Upgrade Expansion Speakerphone Firmware on Room Management

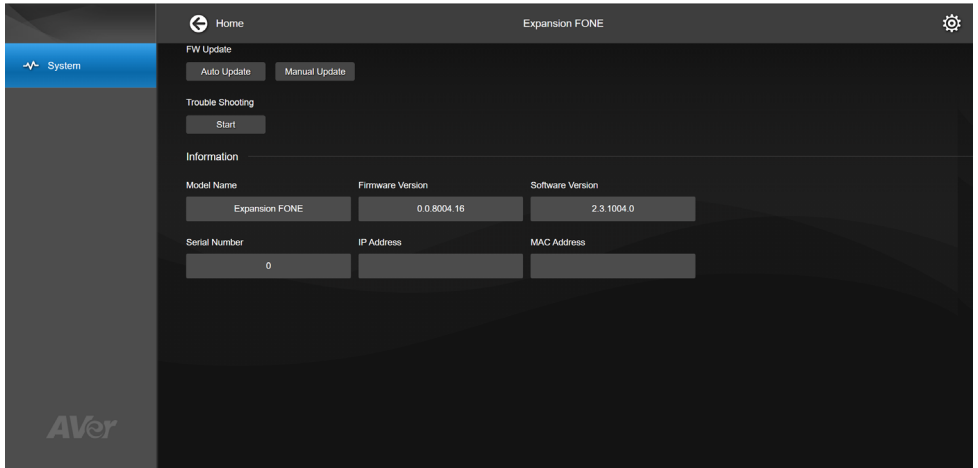

1. Download Room Management from AVer Download Center to your computer and launch the application.
2. Connect the expansion speakerphone to your computer using the included micro USB cable, then connect the expansion speakerphone to a power source with the power cord. Your device should appear under the **Device Control** page.
3. Click **Setting** to upgrade firmware.

