

VB342 Pro

4K PTZ Video Bar (Conference Camera)

— User Manual —

Warning

- Hold the bottom of the camera with both hands to carry the camera.
Whether the camera is connected to power or not, do not grab any part of the lens or the lens holder to carry the camera or adjust pan and tilt.
- Do not drop the camera or subject it to physical shock.
- Ensure the power supply voltage is correct before using the camera.
- Do not place the camera where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- To reduce the risk of fire or electric shock, do not expose the camera to rain or moisture.
Warranty will be voided if any unauthorized modifications are done to the camera.

Federal Communications Commission Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

PSTI Statement of Compliance

Please refer to the following website: <https://www.aver.com/product-security-advisory>

VCCI-A

この装置は、クラス A 機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

(注)本製品同梱の電源ケーブルは、本製品同梱の電源アダプタでのみ使用してください。
本製品同梱の電源ケーブルは、他の電気機器では使用できません。

사 용 자 안 내 문
이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전자파간섭의 우려가 있습니다.
※ 사용자 안내문은 "업무용 방송통신기자재"에만 적용됩니다.

기종별	사용자안내문
A 급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVer Information Inc. be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

“AVer” is a trademark owned by AVer Information Inc. Other trademarks used herein for description purpose only belong to each of their companies.

COPYRIGHT

©2024 AVer Information Inc. All rights reserved. | September 6, 2024
All rights of this object belong to AVer Information Inc. Reproduced or transmitted in any form or by any means without the prior written permission of AVer Information Inc. is prohibited. All information or specifications are subject to change without prior notice.

More Help

For FAQs, technical support, software and user manual download, please visit:

Non-USA

Download Center: <https://www.aver.com/download-center>

Technical Support: <https://www.aver.com/technical-support>

USA

Download Center: <https://www.averusa.com/business/support>

Technical Support: <https://averusa.force.com/support/s/contactsupport>

Contact Information

Headquarters

AVer Information Inc.
8F, No.157, Da-An Rd., Tucheng
Dist., New Taipei City 23673, Taiwan
Tel: +886 (2) 2269 8535

USA Branch Office

AVer Information Inc., Americas
44061 Nobel Drive, Fremont, CA
94538, USA
Tel: +1 (408) 263 3828
Toll-free: +1 (877) 528 7824

Europe Branch Office

AVer Information Europe B.V.
Westblaak 134, 3012 KM,
Rotterdam, The Netherlands
Tel: +31 (0) 10 7600 550

Japan Branch Office

アバー・インフォメーション株式会社
〒160-0023 日本東京都新宿区西新宿 3-2-26 立花新宿ビル 7 階
Tel: +81 (0) 3 5989 0290
お客様サポートセンター(固定電話のみ): +81 (0) 120 008 382

Vietnam Branch Office

Công ty TNHH AVer Information
(Việt Nam)
Tầng 5, 596 Nguyễn Đình Chiểu, P.3,
Quận 3, Thành phố Hồ Chí Minh
700000, Việt Nam
Tel: +84 (0) 28 22 539 211
Hỗ trợ kỹ thuật: +84 (0) 90 70 080 77

Contents

Warning	2
Overview	1
Package Contents	1
Optional Accessories	2
Parts Info	3
LED Indicator	4
Remote Control	5
Shortcuts and Compound Keys	6
Connection	7
Device Connection	7
USB 2.0 and USB 3.1 Resolution and Frame Rate	7
Bluetooth Dongle Connection	8
Ethernet Connection	9
Expansion Speakerphone Connection (Optional)	9
Expansion Microphone Connection (Optional)	10
RS-232 Connection	11
RS-232 Port Pin Definition	11
Mini Din 6 to D-Sub 9 Cable Pin Definition	11
Connect VB342 Pro to a Camera Controller or Computer	12
Installation	13
Wall Mount Installation	13
TV VESA Mount Installation (Optional)	14
Get Started	17
Make a Video Call	17
Access the Web Interface	17
AVer IP Finder	17
PTZApp 2	19

Web Interface 21

PTZ Control 21

 Overview of PTZ Control 21

Save, Load and Clear a Preset 22

Add and Delete Available Presets (Presets 10-127) 22

Setting 23

 Overview of the Floating Live View 26

 Tracking Mode 27

 Gesture Control 29

Video Format 31

Network 32

System 33

Audio 35

PTZApp 2 36

 Configure Settings on PTZApp 2 36

 Configure Preset Link for Voice Tracking 37


EZLive 39

Overview

Package Contents



 
VB342 Pro



Power Adapter &
Power Cord



 
Remote Control



USB 2.0 Type-B to
Type-A Cable (5 m)



 USB Type-A to
Type-C Adapter



Wall Mount
Bracket (x2)



M5 x 8 mm
Wall Mount Screw (x4)

1/4"-20 L=7.5 mm
Tripod Screw (x3)



Drill Template

 
Optional Accessories




Expansion Speakerphone
10m/ 20m w/ Cable



Expansion Microphone
10m/ 20m w/ Cable




USB 3.1 Extender 10
m/20 m/30 m

 

HDMI Cable



 USB 3.0 Type-B to Type-A
Cable (3 m)



Mini Din 6 to RS-232
Adapter Cable



Audio-out Converter




TV VESA Mount



Bluetooth Dongle

* Optional accessories may vary based on the country or region where sold.

Parts Info

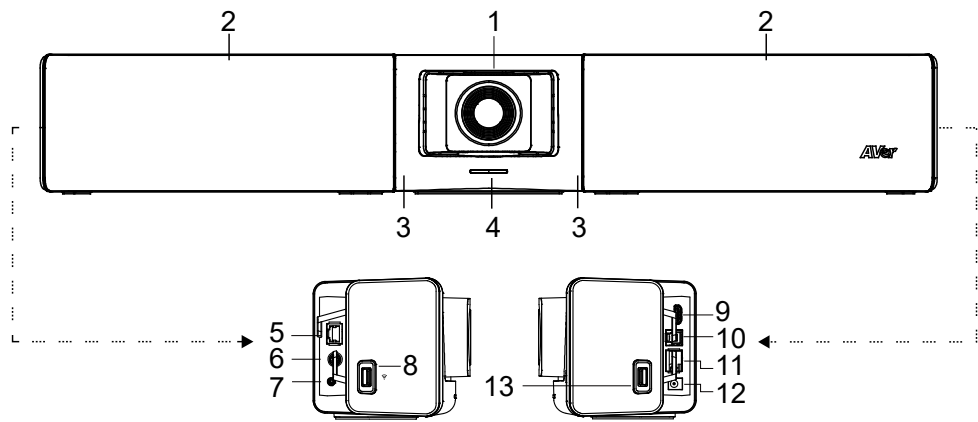

- | | |
|---|---|
| 1. Lens | 7. Phone In (Default) / Audio Out Port* |
| 2. Microphone Array (10 Built-in Microphones) | 8. USB 2.0 Type A Port (for Bluetooth Dongle) |
| 3. IR Sensor | 9. HDMI Output Port (to TV)*** |
| 4. LED Indicator | 10. USB 3.0 Type B Port (for Computer) |
| 5. Expansion Audio Port | 11. RJ-45 Ethernet Port |
| 6. RS-232 Port | 12. DC Power Jack |
| | 13. USB 2.0 Port**** |

*To use the audio out function for HA system, set up with AVer PTZApp 2 software and purchase audio-out converter (TRS female to TRRS male) from AVer.

**The HDMI output port supports USB display.


***Do not use a USB extender cable when connecting your Mac computer to the VB342 Pro via the USB 2.0 port. Your Mac computer may not detect the VB342 Pro.

LED Indicator

Color	Status
Solid red	Start-up
Solid orange	Standby
Solid white	Normal
Solid blue	Streaming over USB on PTZApp 2
Solid red	Microphone muted
Solid white	Call on hold
Solid purple	Active call
Blinking white or blue (based on previous status)	Incoming call
Blinking white, blue or purple (based on previous status)	Call waiting
Blinking blue for 2 seconds	Gesture control is activated
Blinking blue for 4 seconds	Performing a gesture command

Remote Control

Your device may come with one of the following remote controls.

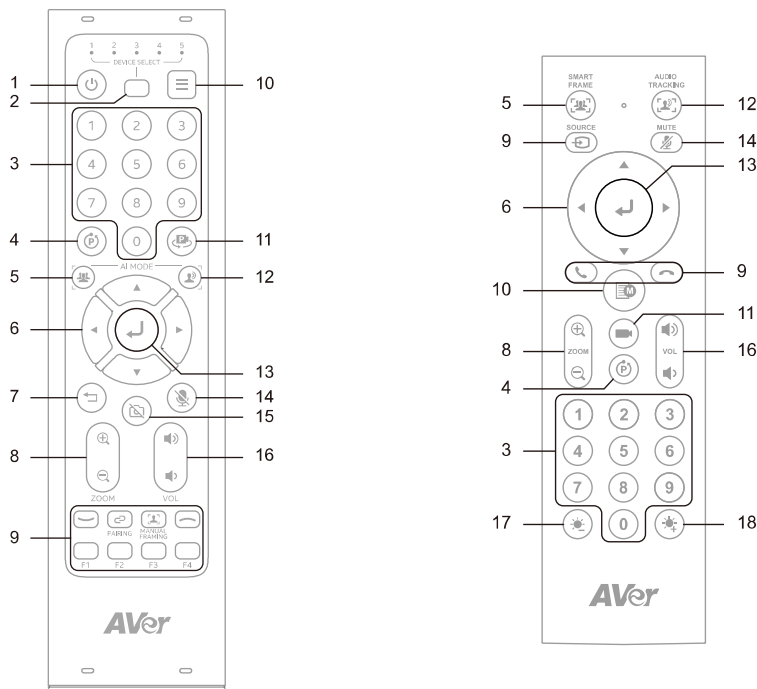

Name	Function
1. Power	N/A
2. Camera Select	No selection is required by default to operate the camera. To assign a number to a camera, go to Setting > Camera Binding on the web interface or in PTZ App2.
3. Number Buttons	- To save a preset: Press and hold a Number (0-9). - To load a preset: Press a Number (0-9).
4. Compound Key	Open compound keys guide. Refer to <Shortcuts and Compound Keys> for details.
5. SmartFrame	Press to frame entire group on screen. Press and hold to cycle through tracking modes. To hide the SmartFrame icon , go to the Setting tab > On-Screen Menu > Off on the web interface or in PTZ App2.


6. Pan-Tilt Control	Pan and tilt direction control.
7. Back	N/A
8. Zoom In/Out	Zoom in or out.
9. Function Buttons	• Call/Answer: Start or answer a call. • Pairing: Turn Bluetooth on or off. Refer to <Bluetooth Dongle Connection> for details. • Manual Framing: N/A • Hang Up: End call. • F1-F4: N/A
10. Menu	Open the gesture control guide.
11. Load Preset	With each press, cycle through defined presets.
12. Audio Tracking	Press and hold to cycle through audio tracking modes (Audio Tracking > Audio Framing > Presentation Mode > Audio Fence > Off).
13. Enter	Press to display current AI function on closed caption and autofocus once.
14. Mute	Mute or unmute microphone.
15. Camera Off	N/A
16. Volume	Volume up or down.
17. Brightness -	Decrease the brightness.
18. Brightness +	Increase image brightness.

Shortcuts and Compound Keys

Press	To
 + 	Turn wide dynamic range (WDR) on or off.
 + 	Turn Save Preset on or off.
 + 	Turn RTMP streaming on or off.
 + 	Enter sleep mode when not streaming over USB.

Connection

Device Connection

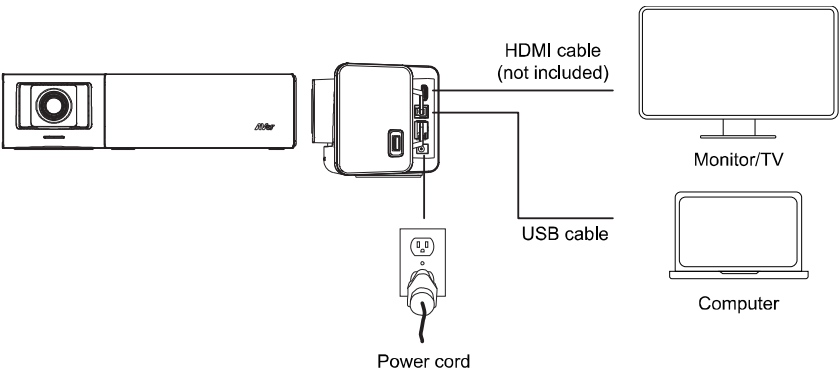

1. Connect your VB342 Pro to a computer using the included USB 2.0 cable, and to a power outlet using the included power cord. Use the cable management slot to secure and manage cables.
2. Connect your VB342 Pro to a TV or monitor using an HDMI cable.


Note: Windows® 7 OS users may require a USB display driver. You can install the USB display driver with AVer PTZApp 2 software: Click **Setting** on your camera card > **System** > **Install Driver of USB Display** > **Start**.

USB 2.0 and USB 3.1 Resolution and Frame Rate

USB 2.0		USB 3.1	
YUV	M-JPEG	YUV	M-JPEG
- 640x480 or less resolution, up to 30fps - 720p, up to 10fps	- Up to 4k/30fps - 1080p/60fps	- Up to 1080p/30fps - 720p/60fps	- Up to 4k/30fps - 1080p/60fps

Bluetooth Dongle Connection


Use VB342 Pro as a mobile phone's external audio device.

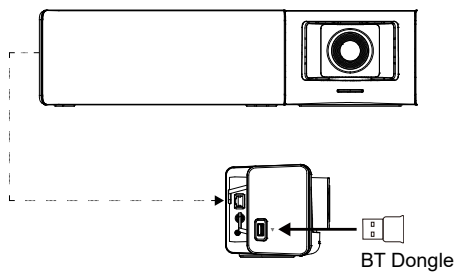

1. Plug the Bluetooth dongle into the USB 2.0 Type-A port before connecting to power.
2. Press the **Pair** button  on the remote control or turn on Bluetooth in PTZApp 2.
3. Open the Bluetooth setting on your phone and select VB342 Pro to connect.


Ethernet Connection

Connect to Ethernet and access your camera's web interface.

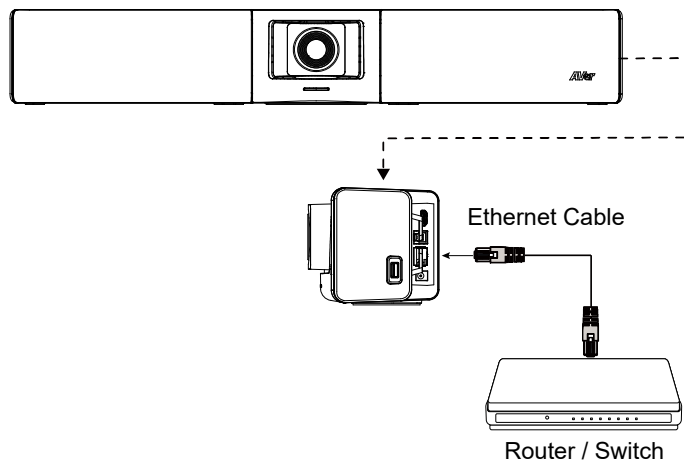

Expansion Speakerphone Connection (Optional)


Connect the expansion audio port (red) on your camera to the expansion port (yellow) on the expansion speakerphone using the included RJ-45 cable.

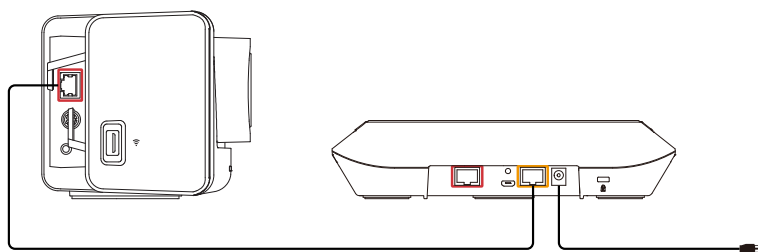

- The expansion speakerphone comes with a 10 m or 20 m cable.
- When the expansion speakerphone is connected to a video bar, the expansion speakerphone can't be daisy-chained to other expansion speakerphones.

Expansion Microphone Connection (Optional)


Connect the expansion audio port (red) on your camera to the mic out port (yellow) on the expansion microphone using the included RJ-45 cable.

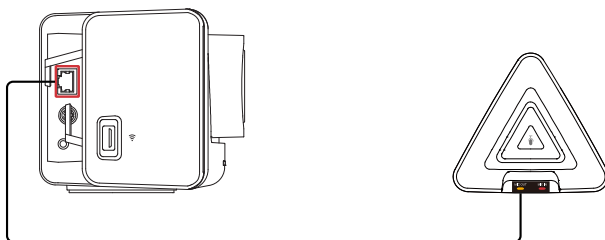


- The expansion microphone comes with a 10 m or 20 m cable.
- When the expansion microphone is connected to a video bar, the expansion microphone can't be daisy-chained to other expansion microphones.

RS-232 Connection

RS-232 Port Pin Definition

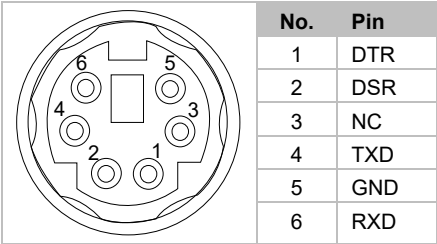


Mini Din 6 to D-Sub 9 Cable Pin Definition

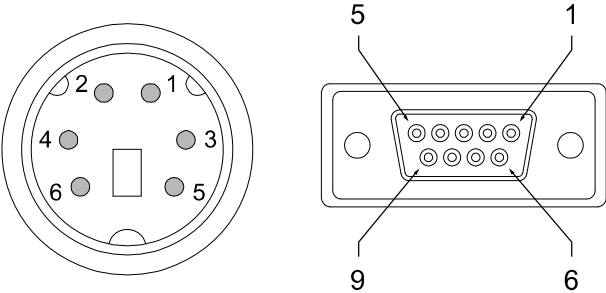

Connect VB342 Pro to a Camera Controller or Computer

- Connection using AVer mini din 6 to RS-232 adapter cable

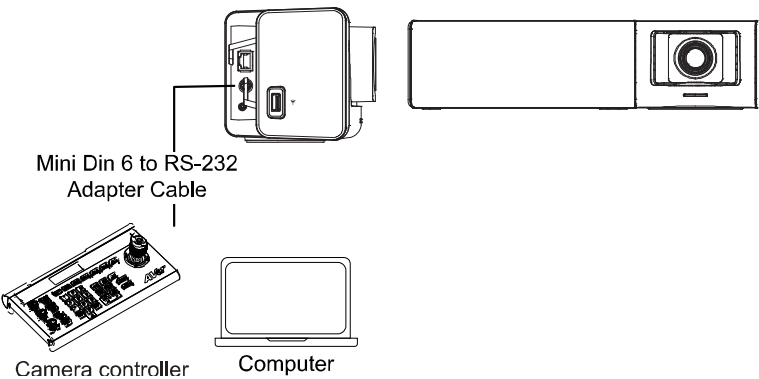


- Pin connection without using AVer Mini Din 6 to RS-232 adapter cable

Mini DIN6		DB9
Camera		Camera controller, PC
1. DTR	→	6. DSR
2. DSR	→	4. DTR
4. TXD	→	2. RXD
6. RXD	→	3. TXD
		1. DCD
		5. GND
		7. RTS
		8. CTX
		9. RI


Installation

Wall Mount Installation

1. Level and tape the drill template to the wall. Drill pilot holes through the template and into the wall.

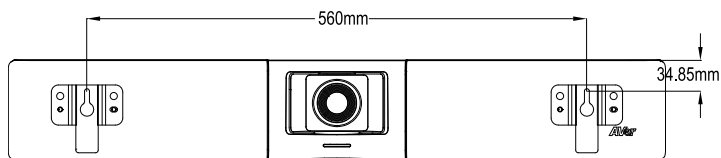

2. Remove the template and Insert anchors.
Cement wall: M4 x 20 mm self-tapping screws (x2) + plastic conical anchors
Wooden wall: M4 x 20 mm self-tapping screws (x2)
3. Insert the included wall mount screws through the wall mount brackets and tighten to the rear panel of the camera.

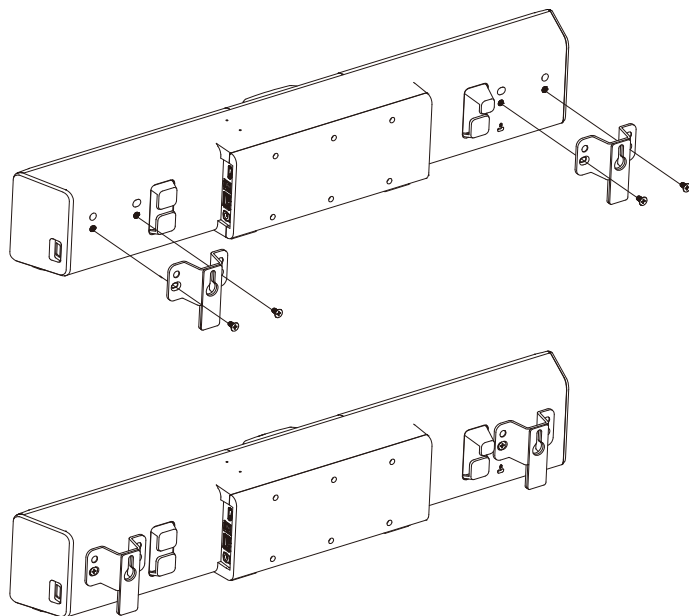

4. Align the wall mount brackets to the screws on the wall and hang the camera.


TV VESA Mount Installation (Optional)

Package Contents:




- | | |
|---|---|
|  Screw(M5*10) x 2 |  Silicone washer x 2 |
|  Screw(M6*15) x 4 |  Metal washer x 2 |
|  Screw(M6*20) x 4 |  Washer(M6) x 4 |
|  Screw(M8*20) x 4 |  Washer(M8) x 4 |
|  Screw(M8*30) x 4 | |


1. Fix the screw (M5*10) with silicone washer in suitable holes (1~5).

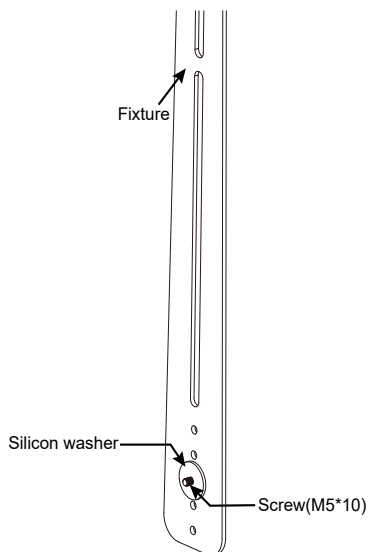


2. Secure the fixture on the rear side panel of the camera. Don't screw tight at this stage. You can select among the two screw holes for screwing the fixtures.

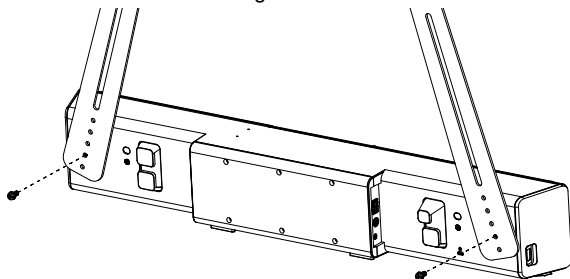


3. Place the metal washers on the mount holes of TV.
[Note] If users do not need to install the mount rack of TV, just skip step 3 to 5 and go to step 6.

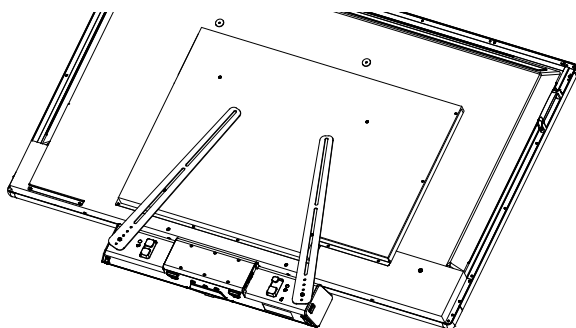


4. Place mount rack of TV on top of fixture.

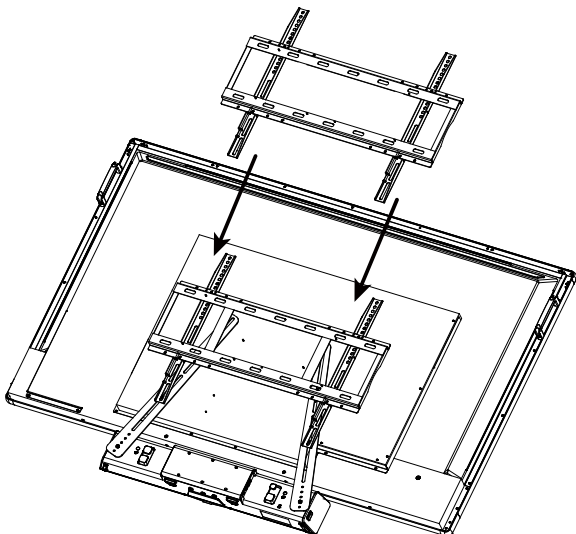



5. Secure the mount rack and fixture on the TV. Please do not screw tight at this stage. Then, adjust the mount rack and fixture to an appropriate position if needed. Finally, tightly screw all screws.

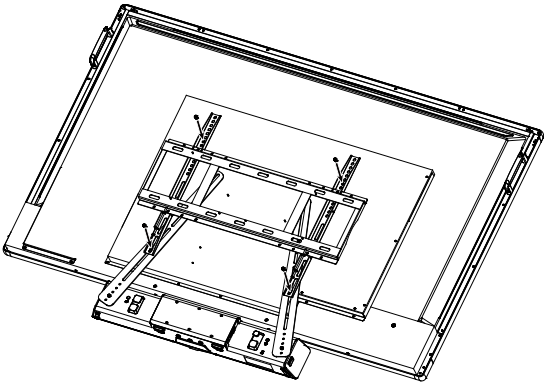

6. If users don't need to install mount rack of TV, then, secure the fixture on the TV. Then, adjust the fixture to an appropriate position if needed. Finally, tightly screw all screws.

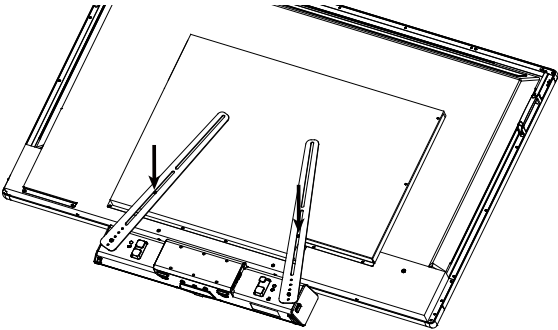

7. The camera can be mounted on top or bottom of the TV. Both ways of installation are the same and please follow the steps described above.

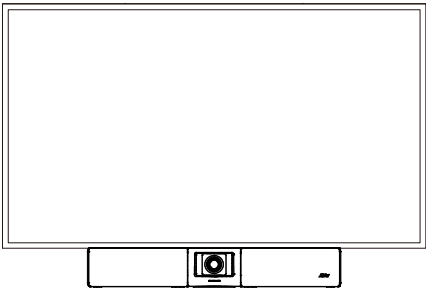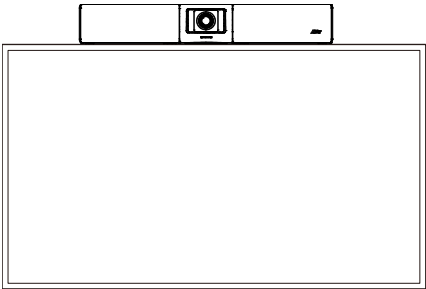

Get Started

Make a Video Call

The VB342 Pro is a plug-n-play video bar. Open your video conferencing software and select the VB342 Pro for **Video** and **Audio**.

Access the Web Interface

To access the web interface of the video bar, you can use any of the following software to find its IP address:

- AVer IP Finder
- PTZApp 2

Note:

- The video bar default network is DHCP.
- The video bar default password is **aver4321**.

AVer IP Finder

AVer IP finder for USB-CAM v1.0.1002.3

Network Device

Realtek PCIe GbE Family Controller

Search

Login

Password

Network Setting

Search Result

Select All

No.	Status	Progress	Model Name	Device Name	FW version	IPv4 Address	MAC Address	IPv6 Address
☐ 1	Working		CAM550	CAM550	0.0.8004.71	10.100.90.75:80	00:18:1a:60:4...	[]:80
☐ 2	Working		CAM570	CAM570	0.0.8102.36	10.100.90.79:80	36:69:88:11:1...	[]:80
☐ 3	Working		FONE700	FONE700	0.0.8300.81	10.100.90.172:80	00:18:1a:60:3...	[]:80
☐ 4	Working		ProAV CAM-P1	ProAV CAM-P1	0.0.9900.09	10.100.90.63:80	00:18:1a:0c:b...	[]:80
☐ 5	Working		VB342 Pro	VB342 Pro	0.0.7804.06	10.100.90.68:80	00:18:1a:0c:b...	[]:80

Settings

☐ DHCP

☐ Static IP

Start IP Address:

End IP Address:

Subnet Mask:

Gateway:

Primary DNS:

*Auto search will start after settings changed!

☐ Don't start auto search this time!

Apply

To access the web interface:

1. Download and install AVer IP Finder to your computer from AVer Download Center (<https://www.aver.com/download-center>) and launch the software.
2. Click **Search** to see available devices on the same local area network (LAN).

Note:

- Make sure your video bar has internet.
 - AVer IP Finder and video bar must be on the same LAN.
3. Double-click on your video bar's IP address in the **IPv4 Address** column to open the web interface in your browser.

When you log in for the first time:


Enter the default password **aver4321**. You will be prompted to set up a new account name and password.

- Name: Use 8-10 characters.
- Password: Use 8-10 characters and a combination of uppercase letters, lowercase letters, numbers, and symbols (* ! % + = , - _ ^ / @ . ~ # \$). The password cannot be the same as the username.

To change your network to DHCP or static IP:

1. Select the checkbox of your video bar
2. Enter the changed password in the **Login** field.
3. Select **DHCP** or **Static IP**, then enter your network settings if applicable in the **Settings** section.
4. Click **Apply**.


PTZApp 2

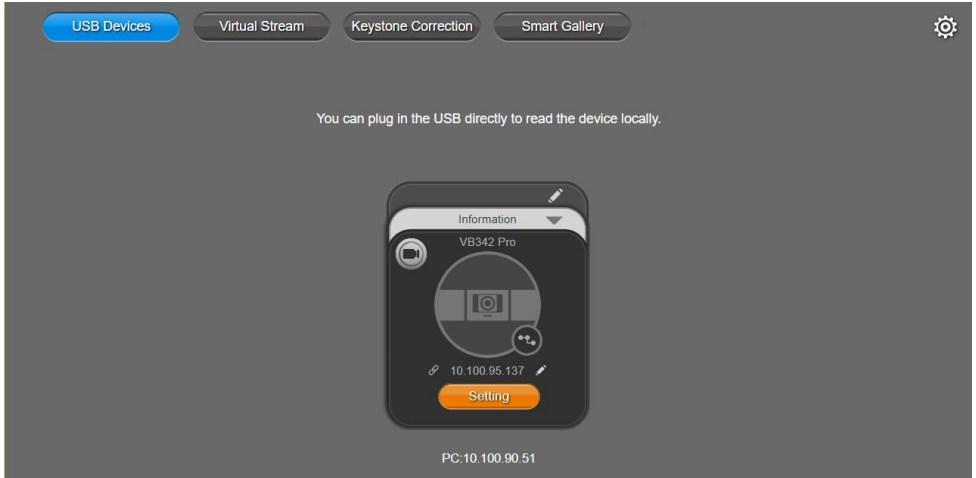

1. Download and install PTZApp 2 to your computer from AVer Download Center. (<https://www.aver.com/download-center>) and launch the software.

Note:

- Make sure your video bar has internet.
 - PTZApp 2 and video bar must be on the same LAN.
 - Recommended browser: Chrome 76 and above, Firefox 69 and above.
2. Connect your video bar to your computer using the included USB cable. When PTZApp 2 detects a USB-connected video bar, a device card will appear under the **USB Devices** page.
 3. Click the pencil icon  on the device card to change the default static IP **192.168.1. 168** to DHCP.
 4. Select **DHCP** and click **Confirm**.

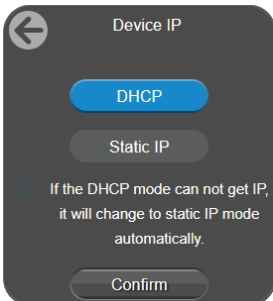

5. Click the link icon  on the device card to access the web interface.

When you log in for the first time:


Enter the default password **aver4321**. You will be prompted to set up a new account name and password.

- Name: Use 8-10 characters.
- Password: Use 8-10 characters and a combination of uppercase letters, lowercase letters, numbers, and symbols (* ! % + = , - _ ^ / @ . ~ # \$). The password cannot be the same as the username.

Web Interface

PTZ Control

Overview of PTZ Control

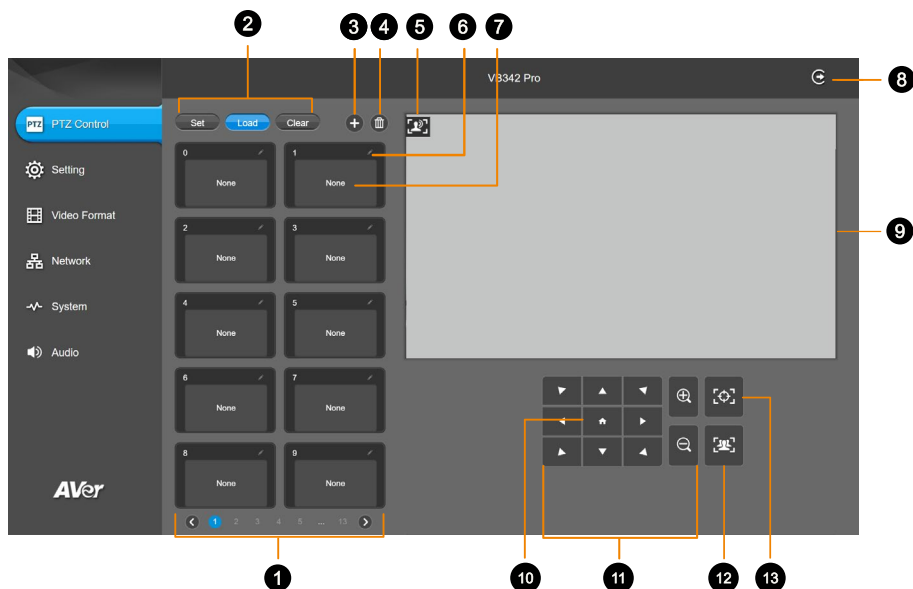

1. Presets 0-9

2. Preset Function Buttons

Save, load and clear a preset.

3. Add Available Presets

There are 10 available presets 0-9 by default. Click the plus icon to add up to 128 available presets.

4. Delete Available Presets

Click a trashcan icon to delete available presets.

5. Audio Tracking and Presentation Mode Icon

6. Name

Click the pencil icon to name a preset.

7. Preset Thumbnail

8. Log Out

Log out of your account and close the web interface.

9. Live View

10. Pan-Tilt Reset

Reset the pan-tilt position to the center.

11. Directional Pad and Zoom

12. SmartFrame

Click the SmartFrame icon  to frame entire group on screen.

Note: The SmartFrame icon  appears on video when turned on. To hide the icon, go to the **Setting** tab > **On-Screen Menu** > **Off** on the web interface.

Click to autofocus once.

Save, Load and Clear a Preset




To save a preset:

1. Use the pan, tilt and zoom controls to position your camera.
2. Select **Set**, then a preset number to save that position.
3. Select **Yes** when prompted. A thumbnail of your preset will appear.


Add and Delete Available Presets (Presets 10-127)

There are 10 available presets 0-9 by default.

Click the plus icon to add up to 128 available presets, or click the trashcan icon to delete available presets.

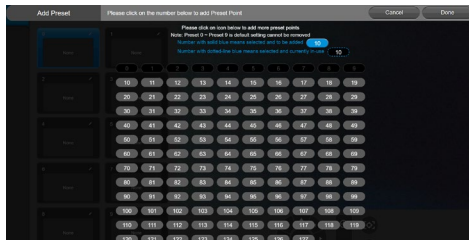

Add

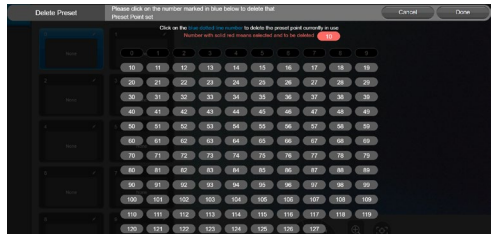

Delete


To add an available presets:

1. Select the plus icon, then select the preset numbers you want to add.
2. Select **Done**.

To delete an available preset:

1. Select the trashcan icon, then select the preset numbers you want to delete.
2. Select **Done**.

Setting

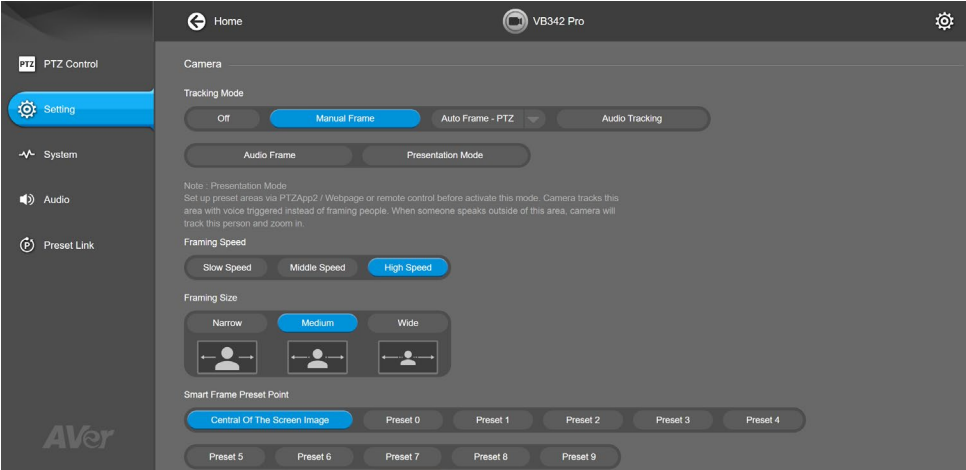


Camera

Item	Description
Tracking Mode	Select a tracking mode. Refer to < Tracking Mode > for details.
Framing Speed	Select a duration before auto frame. • Slow: 5 seconds before auto frame. • Middle: 3 seconds before auto frame. • High: 1 second before auto frame.
Framing Size	Select a framing size to include or remove excess space on either side of the subject.
SmartFrame Preset Point	Select a position as the detection area when using SmartFrame to frame entire group on screen.
Audio Tracking Response Speed	Select an audio tracking response speed. Slower response speeds can be useful for ignoring short utterances during audio tracking. • Slow Speed: 4 second before audio tracking. • Middle Speed: 2 seconds before audio tracking. • High Speed: Fastest audio tracking response speed.
Audio Tracking Idle Interval	Select a duration for the camera to frame entire group after it detects no sound. If Off is selected, the camera will stay at the last position.
Gesture Control	Turn Gesture Control on or off. • The effective distance is up to 5 meters. • Click the question mark icon to see a list of gesture commands or refer to <Gesture Control> for details.

Audio Fence	When Audio Fence is turned on: • Select a narrow or wide audio fence to capture only the voices within it. • You won't be able to use pan, tilt, zoom controls, SmartFrame and tracking modes.
Audio Fence Mode	
Autofocus	Automatically focus after each pan, tilt and zoom, or automatically focus continually.
Camera Focus	Adjust the focal length manually by dragging the slider or automatically.
Home Position	Select a home position that your camera moves to when powered on.
Sleep Position	Select a home position that your camera moves to when entering standby mode.
Sleep Timer	Set a duration before standby mode. • When transmitting video over USB, RTSP or RTMP, the camera won't enter standby mode.
On-Screen Menu	Turn On-Screen Menu on or off. • Off: Displays no icons or notifications. • On: Displays icons or notifications. • Load Preset Off: Displays all icons and notifications except load preset.
Save Preset	Turn Save Preset on or off. • When Save Preset is turned off, you won't be able to save presets using the remote control, web interface, hotkeys or VISCA commands.

Image

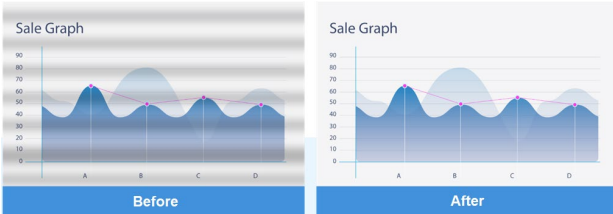
Item	Description
Image Flip	Flip the image vertically.
Image Mirror	Flip the image horizontally.
True WDR	Turn True Wide Dynamic Range (WDR) on or off.
Flicker Decrease on IFP / Monitor	Turn Flicker Decrease on IFP / Monitor on or off. 
Frequency	Select a frequency.
White Balance	Select a white balance setting: • Manual: Adjust the white balance manually by dragging the slider. • Auto: Adjust the white balance automatically.
Noise Reduction	Select a noise reduction level.
Brightness	Select a brightness level.
Sharpness	Select a sharpness level.
Saturation	Select a saturation level.
Low Light Compensation	Turn Low Light Compensation on or off.
Low Resolution under 720p (except 848*480)	Enable to transmit video in 720p or lower.
Enlarge Total Zoom Up to 15x	Enable or disable Enlarge Total Zoom Up to 15x.
Video Frame Rate	Select a video frame rate.

RS-232

Item	Description
ADDR	Select your settings to set up an RS-232 connection.
Baud Rate	
Protocol	
VISCA over IP	

Overview of the Floating Live View

- The floating live views opens automatically in the **Setting**, **Video Format**, **Network** and **System** tabs.
- To open the floating live view again after closing, click on the camera icon on top of **Setting**, **Video Format**, **Network** and **System** tabs.

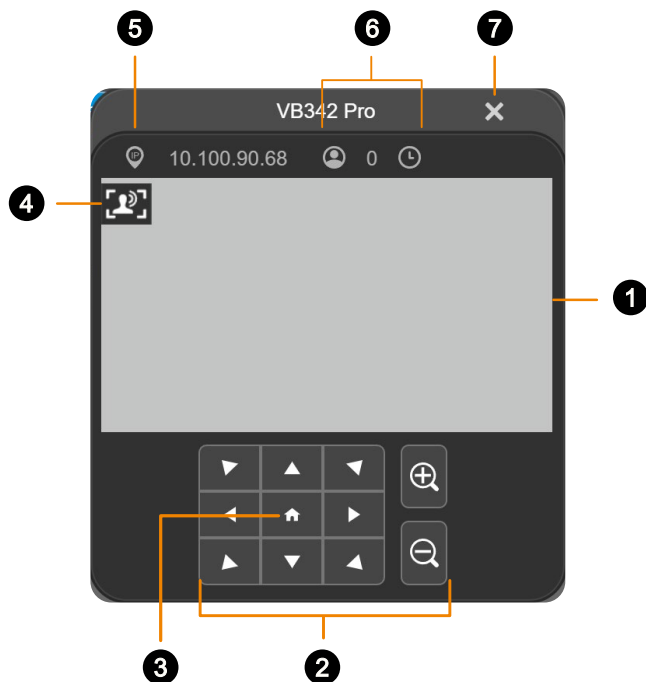

1. Live View

2. Directional Pad and Zoom

3. Pan-Tilt Reset

Reset the pan-tilt position to the center.

4. Audio Tracking and Presentation Mode Icon

5. IP Address

6. Head Count and Video Transmission Duration


Click the head count icon to display head count and the duration of your video transmission. Click the icon again to hide the information.

7. Close

Click the X icon to close the floating live view and stop transmitting video.


Tracking Mode

Manual Frame

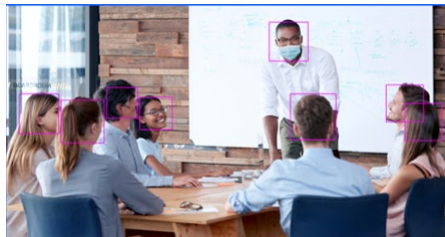

Frames manually using the SmartFrame button  to frame entire group on screen once.

Auto Frame

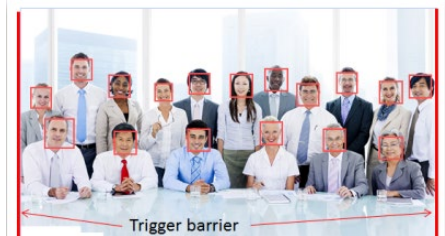

Frames entire group on screen automatically using true pan, tilt and zoom (True PTZ) or electronic pan, tilt and zoom (ePTZ).

If no one is in view, the camera will default to preset 0.

- The camera auto frames every time a subject enters or leaves the screen.
- If Auto Frame happens too frequently, set a duration before auto frame in the **Setting** tab > **Framing Speed**.

Audio Tracking (True PTZ)

Frames active speaker on screen.

If no one is speaking, the camera will stay at the last position or default to group framing after your selected **Audio Tracking Idle Interval**.

- You can set a duration before the camera default to group framing in the **Setting** tab > **Audio Tracking Idle Interval**.
- You can select a group framing detection area in the **Setting** tab > **SmartFrame Preset Point** (defaults to the center of the screen).

Audio Frame (ePTZ)

Frames active speaker on screen.

If no one is speaking, the camera will stay at the last position or default to group framing after your selected **Audio Tracking Idle Interval**.

- You can set a duration before the camera default to group framing in the **Setting** tab > **Audio Tracking Idle Interval**.
- You can select a group framing detection area in the **Setting** tab > **SmartFrame Preset Point** (defaults to the center of the screen).

Presentation Mode

A combination of presets (not Preset Framing) and Audio Tracking.


Uses presets when active speaker is speaking inside of presets; uses Audio Tracking and frames active speaker on screen when they are speaking outside of presets.

If no one is speaking, the camera will stay at the last position or default to group framing after your selected Audio Tracking Idle Interval.

- Make sure you have defined presets for audio tracking. Presets 1-9 are available. Preset 0 defaults to the home position.
- You can set a duration before the camera default to group framing in the Setting tab > Audio Tracking Idle Interval.
- You can select a group framing detection area in the **Setting** tab > **SmartFrame Preset Point** (defaults to the center of the screen).

Gesture Control


- Turn on Gesture Control in the **Setting** tab > **Gesture Control**.
- The effective distance is up to 5 meters.

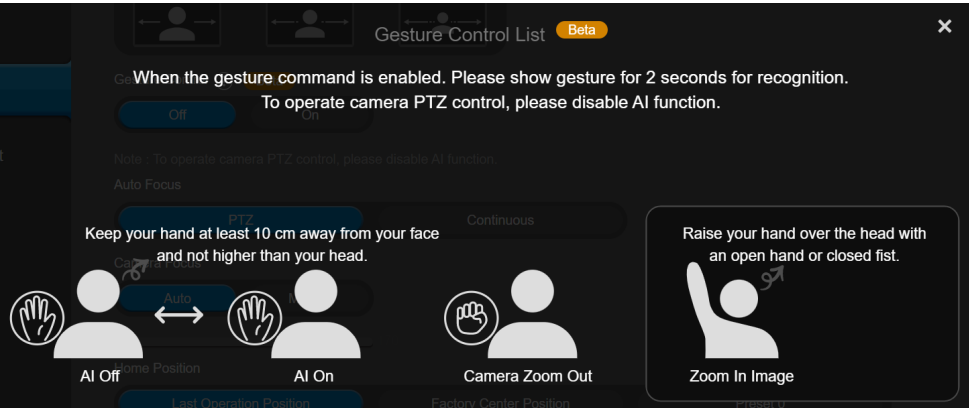

Gesture	Description
 Turn Auto Frame on or off	Place your hand next to your face with your palm open and facing the camera for 2-3 seconds to turn Auto Frame on or off. Keep your hand 10cm away from your face.
 Zoom In	Raise your hand over your head for 2-3 second to zoom in. • Tracking Mode will be turned off when you zoom in or out with gestures. To turn on Tracking Mode again, do one of the following: 1. Use gesture to turn on Auto Frame. 2. Long press the SmartFrame button  on the remote control to switch between tracking modes. 3. Web interface: go to the Setting tab > Tracking Mode. 4. PTZApp 2: go to the Setting tab > Tracking Mode.
 Zoom Out	Place your fist next to your face with your fist facing the camera for 2-3 seconds to zoom out. Keep your fist 10cm away from your face. • Tracking Mode will be turned off when you zoom in or out with gestures. To turn on Tracking Mode again, do one of the following: 1. Use gesture to turn on Auto Frame. 2. Long press the SmartFrame button  on the remote control to

	switch between tracking modes. 3. Web interface: go to the Setting tab > Tracking Mode. 4. PTZApp 2: go to the Setting tab > Tracking Mode.
--	--

Video Format

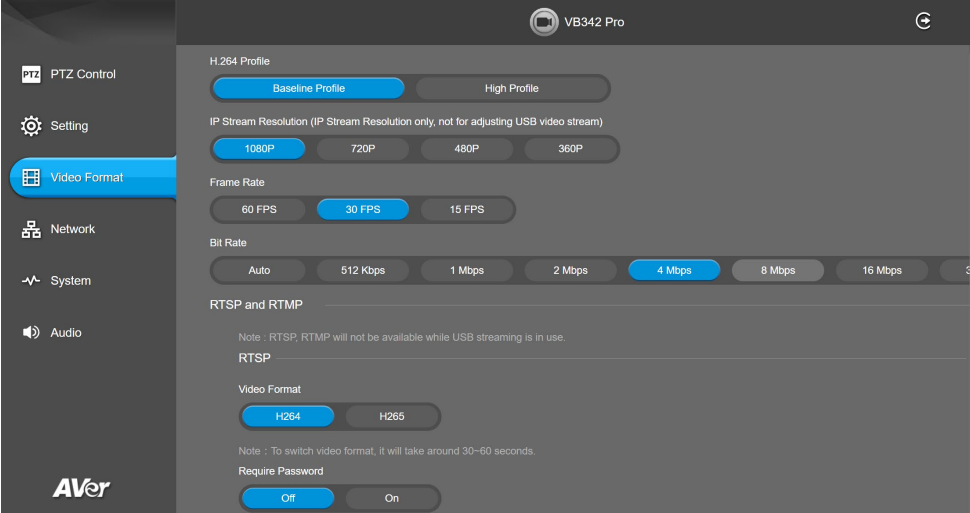

Item	Description
H.264 Profile	Select a profile for streaming live.
IP Stream Resolution	Select a resolution for streaming over IP.
Frame Rate	Select a frame rate.
Bit Rate	Select a bit rate. To live stream on Facebook, we recommend a bit rate under 4Mbps.

RTSP and RTMP

Item	Description	
RTSP	Video Format	Select a video format.
	Require Password	Turn Require Password on or off.
	Set RTSP Access Password	Set or change an RTSP access password.
	RTSP URL Address	Displays RTSP URL address.
RTMP	Server URL	Copy and paste your video platform's server URL and stream key.
	Stream Key	
	Start Using RTMP	Click Start to start streaming, Stop to stop streaming.

Network

PTZ PTZ Control

Setting

Video Format

Network

System

Audio

VB342 Pro

Hostname

VB342-PRO

Static IP DHCP

IP Address

10.100.90.68

Gateway

10.100.90.254

NetMask


255.255.255.0

DNS

10.100.1.6

Item	Description
Hostname	Click the pencil icon to edit a hostname. Use upper and lowercase letters and numbers.
Static IP, DHCP	Set up static IP or DHCP. If Static IP is selected, enter your network settings to set up a static IP connection and click Confirm .


System

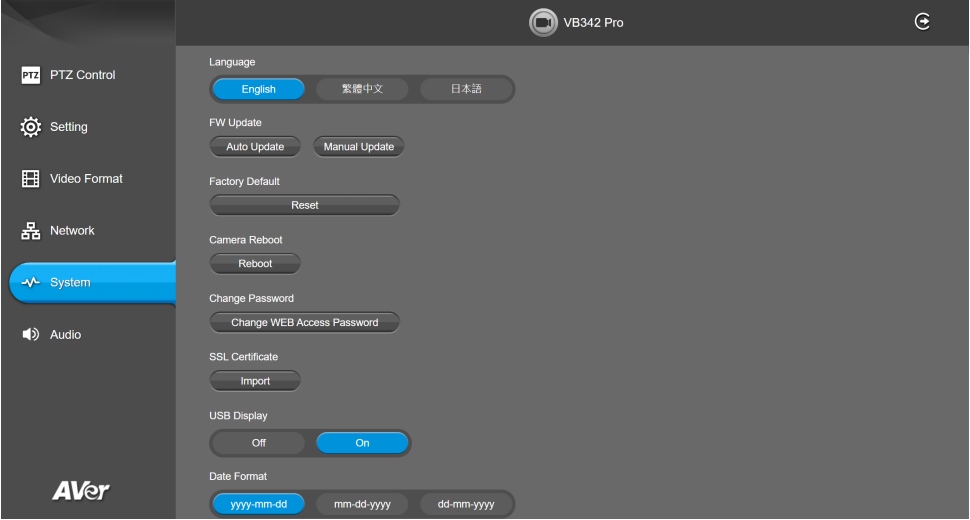

Item	Description
Language	Select a language for the web interface.
Firmware Update	Update your camera's firmware. • Auto Update: Checks and updates online. • Manual Update: Update the firmware using a file offline. Note: The camera will reboot and the connection will be lost. Please wait a few minutes and keep the power cable connected. Unplugging the cable during this process may damage the device.
Factory Default	Reset your camera to factory default settings. You can choose to keep the IP address by selecting the checkmark. • If you forgot your password, use PTZApp 2 to reset the web interface password to the default aver4321.
Camera Reboot	Reboot the camera.
Change Password	Change the web interface password. • Use 8-10 characters, upper and lowercase letters, numbers and symbols (* ! % + = , - _ ^ / @ . ~ # \$). • If you forgot your password, use PTZApp 2 to reset the web interface password to the default aver4321.
SSL Certificate	Upload an SSL certificate.
USB Display	The HDMI output port supports USB display. Turn USB display on or off.
Date Format	Select a date format.
Time Format	Select a time format.

Time Correction Mode	Select a time correction mode. • Auto: Enter your Network Time Protocol (NTP) server URL to synchronize the clock. The default NTP server is located in the US. • Manual: Click the pencil icon to set up the clock.
Allow Providing of Anonymous Usage Data	Opt-in or opt-out of providing usage data.
Information	Displays your camera information such as IP address.


Audio

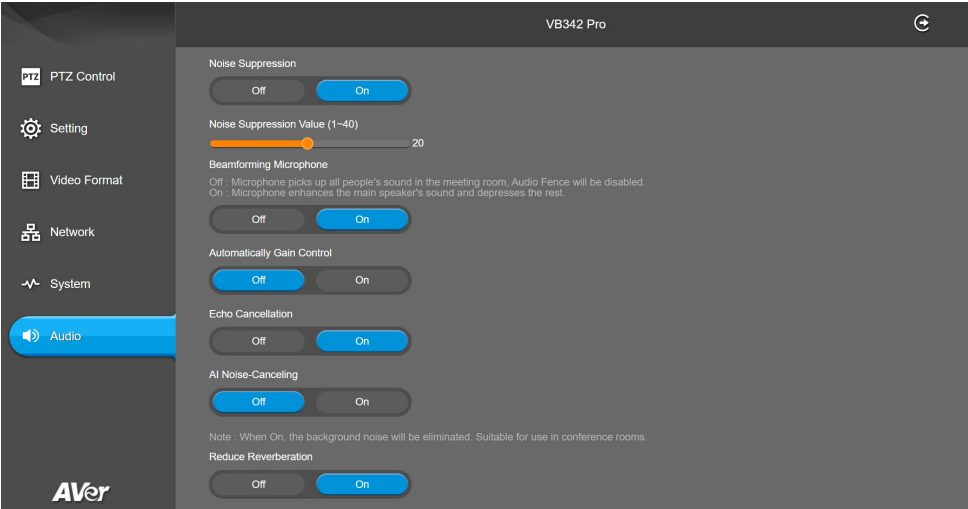

Item	Description
Nosie Suppression	Reduce ambient noise. Adjust the noise suppression value by dragging the slider.
Beamforming Microphone	Reinforce active speaker's voice and reduce ambient noise.
Automatically Gain Control	Turn automatic gain control on or off.
Echo Cancellation	Reduce echoes.
AI Noise-Canceling	Reduce the sound of keyboard typing.
Reduce Reverberation	Reduce reverberation within a room.
Phone In Jack	Select an option based on the device connected to the phone in port and use case: • Phone In: Connect a phone to communicate with remote participants. • 3.5 mm Microphone Only: Use only your connected external microphones as audio source. • 3.5 mm Microphone Mix In: Use both the expansion speakerphone and your connected external microphones as audio source. • Line Out: Designed for hearing augmentation system. - Please purchase an audio-out adapter (TRS female to TRRS male) from AVer. - Do not connect external speakers. Doing so may interfere with the built-in speakes and microphones.

PTZApp 2

Configure Settings on PTZApp 2

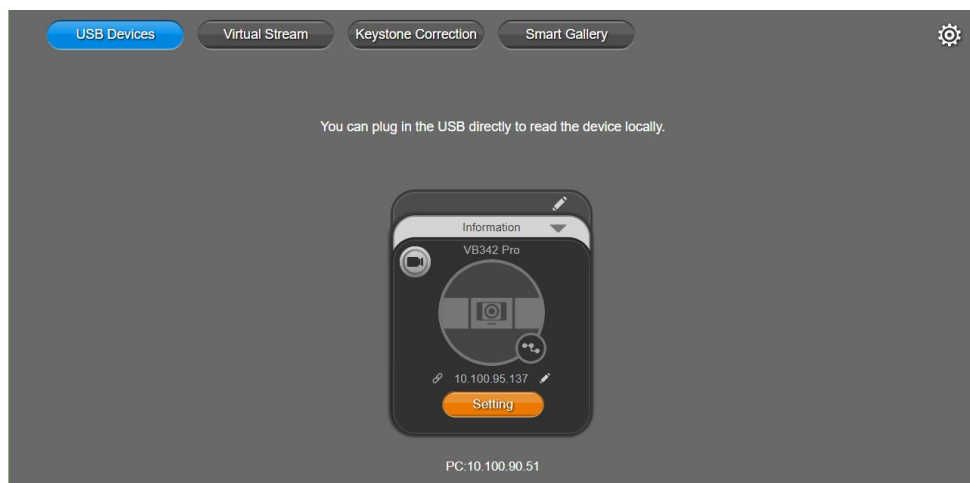


1. Download PTZApp 2 from AVer Download Center to your computer and launch the application.
2. Connect the VB342 Pro to your computer with the included USB cable. Your device should appear under the **USB Devices** page.
3. Click the **Setting** button to control audio settings.

Configure Preset Link for Voice Tracking

Frame the active talker with voice-tracking functionality by linking AVer cameras with third-party microphone systems (supported models).




- 1. Go to **Preset Link** tab, then enter **Set Name** and **Microphone IP** for your microphone.
- 2. Turn on **Link** > select **Model**.

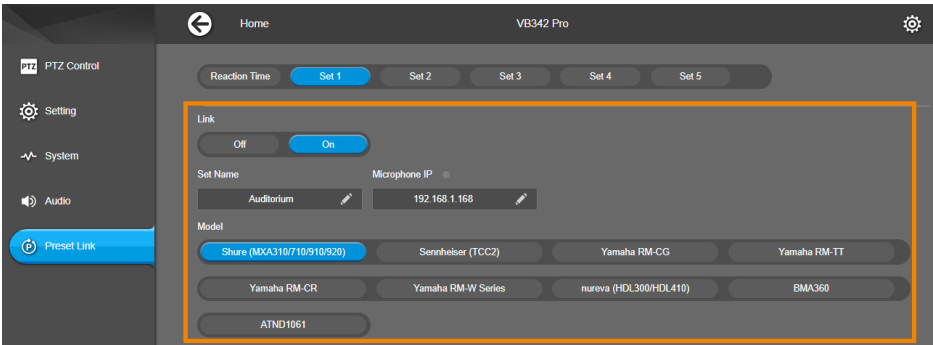

- 3. Pair microphone channels with presets in **Preset Binding for Microphone Channel**.

4. Set up **Reaction Time**:

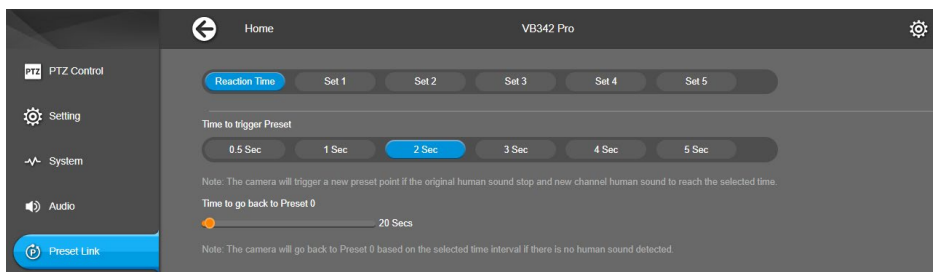

- **Time to trigger Preset:** Select an interval for the camera to go to a preset after sound detection.
- **Time to go back to Preset 0:** Select an interval for the camera to go to preset 0 after no sound detection.

EZLive

Please go to <https://www.aver.com/download-center> to download the AVer EZLive software. After downloading, double-click on the file and follow the on-screen instructions to complete the installation.

During a video call, EZLive can help user to do:

- (1) Camera ePTZ
- (2) Volume control for the speaker connected
- (3) Capture camera's still images
- (4) Record video
- (5) Live stream to YouTube, Livehouse.in, USTREAM, etc.
- (6) Camera Zoom in/out
- (7) Capture PC screen shot
- (8) Record PC screen video
- (9) Set up livestream
- (10) Open file management to retrieve photos and video files
- (11) Livestream setting
- (12) Drawing tool.

