



AVer Vandal Dome Type Camera


Installation Guide




Table of Contents

| | |
|---|-----------|
| IMPORTANT SAFEGUARD | 1 |
| PACKAGE CONTENTS | 2 |
| OPTIONAL ACCESSORIES | 2 |
| IP CAMERA PARTS | 3 |
| IP CAMERA INSTALLATION | 4 |
| DEPLOYING NETWORK | 4 |
| Network Connection via Ethernet Switch | 4 |
| Connect the power adapter to power jack of camera..... | 4 |
| Power over Ethernet Connection | 5 |
| CONNECTING EXTERNAL DEVICES TO I/O TERMINAL BLOCK | 6 |
| INTERNAL CONNECTION DIAGRAM OF DI/DO | 6 |
| MOUNTING THE IP CAMERA | 7 |
| FOCUSING THE IP CAMERA WITH BNC MONITOR | 8 |
| INSERTING MICROSD CARD TO SYSTEM..... | 9 |
| RESETTING HARDWARE | 10 |
| TECHNICAL SPECIFICATIONS | 11 |
| SF2121H-DVR | 11 |
| FV2028-T/FV2028-TM..... | 15 |
| FV3028-RT/FV3028-RTM | 19 |
| FV2028/FV3028 | 23 |
| FCC NOTICE (CLASS B) | 27 |
| NOTICE | 27 |
| WARNING | 27 |
| GOVERNING LAW AND YOUR RIGHTS | 29 |


Important Safeguard

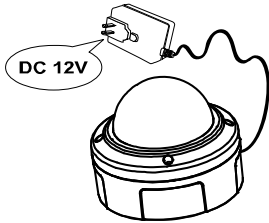

Do not use power supply with different voltage other than DC 12V / PoE.

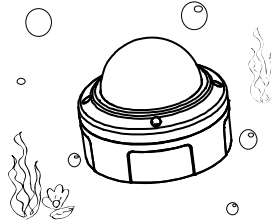


Do not submerge the unit in the water.

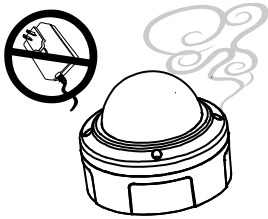


Unplug the power of this unit as soon as smoke or unusual odor is detected.



Unplug the power supply before cleaning. Use only a lens cleaning cloth and never use benzene, thinner, or other solvent for cleaning.

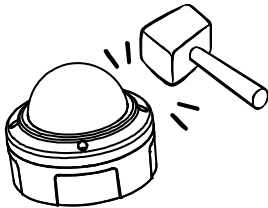

Do not attempt to service this unit by yourself. Always refer all servicing to qualified service personnel.

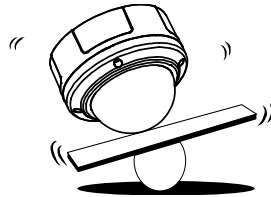


Do not place the unit in unsteady surface and also do not drop the unit.



Keep the IP camera housing close and prevent the dust from getting in the housing.

Package Contents


The following items are included in the package.

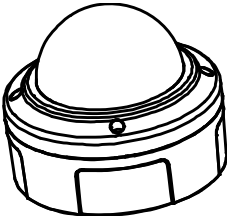


AVer Vandal Dome type
Camera



Software & Manual CD




L-type Wrench

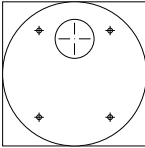

Alignment Sticker



4 Screws




4 Washers



4 Plastic Anchors


Optional Accessories



Power Adapter (12V, 2A)

* The power adapter will vary depending on the standard power outlet of the country where it is sold. Depending on your package the power adapter maybe included.

IP Camera Parts

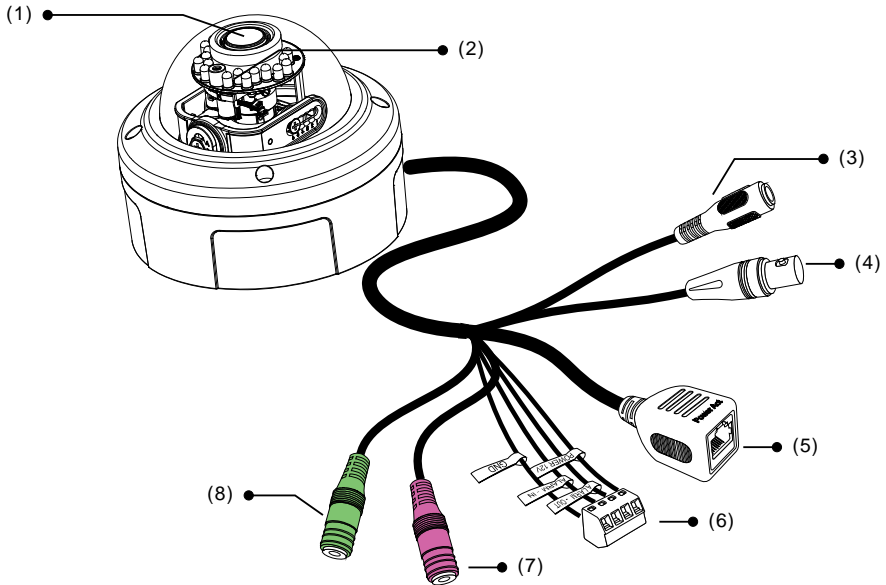

| No. | Function |
|-----|------------------------|
| (1) | Camera Lens |
| (2) | Light Sensor |
| (3) | Power Jack |
| (4) | BNC Jack (Video Out) |
| (5) | RJ45 Ethernet Jack |
| (6) | I/O Terminal Block |
| (7) | Phone Jack (Audio In) |
| (8) | Phone Jack (Audio Out) |


IP Camera Installation

This section provides useful tips on how to adjust the IP camera to meet your needs.


Deploying Network

Network Connection via Ethernet Switch

Connect the RJ45 cable from the Ethernet switch to RJ45 Ethernet jack of camera

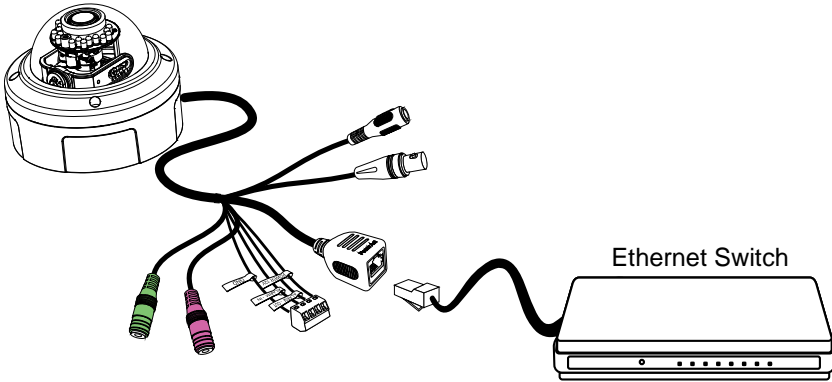


Connect the power adapter to power jack of camera

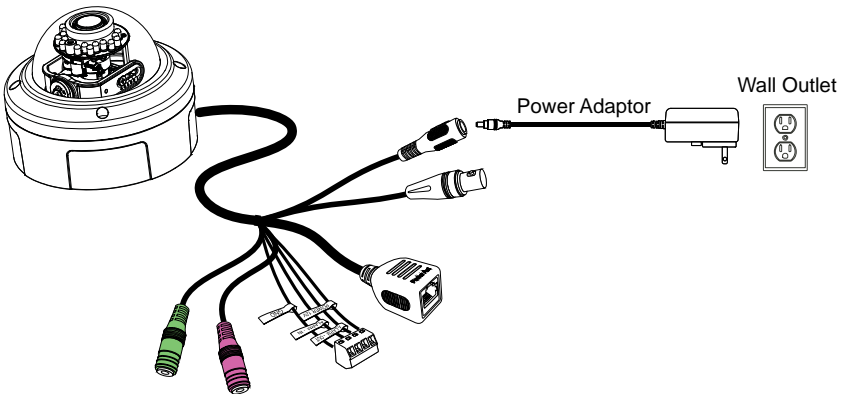


Power over Ethernet Connection

AVer vandal dome type camera fully complies with PoE standard. It allows you to use PoE enabled switch or PoE injector to transmit data and power thru single Ethernet cable.


› PoE Enabled Switch Connection Diagram

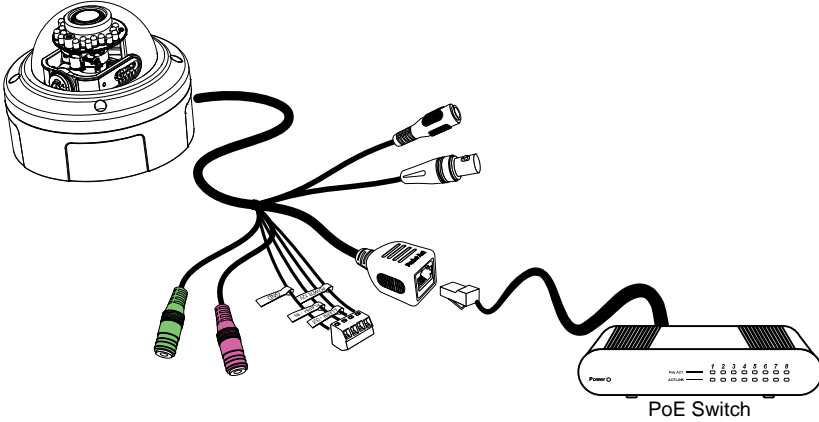

› PoE Injector Connection Diagram

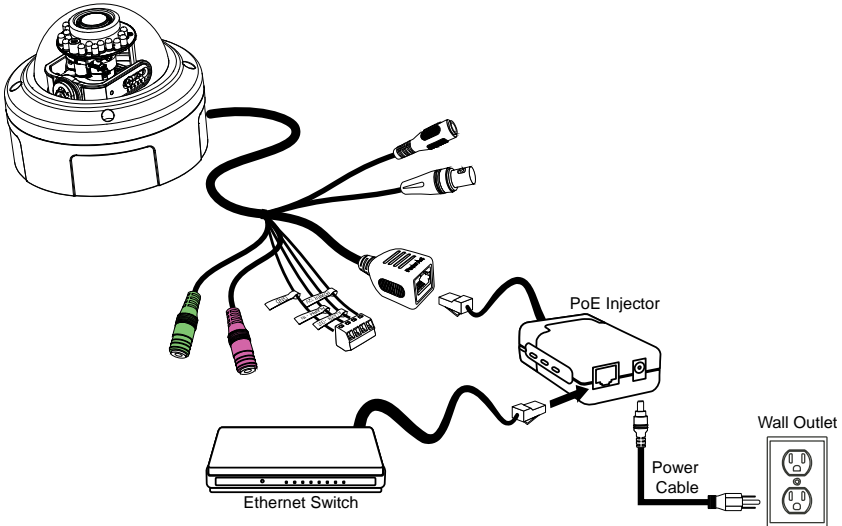


Connecting External Devices to I/O Terminal Block

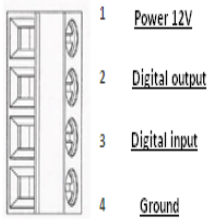

| No. | Function |
|-----|----------------|
| (1) | Power 12V |
| (2) | Digital Output |
| (3) | Digital Input |
| (4) | Ground |


[Note] Maximum power output is 12V/100mA

Internal Connection Diagram of DI/DO

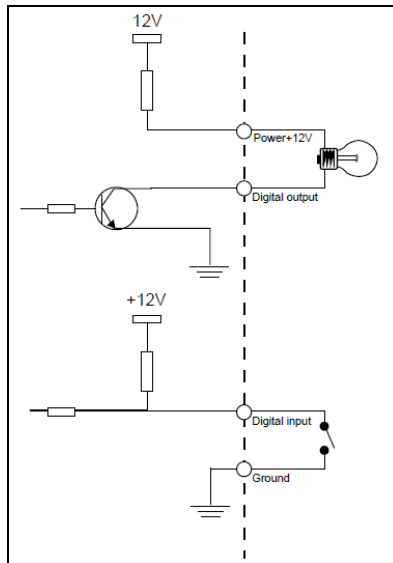


Mounting the IP Camera

1. Place the sticker on the wall surface. Then spot the mark and drill the 5 holes indicated on the sticker. If you are going to run the wire c @! [~ * @Á c @^ Á | æc ^ ! æ| Á • drill through the big hole.

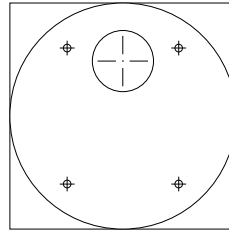

2. Insert the 4 plastic anchors in the wall.

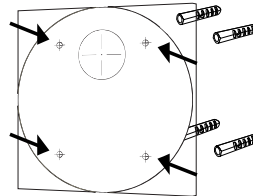

3. Hook the IP Camera and place the washer on the 4 screws. Use the hex socket cap bolt to secure the IP camera.

4. After adjusting the focus and zoom control, use the L-type wrench to secure the case of IP camera from being tampered.

