




C30u+ Charging Cart

— User Manual —



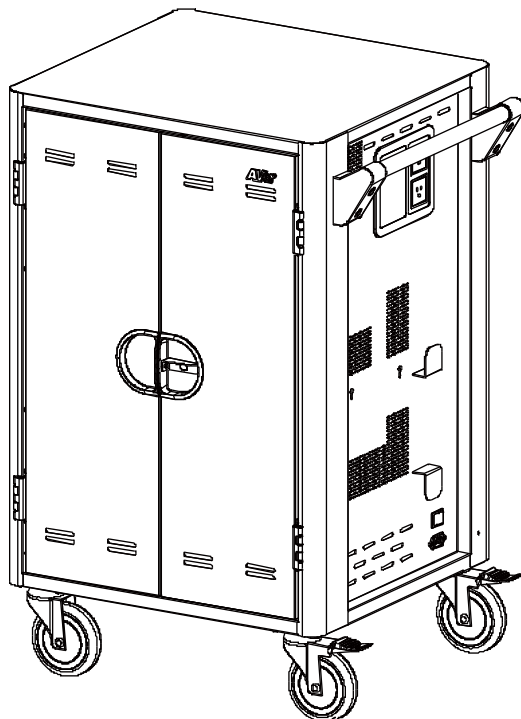

WARNING

AVERTISSEMENT


ALWAYS FOLLOW SAFETY PRECAUTIONS

RESPECTEZ TOUJOURS LES CONSIGNES DE SÉCURITÉ

- Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.
- Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.
- Il y a un danger de blessures graves ou même de mort si un enfant grimpe sur un meuble pour matériels audio ou vidéo. Une télécommande ou un jouet laissés sur le meuble peuvent inciter l'enfant à y grimper, ce qui peut provoquer le basculement du meuble sur l'enfant.
- Le repositionnement de matériels audio ou vidéo sur un meuble non spécialement conçu pour cela peut causer la mort ou des blessures graves par effondrement ou renversement du meuble sur un enfant.

**Only use the cart INDOORS
to reduce risk of electric shock.**

**Pour réduire le risque de
décharge électrique, n'utilisez
le chariot QU'À L'INTÉRIEUR.**

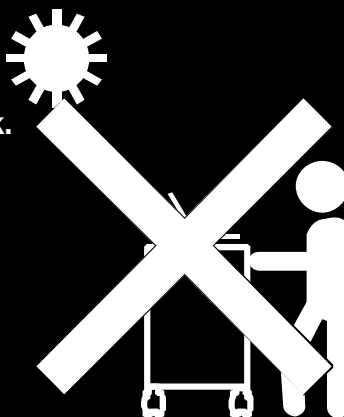


**ONLY ADULTS should
move the cart.**

**Le chariot ne doit être déplacé
QUE PAR DES ADULTES.**



**NEVER climb, sit
or stand on the cart.**

**Personne ne doit s'asseoir,
se tenir ou grimper sur
le chariot.**

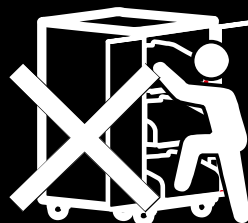


⚠ CAUTION

This cart is intended for use only with loading as indicated. Use with loads greater than indicated may result in instability causing possible injury.

⚠ MISE EN GARDE

Ce chariot est conçu pour n'être utilisé qu'avec des charges telles qu'indiquées. L'utilisation avec des charges supérieures aux indiquées peut rendre le chariot instable et causer des blessures.

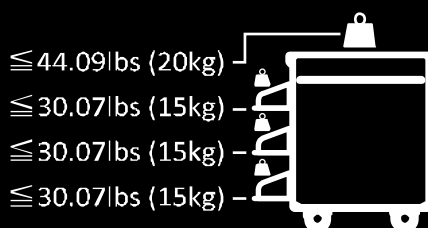

CAUTION

- **DO NOT** allow anyone to sit, stand or climb on the cart.
- **DO NOT** lift the cart.
- **DO NOT** block the ventilation holes used for air circulation.
- **DO NOT** overload objects on the cart shelves. (work platform maximum loading = 20kg / 44.09lbs; each shelf maximum loading = 15kg / 30.07lbs).
- **DO NOT** put any devices over the maximum loading weight on top of the cart.
- When moving the cart, **DO NOT** put any devices (ex: TV, Monitor, Documents camera...etc.) on top of cart.
- **DO NOT** use a TV/monitor on top of the cart.
- Disconnect the power from the outlet before moving the cart.
- While moving the cart, make sure the power cord is secured and tightly wrapped.
- When moving carts over uneven flooring, please try to slightly lift and stabilize the cart to avoid damage.

ATTENTION !

- **PERSONNE** ne doit s'asseoir, se tenir ou grimper sur le chariot.
- **IL NE FAUT PAS** soulever le chariot.
- **IL NE FAUT PAS** obstruer les orifices de ventilation qui permettent à l'air de circuler.
- **IL NE FAUT PAS** surcharger d'objets les étagères du chariot (charge maximale de la plateforme de travail : 20 kg / 44,09lbs ; charge maximale de chaque étagère : 15 kg / 30,07lbs).
- **IL NE FAUT PAS** poser sur le haut du chariot des appareils dont le poids dépasse la charge maximale.
- Pour déplacer le chariot, **IL NE FAUT** poser aucun appareil (poste de TV, moniteur, caméra pour documents, etc.) sur le haut dudit chariot.
- N'utilisez aucun téléviseur ni moniteur sur le haut du chariot.
- Avant de déplacer le chariot, débranchez la prise secteur.
- Pendant le déplacement du chariot, veillez à ce que le cordon d'alimentation soit correctement replié et fixé.
- Lorsque vous déplacez des chariots sur un sol inégal, merci d'essayer de le soulever légèrement et de le stabiliser pour éviter les dégâts.

Federal Communication Commission Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

The Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



The mark of Crossed-out wheeled bin indicates that this product must not be disposed of with your other household waste. Instead, you need to dispose of the waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. For more information about where to drop off your waste equipment for recycling, please contact your household waste disposal service or the shop where you purchased the product.

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose. Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVer Information Inc. be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

“AVer” is a trademark owned by AVer Information Inc. Other trademarks used herein for description purpose only belong to each of their companies.

COPYRIGHT

©2024 AVer Information Inc. All rights reserved. | November 5, 2024

All rights of this object belong to AVer Information Inc. Reproduced or transmitted in any form or by any means without the prior written permission of AVer Information Inc. is prohibited. All information or specifications are subject to change without prior notice.

More Help

For FAQs, technical support, software and user manual download, please visit:

Non-USA

Download Center: <https://www.aver.com/download-center>

Technical Support: <https://www.aver.com/technical-support>

USA

Download Center: <https://www.averusa.com/education/support/>

Technical Support: <https://averusa.force.com/support/s/contactsupport>

Contact Information

Headquarters

AVer Information Inc.
8F, No.157, Da-An Rd.,
Tucheng Dist., New Taipei
City 23673, Taiwan
Tel: +886 (2) 2269 8535

USA Branch Office

AVer Information Inc.,
Americas
44061 Nobel Drive,
Fremont, CA 94538, USA
Tel: +1 (408) 263 3828
Toll-free: +1 (877) 528 7824

Europe Branch Office


AVer Information Europe
B.V.
Westblaak 134, 3012 KM,
Rotterdam, The Netherlands
Tel: +31 (0) 10 7600 550

Contents

Package Contents.....	1
Dimensions	1
Diagram	2
LED Status	2
Door Lock.....	3
Front	3
Back.....	3
Secure the Cart.....	4
Cable Management	5
Charging Cart.....	6
Specifications.....	7
Service and Warranty	8
Appendix – Earthing	9

Package Contents


The following items are included in the package. Please check if each item is available before using.

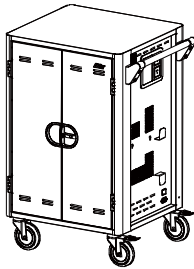

Charging Cart




Power Cord

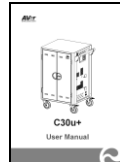


User Manual

Dimensions

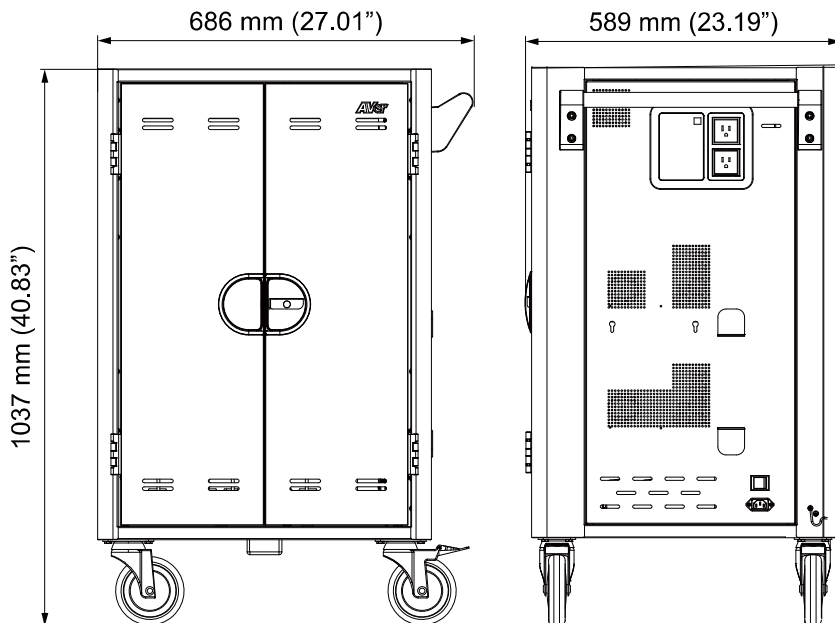

Diagram

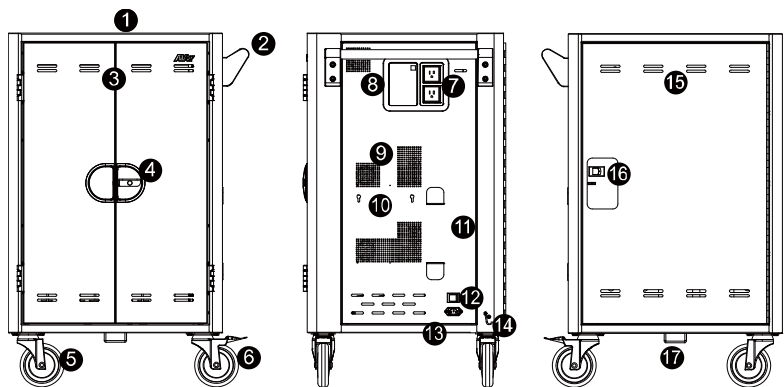

Front

1. Work platform
2. Handle
3. Ventilation holes
4. Door lock
5. 5" caster
6. 5" lockable caster

Side

7. Auxiliary outlets*
8. LED panel
9. Ventilation holes
10. Mounting points for Access point holder (optional)**
11. Power cable wrap brackets
12. Power switch
13. Power inlet
14. Earthing screw


Back

15. Ventilation holes
16. Door lock
17. Security hook

*Auxiliary outlet and power inlet type may vary depending on country or region.

**Please make sure the Access point holder is balanced and installed securely to cart.

LED Status

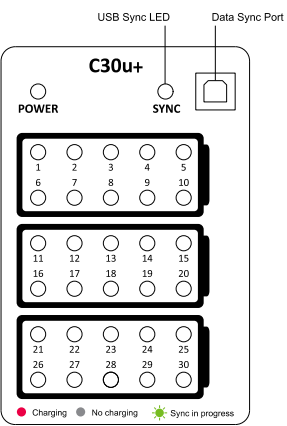


LED	Description
Device Status (x30)	Red: Power is charging.
	Off: Not charging (low current required or fully charged)
	Flashing green: Sync in progress.
USB Sync LED	Blue: Data sync cable is connected.

Note: After connecting to an external laptop via the data sync port, you can simultaneously download application, video, music, and other files to each iPad.


Door Lock

The shackle dimension of front and back doors are limited to $\varnothing 8\text{mm}$ (0.31").


Front

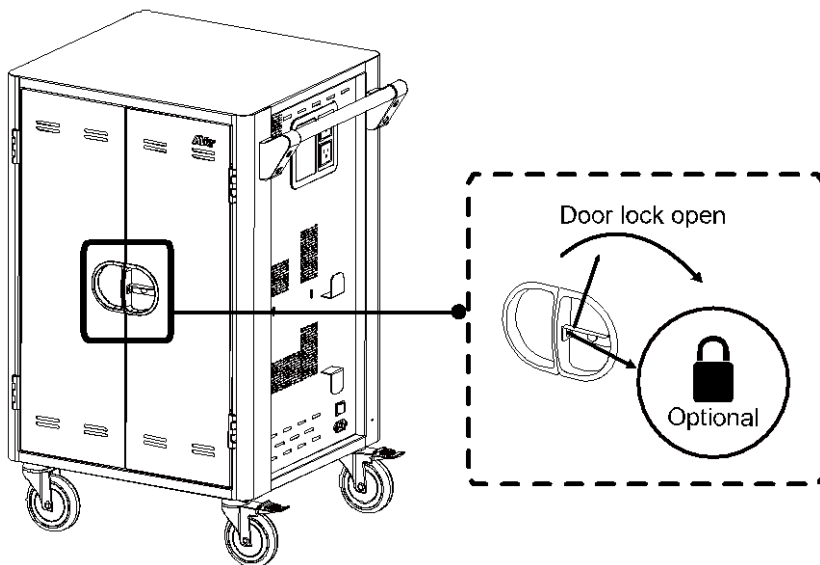

Back

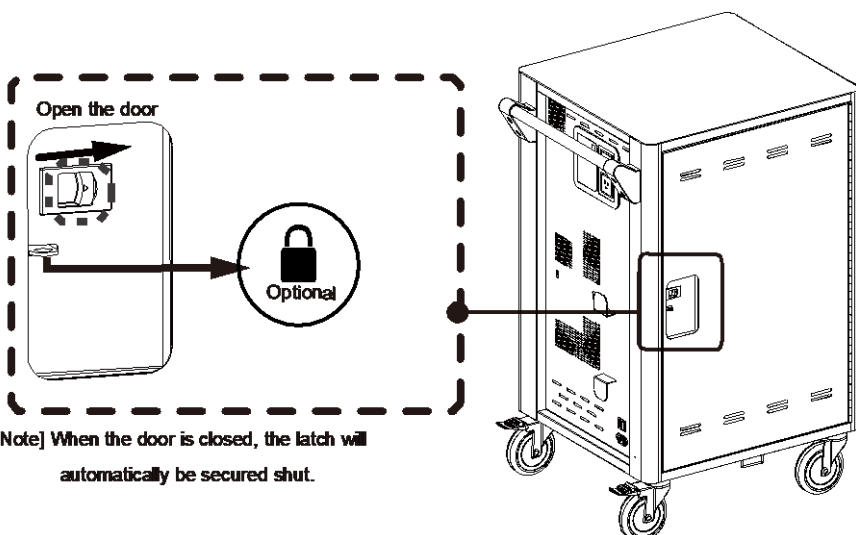


Secure the Cart

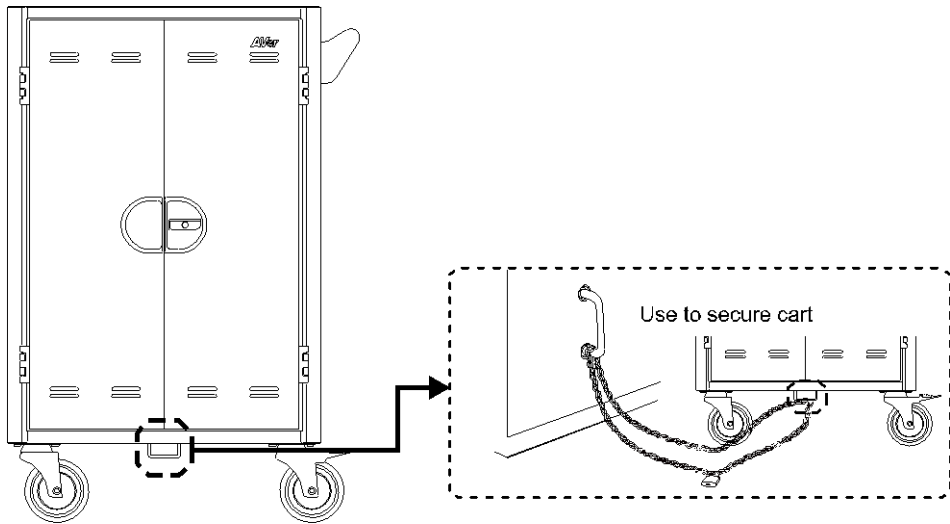


Cable Management

- It is recommended to use cable ties (optional) to secure and manage cables.
- It is recommended to allocate 2 persons for efficient device cabling.


1. Pull out the shelf and put the devices into the tray.

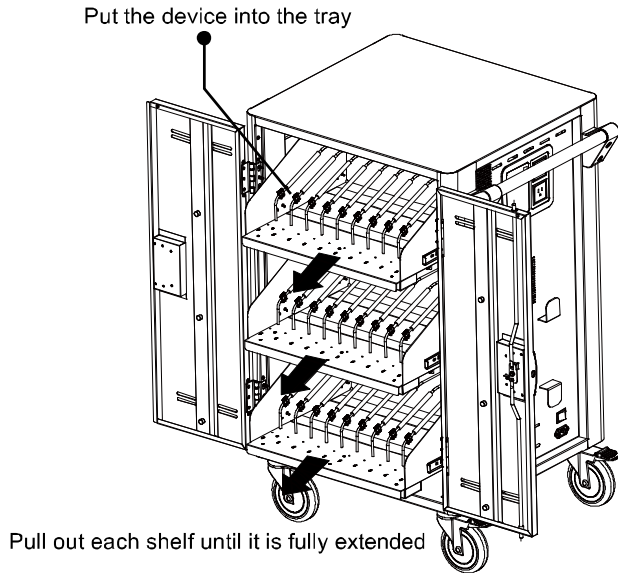


2. Plug-in the USB-C cable of device to the USB-C port on the front of the cart.

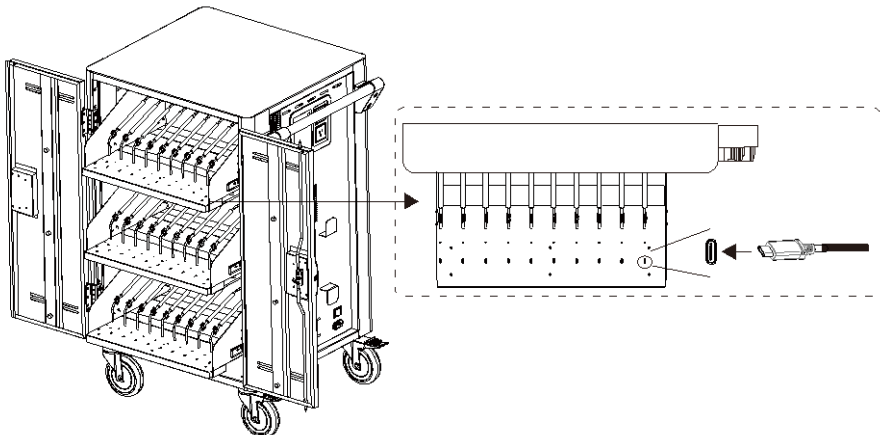

3. Adjust the position of each cable holder as desired.

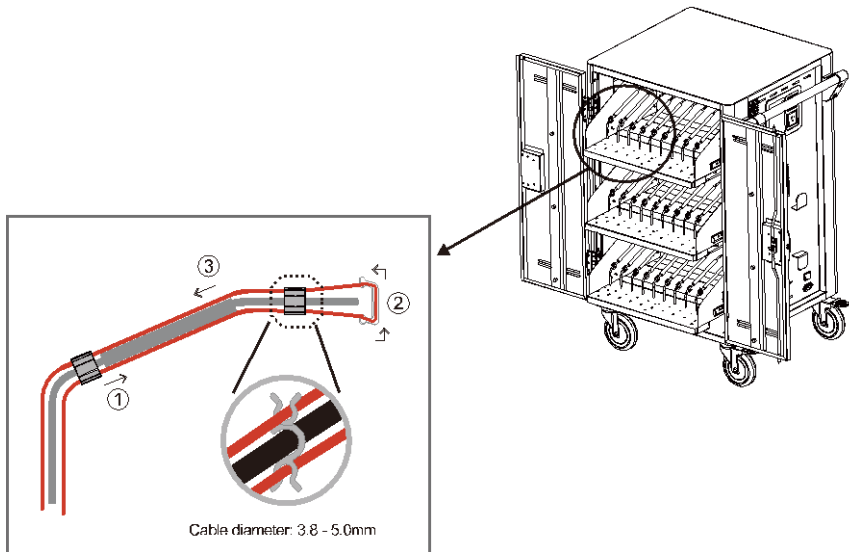

Charging Cart

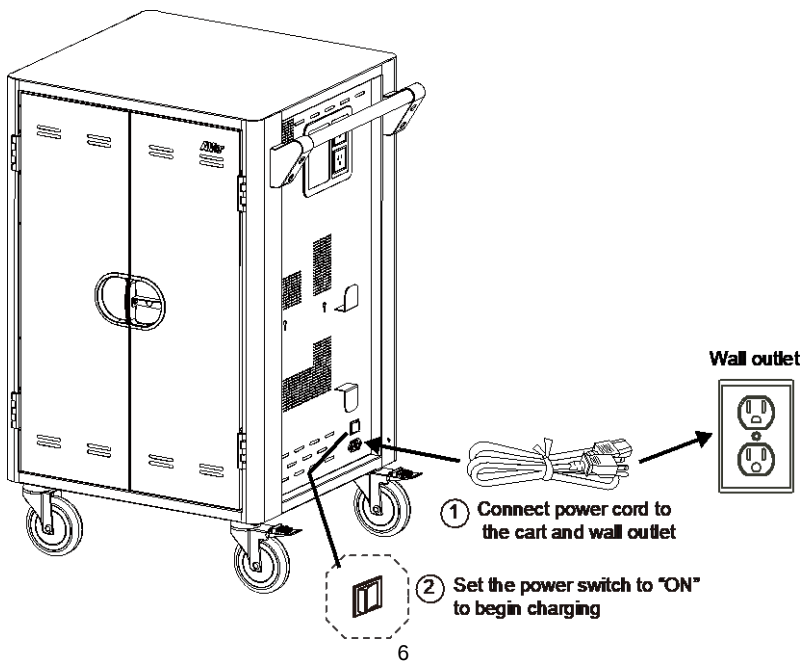

Specifications

Capacity	30
Device support	All USB-C charged tablets
Slot Dimension (W x D x H)	34 (W) x 380 (D) x 220 (H) mm 1.34" (W) x 14.96" (D) x 8.66" (H)
Auxiliary outlets	2
LED status indicators	Yes
Charging type	USB-C charging
Power specification	AC IN: 100-120V ~ 50/60Hz, 12A 220-240V ~ 50/60Hz, 8A Output for 30 USB ports: DC 5V, 3A Outlet_2 ports in total 100-120V ~ 50/60Hz, 6A 220-240V ~ 50/60Hz, 3A
Syncing	Yes
Security	Front door: 3-point steel locking mechanism Rear door: Slider latch (one point lock)
Casters	Four 5" swivel (two are lockable)
Sliding shelves	Yes
Work Platform Loading	20kg (44.09lbs)
Shelf Loading(ea.)	15kg (30.07lbs)
Access point holder Loading	3kg
Working temp.	0 ~ 30°C
Working RH	10% ~ 90%
Storage temp.	-40C ~ 60°C
Storage RH	5% ~ 95%
Warranty	10-year limited warranty for cart and tray 5-year limited warranty for electrical parts
Cart Dimensions(W x D x H)	686 (W) x 589 (D) x 1037 (H) mm 27.01" (W) x 23.19" (D) x 40.83" (H) (side handle is included)

Specifications are subject to change without notice.

Service and Warranty

All of our products come with a quality and safety assurance.

For customers located in North America, please visit the AVer USA support site for comprehensive RMA, Warranty, and Service information:

<http://averusa.com/classroom-technology/support/>

For customers located outside North America, please visit AVer Global support site: <https://www.aver.com/technical-support>.

Appendix – Earthing

Caution

High touch current, Connect to earth before connecting to supply.
(Yellow/Green wire min. 14AWG)

Note

Installation of the protective earthing connection of the socket-outlet by a skilled person.

Attention

Contact à courant élevé,
Reliez l'appareil à la terre avant de la connexion à l'alimentation en courant.
(Câble jaune/vert min. 14AWG)

Remarque

L'installation du branchement de mise à la terre sécurisée d'une prise de courant par un professionnel qualifié.

