
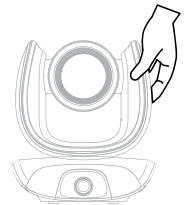
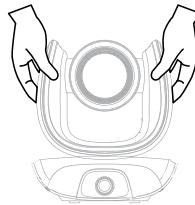
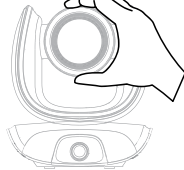


CAM550

Conferencing Camera

— **User Manual** —

Warning

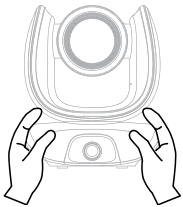

- Hold the bottom of the camera with both hands to carry the camera. Whether the camera is connected to power or not, do not grab any part of the lens or the lens holder to carry the camera or adjust pan and tilt.
- Do not drop the camera or subject it to physical shock.
- Ensure the power supply voltage is correct before using the camera.
- Do not place the camera where the cord can be stepped on as this may result in fraying or damage to the lead or the plug.
- To reduce the risk of fire or electric shock, do not expose the camera to rain or moisture. Warranty will be voided if any unauthorized modifications are done to the camera.

Federal Communications Commission Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radiofrequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Caution

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

PSTI Statement of Compliance

Please refer to the following website: <https://www.aver.com/product-security-advisory>

VCCI-A

この装置は、クラス A 機器です。この装置を住宅環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

(注)本製品同梱の電源ケーブルは、本製品同梱の電源アダプタでのみ使用してください。

本製品同梱の電源ケーブルは、他の電気機器では使用できません。

사 용 자 안 내 문

이 기기는 업무용 환경에서 사용할 목적으로 적합성평가를 받은 기기로서 가정용 환경에서 사용하는 경우 전자파간섭의 우려가 있습니다.

※ 사용자 안내문은 "업무용 방송통신기자재"에만 적용됩니다.

기종별	사용자안내문
A 급 기기 (업무용 방송통신기자재)	이 기기는 업무용(A 급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로합니다.

DISCLAIMER

No warranty or representation, either expressed or implied, is made with respect to the contents of this documentation, its quality, performance, merchantability, or fitness for a particular purpose.

Information presented in this documentation has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this documentation is subject to change without notice.

In no event will AVer Information Inc. be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

TRADEMARKS

"AVer" is a trademark owned by AVer Information Inc. Other trademarks used herein for description purpose only belong to each of their companies.

All HDMI trademarks and trade dress are registered trademarks or trademarks of HDMI Licensing Administrator, Inc.

COPYRIGHT

©2026 AVer Information Inc. All rights reserved. | May 14, 2026

All rights of this object belong to AVer Information Inc. Reproduced or transmitted in any form or by any means without the prior written permission of AVer Information Inc. is prohibited. All information or specifications are subject to change without prior notice.

More Help

For FAQs, technical support, software and user manual download, please visit:

Non-USA

Download Center: <https://www.aver.com/download-center>

Technical Support: <https://www.aver.com/technical-support>

USA

Download Center: <https://www.averusa.com/business/support>

Technical Support: <https://averusa.force.com/support/s/contactsupport>

Contact Information

Headquarters

AVer Information Inc.
8F, No.157, Da-An Rd., Tucheng
Dist., New Taipei City 236042,
Taiwan
Tel: +886 (2) 2269 8535

USA Branch Office

AVer Information Inc., Americas
44061 Nobel Drive, Fremont, CA
94538, USA
Tel: +1 (408) 263 3828
Toll-free: +1 (877) 528 7824

Europe Branch Office

AVer Information Europe B.V.
Westblaak 134, 3012 KM,
Rotterdam, The Netherlands
Tel: +31 (0) 10 7600 550

Japan Branch Office

アバー・インフォメーション株式
会社
〒160-0023 日本東京都新宿区
西新宿 3-2-26 立花新宿ビル 7
階
Tel: +81 (0) 3 5989 0290
お客様サポートセンター(固定電
話のみ) : +81 (0) 120 008 382

Vietnam Branch Office

Công ty TNHH AVer Information
(Việt Nam)
Tầng 14, Tòa nhà Wings Tower,
380 Trần Hưng Đạo, Phường
Chợ Quán, Thành phố Hồ Chí
Minh 700000, Việt Nam
Tel: +84 (0) 28 22 539 211
Hỗ trợ kỹ thuật: +84 (0) 90 70
080 77

Korea Office

한국 에버 인포메이션 (주)
서울시 종로구 새문안로 92
(신문로 1 가,
광화문오피시아빌딩) 1831,
1832 호
Tel: +82 (0) 2 722 8535

Contents

Warning	2
Overview	1
Package Contents	1
Optional Accessories	1
Pan and Tilt Angle.....	2
Parts Info	3
LED Indicator	3
Remote Control.....	4
Shortcuts	5
Connection	6
Device Connection	6
Power Connection	7
HDMI Connection	7
RS-232 Connection	8
RS-232 Pin Definition	8
Computer/Keyboard Controller and Camera Connection	9
Camera Cascade Connection	12
Installation	14
Wall Mount Installation.....	14
Ceiling Mount Installation (Optional).....	17
Secure the Cables	20
Get Started	21
Make a Video Call.....	21
Switch Lenses and PIP Layouts	21


Access the Web Interface	22
AVer Device Utility	22
Room Management.....	23
Log In for the First Time	24
Web Interface.....	25
PTZ Control	25
Overview of PTZ Control.....	25
Save, Load and Clear a Preset.....	26
Add and Delete Available Presets (Presets 10-127).....	26
Setting.....	27
Overview of the Floating Live View	30
Tracking Mode.....	31
Gesture Control	33
Video Format	35
Network.....	36
System.....	37
Room Management	39
Configure Settings on Room Management	39
EZLive	40

Overview

Package Contents




Camera




Power Adapter &
Power Plug



USB 3.1 Type-B to
Type-A Cable (3 m)



Mini Din 9 to Mini Din 8
RS-232 Adapter Cable




HDMI® Cable (3 m)



Remote Control



AAA Battery (x2)
(US only)



Wall Mount
Bracket (x2)



M4 x 8 mm
Screw (x2)



1/4"-20 L=7.5 mm
Screw (x2)




Drill Template


Optional Accessories




USB 2.0 Type-B to
Type-A Cable (5 m)



Mini Din 8 to D-Sub 9
Cable



USB 3.1 Extender
10 m/20 m/30 m





Foldable TV Mount




Ceiling Mount

*Optional Accessories may vary based on the country or region where sold.

Pan and Tilt Angle

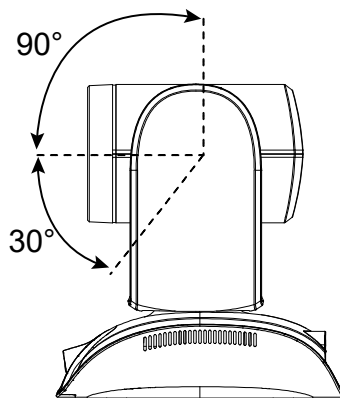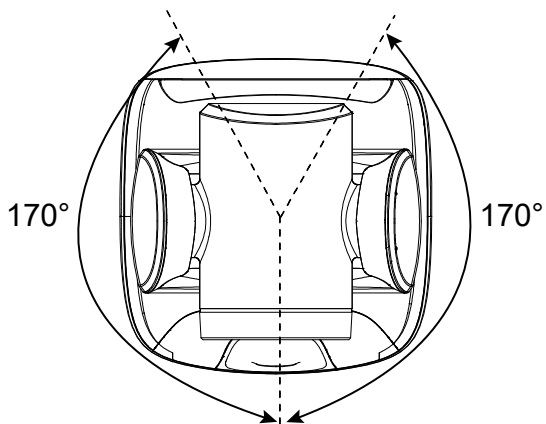

Parts Info

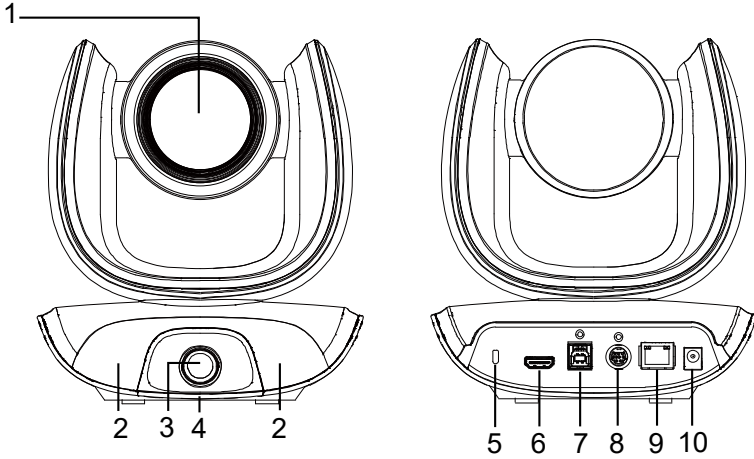


- 1. Optical Zoom Main Lens
- 2. IR Sensor
- 3. AI Lens
- 4. Status LED
- 5. Kensington Lock
- 6. HDMI Port
- 7. USB 3.1 Type-B Port
- 8. RS-232 In/Out Port
- 9. PoE Port 802.3at
- 10. DC Power Jack




LED Indicator

Color	Status
Solid red	Start-up
Solid orange	Standby
Solid blue	Video on
Flashing orange	Firmware update
Flashing blue for 2 seconds	Gesture control on
Flashing blue for 4 seconds	Performing a gesture command

Remote Control

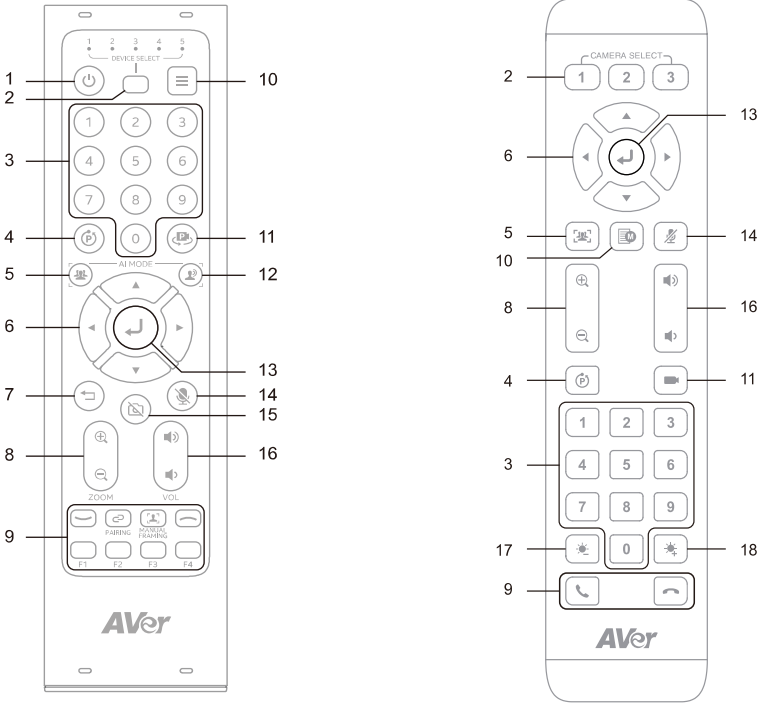









Your device may come with one of the following remote controls.



Name	Function
1. Power	N/A
2. Camera Select	No selection is required by default to operate the camera. <ul style="list-style-type: none"> To assign a number to a camera, go to Setting > Camera Binding via the web interface or Room Management.
3. Number Buttons	<ul style="list-style-type: none"> To save a preset: Press and hold Preset  until save message appears on screen, then press a number (0-9).
4. Preset	<ul style="list-style-type: none"> To load a preset: Press and hold Preset , then press a number (0-9).
5. SmartFrame	<ul style="list-style-type: none"> Press to frame entire group on screen once (effective distance 7-10 m). Press and hold to cycle through tracking modes. <p>Note:</p> <ul style="list-style-type: none"> The SmartFrame icon  appears on video when turned on. To hide the icon, go to Setting > On-Screen Menu > Off via the web


	<p>interface or Room Management.</p> <ul style="list-style-type: none"> ○ AI functions will be turned off if pan, tilt and zoom controls are used.
6. Pan-Tilt Control	Pan and tilt direction control.
7. Back	N/A
8. Zoom In/Out	Zoom in or out.
9. Function Buttons	<ul style="list-style-type: none"> • F2: Press and hold to switch between DHCP and Static IP. • Others: N/A
10. Menu	<ul style="list-style-type: none"> • Press to open or close the OSD menu during HDMI output. • Press and hold to select an HDMI screen layout.
11. Load Preset	With each press, cycle through defined presets.
12. Audio Tracking	N/A
13. Enter	<ul style="list-style-type: none"> • Display current AI function on closed caption. • Confirm a selection.
14. Mute	N/A
15. Camera Off	N/A
16. Volume	N/A
17. Brightness -	Decrease the image brightness.
18. Brightness +	Increase the image brightness.

Shortcuts

Press and Hold	To
 for 2 sec	Turn wide dynamic range (WDR) on or off.
 for 2 sec	Turn SmartFrame on or off.
 for 2 sec	Change the picture-in-picutre (PiP) position when streaming over USB or IP.
 for 2 sec	Turn RTMP streaming on or off when RTSP and RTMP are turned on.
 for 2 sec	Enter sleep mode.
 for 6 sec	Reboot.
 for 2 sec, then press 	Turn Preset Link Set 1 on or off.
 for 2 sec, then press 	Turn Preset Link Set 2 on or off.

Connection

Device Connection

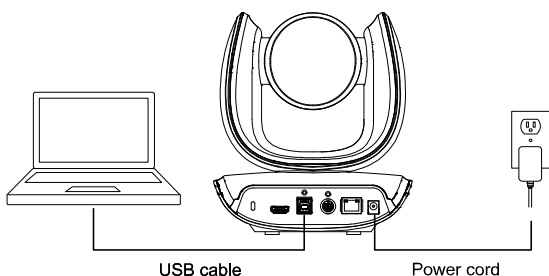


- Use the included USB cable.
- The USB 3.1 port is compatible with USB 2.0.


Maximum resolution/fps for USB 2.0 and USB 3.1 ports:

USB 2.0		USB 3.1		HDMI
YUV	M-JPEG	YUV	M-JPEG	
- 640x480 or less, up to 30fps - 720p, up to 10fps	- 1080p/60fps	- Up to 1080p/30fps - 720p/60fps	- Up to 4k/30fps - 1080p/60fps	- 1080p/60fps - 1080p/30fps

Power Connection

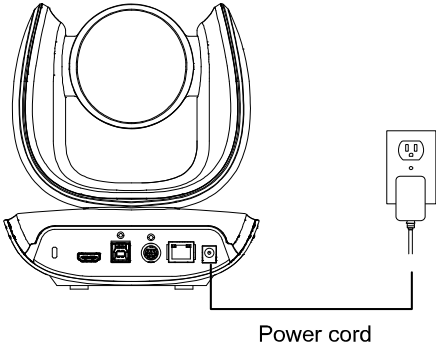


Connect the included power adapter and power cord to a wall outlet.

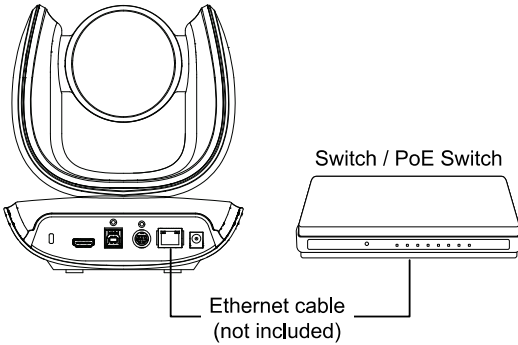

Or connect a CAT 5e FTP cable (not included) to the PoE Switch or Ethernet.

- The PoE port is compatible with IEEE 802.3at.
- When streaming over IP, use a CAT 5e FTP cable (not included) for a smooth video.


HDMI Connection

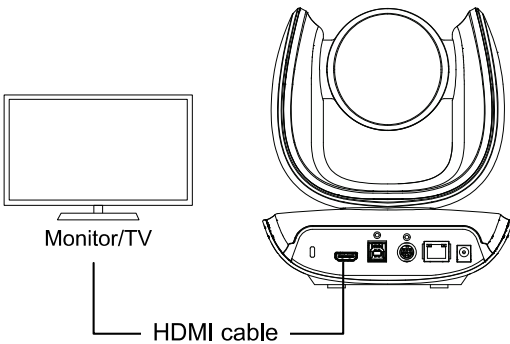

Connect a monitor/TV to the device's HDMI port using the included HDMI cable.

RS-232 Connection

RS-232 Pin Definition

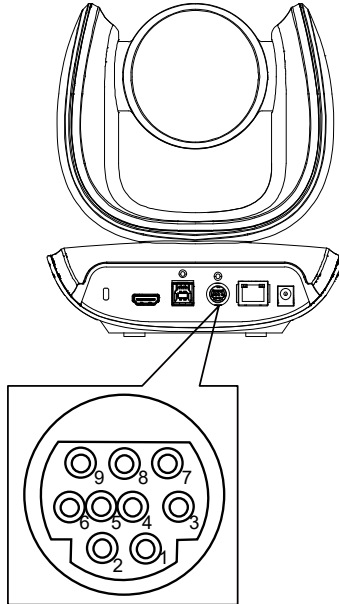


Function	Mini DIN9 Pin #	I/O Type	Signal	Description
VISCA IN	1	Output	DTR	Data Terminal Ready
	2	Input	DSR	Data Set Ready
	3	Output	TXD	Transmit Data
	6	Input	RXD	Receiver Data
VISCA OUT	7	Output	DTR	Data Terminal Ready
	4	Input	DSR	Data Set Ready
	8	Output	TXD	Transmit Data
	9	Input	RXD	Receiver Data
	5	---	---	Not connect

Computer/Keyboard Controller and Camera Connection

Direct Connection

If users do not use AVer RS-232 adapter cable, please refer to the pin connection shown below.

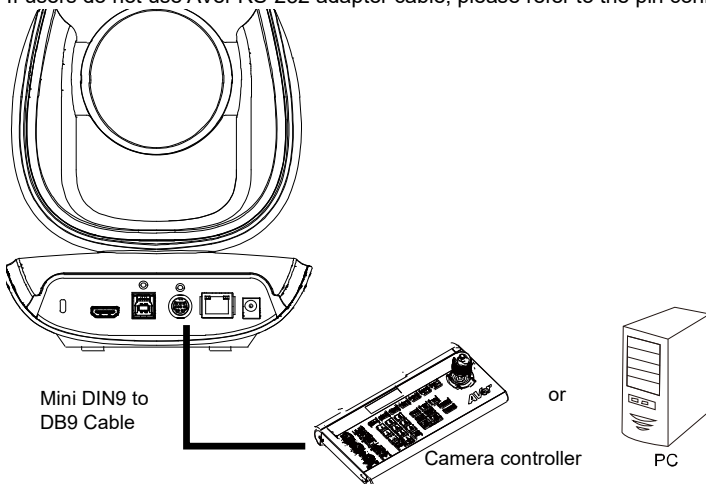

Mini DIN9

Camera

1. DTR (IN)

2. DSR (IN)

3. TXD (IN)

6. RXD (IN)

7. DTR (OUT)

4. DSR (OUT)

8. TXD (OUT)

9. RXD (OUT)

DB9

Camera controller, PC

6. DSR

4. DTR

2. RXD

3. TXD

1. DCD


5. GND

7. RTS

8. CTX

9. RI

Use the supplied RS-232 mini DIN9 to mini DIN8 cable

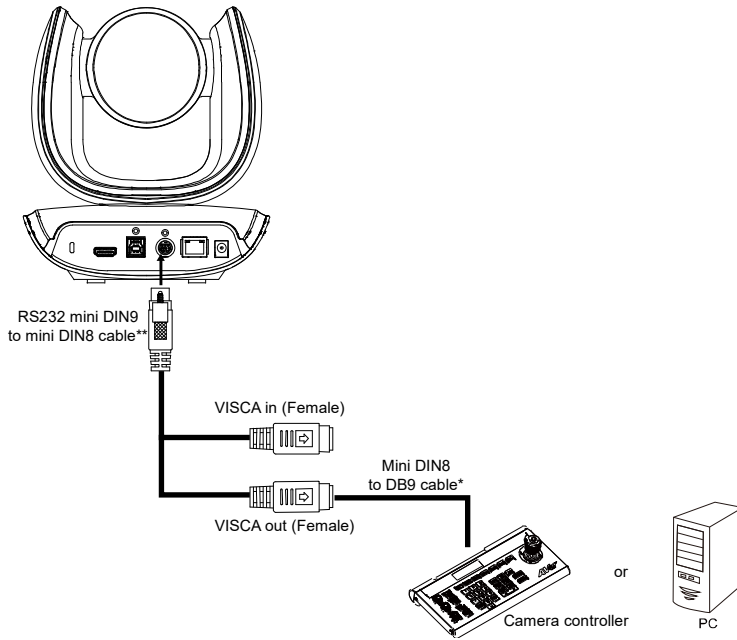

DB9

Camera controller, PC

- 1. DCD
- 2. RXD →
- 3. TXD →
- 4. DTR →
- 5. GND →
- 6. DSR →
- 7. RTS
- 8. CTX
- 9. RI


Mini DIN8

Camera


- 6. GND (IN)
- 3. TXD (IN)
- 5. RXD (IN)
- 2. DSR (IN)
- 4. GND (IN)
- 1. DTR (IN)
- 1. DTR (OUT)
- 2. DSR (OUT)
- 3. TXD (OUT)
- 4. GND (OUT)
- 5. RXD (OUT)
- 6. GND (OUT)

* Mini DIN8 to D-Sub9 (DB9) cable 064AOTHERBPK is an optional item.

**** RS-232 mini DIN9 to mini DIN8 Cable Pin Definition**

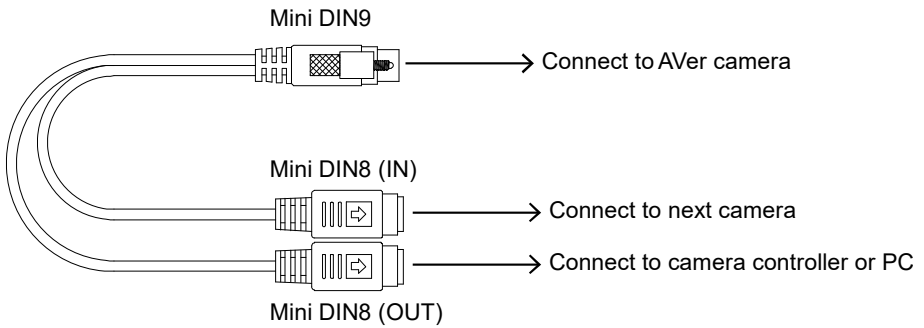

Mini DIN8 Pin Definition

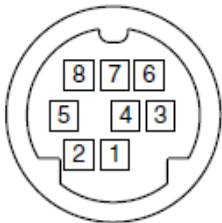


No.	Pin
1	DTR
2	DSR
3	TXD
4	GND
5	RXD
6	GND
7	NC
8	NC

Camera Cascade Connection

Direct Connection

If users do not use AVer RS-232 adapter cable, please refer to the pin connection shown below for cascading cameras.

Total can connect up to 7 cameras.

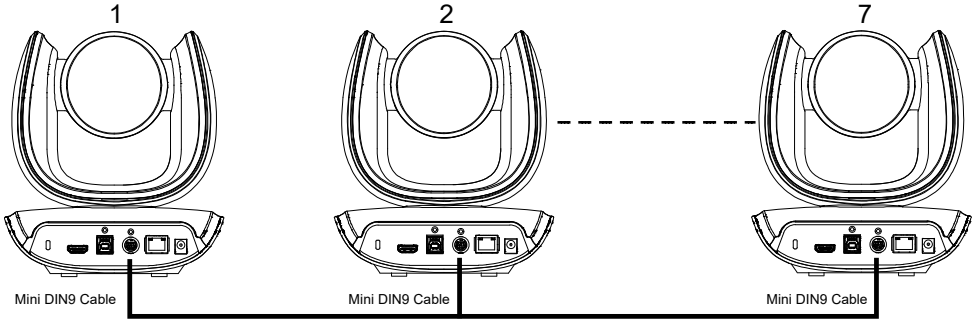

Mini DIN9

Camera 1

- 1. DTR (IN)
- 2. DSR (IN)
- 3. TXD (IN)
- 6. RXD (IN)
- 7. DTR (OUT) →
- 4. DSR (OUT) →
- 8. TXD (OUT) →
- 9. RXD (OUT) →
- SHIELD →

Mini DIN9

Camera 2


- 7. DTR (OUT)
- 4. DSR (OUT)
- 8. TXD (OUT)
- 9. RXD (OUT)
- 2. DSR (IN)
- 1. DTR (IN)
- 6. RXD (IN)
- 3. TXD (IN)
- SHIELD

Use the RS-232 mini DIN9 to mini DIN8 cable

Total can connect up to 7 cameras.

To facilitate the camera cascade, users can use AVer RS-232 adapter cable.

Connect camera with AVer mini DIN9 to mini DIN8 adapter cable. Connect the mini DIN8 female side to male mini DIN8 Visca cable (Users have to buy it in the market) and then connect AVer mini DIN9 to mini DIN8 adapter cable again to connect to next camera.

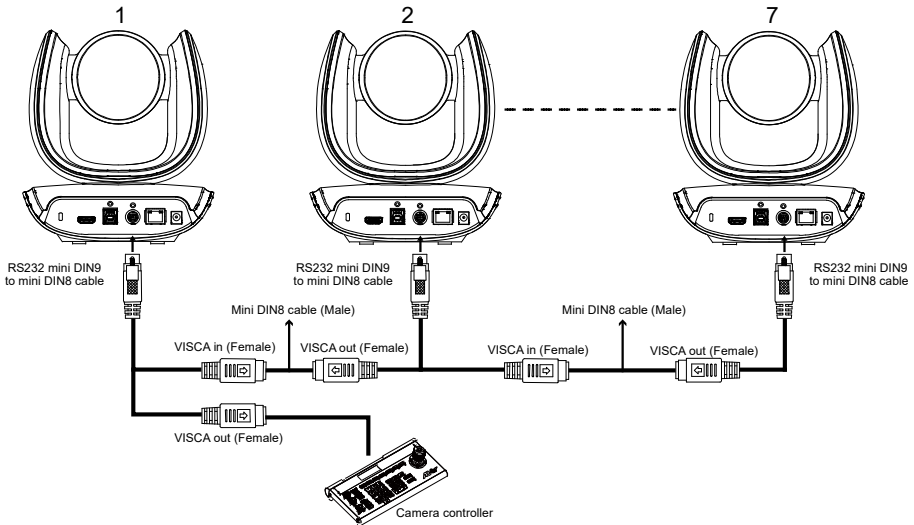

Mini DIN8

Camera 1

- 1. DTR (IN)
- 2. DSR (IN)
- 3. TXD (IN)
- 4. GND (IN)
- 5. RXD (IN)
- 6. GND (IN)

Mini DIN8

Camera 2

- 1. DTR (OUT)
- 2. DSR (OUT)
- 3. TXD (OUT)
- 4. GND (OUT)
- 5. RXD (OUT)
- 6. GND (OUT)


- 1. DTR (OUT) → 2. DSR (IN)
- 2. DSR (OUT) → 1. DTR (IN)
- 3. TXD (OUT) → 5. RXD (IN)
- 4. GND (OUT) → 4. GND (IN)
- 5. RXD (OUT) → 3. TXD (IN)
- 6. GND (OUT) → 6. GND (IN)

Installation

- The AI lens has a 95-degree field of view but lacks ePTZ functionality.
- Install the camera at a minimum height of 1.5 meters and avoid placing the camera on a table as it may obstruct the AI lens view.
- Keep the camera at least 1.5 meters away from your participants for accurate framing.

Wall Mount Installation

1. Use the drilling paper included in the package to drill the holes in the wall where the user wants to mount the camera.

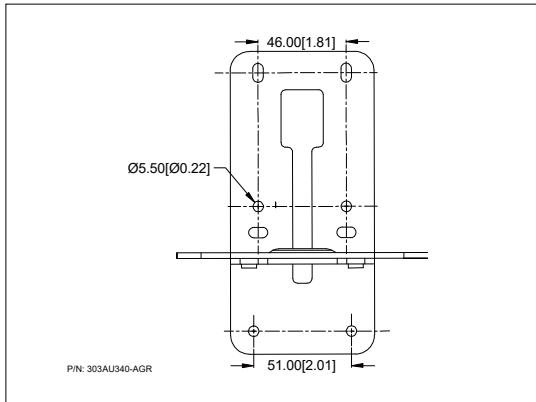


2. Use the screws (not included) to secure the L-mount bracket **A** on the wall.

Screw


For Cement wall: M4 x20mm self-tapping screws (x4) + Plastic conical anchor

For Wooden wall: M4 x20mm self-tapping screws (x4)

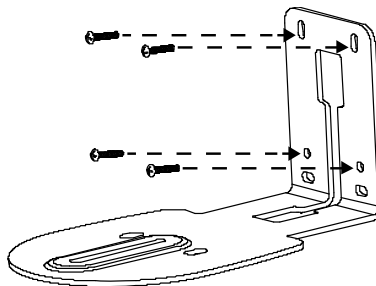

3. Then, assemble the L-mount brackets **A** + **B** with screws (included in package).

Screw size:  M4 x8mm (x2)

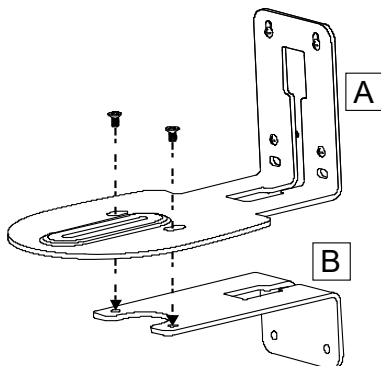


4. After assembling the L-mount brackets, use the screws (not included) to secure the lower part of L-mount brackets on the wall.


Screw

For Cement wall: M4 x20mm self-tapping screws (x2) + Plastic conical anchor


For Wooden wall: M4 x20mm self-tapping screws (x2)

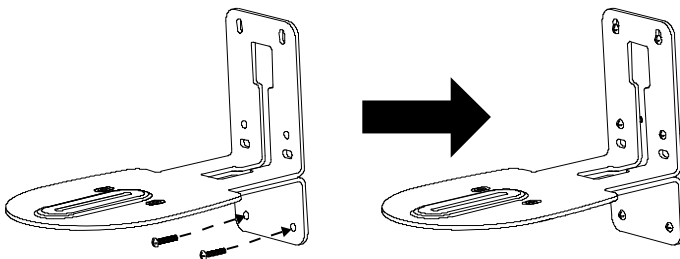


5. Pass the cables through the hole on the L-mount bracket and connect the cables to corresponding connection ports.

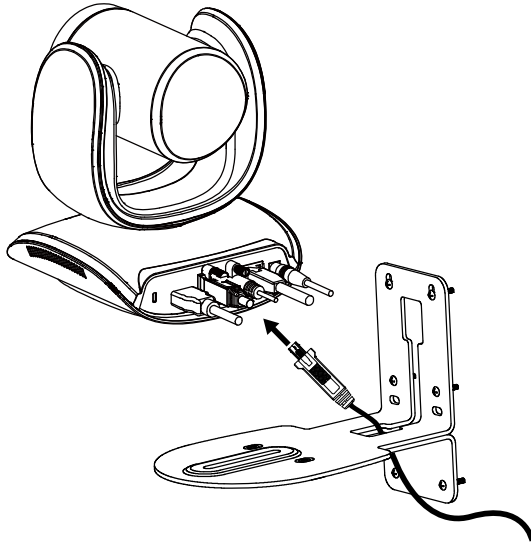

6. Use the remaining screws (included in package) to secure the camera on the L-mount bracket.


Screw:  1/4"-20 L=7.5mm (x2)

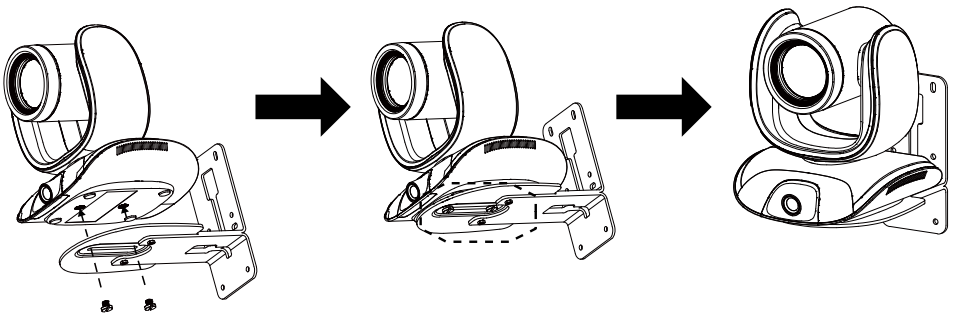

Ceiling Mount Installation (Optional)

Use the ceiling mount bracket to install the camera to the ceiling.

Package Content

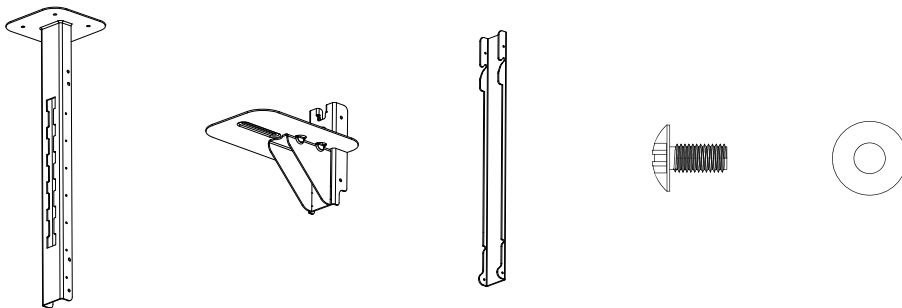

Mount bracket x 1

Camera bracket x 1




Back cover x 1

Screw (M4*8) x 8

Washer x 8

Dimension

Unit=mm

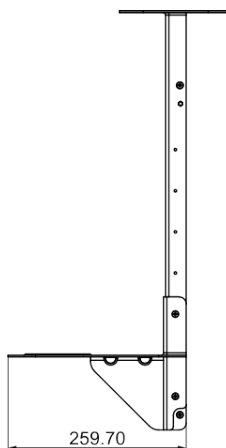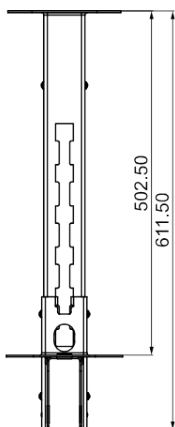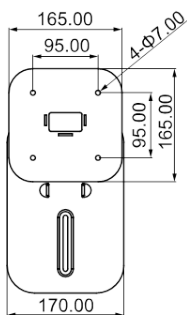


To mount the camera to the ceiling:

1. Drill the hole on the ceiling. Use screw to secure the mount bracket on the ceiling.

Screw: 4 M6 x 50mm (Not included in package)


2. Use the supplied screws with washers to secure the camera bracket to the mount bracket.

Screw: 4 M8 x 4 + 4 Washer

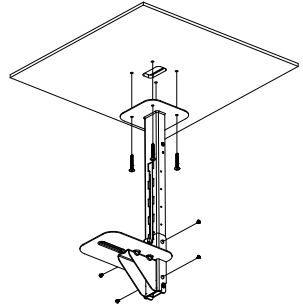


3. Connect all cables on the camera and pass all cables out through the hole on the mount bracket. Then, secure the camera on the camera bracket.

Screw: 2 UNC-1/4"-20 (Not included in package)

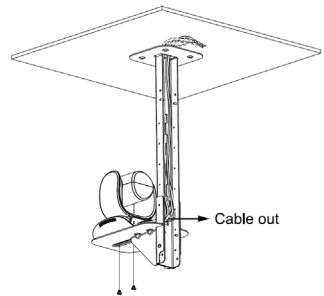


4. Organize all cables to go out from top or bottom of mount bracket.
5. Then, secure the back cover with screws and washer.

Screw: 4 M8 x 4 + 4 Washer

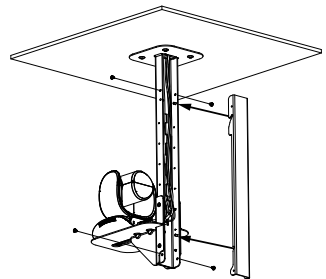

6. Completed.

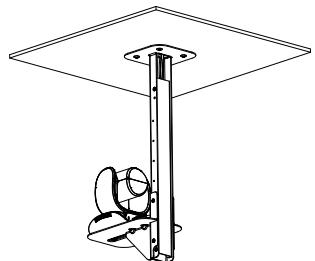

To mount the camera to the calcium silicate ceiling:

1. Please purchase support bracket for supporting camera mount bracket on calcium silicate ceiling. Then, secure the support bracket on the light steel frame structure.


2. Drill the hole on the calcium silicate ceiling. Open a hole on the calcium silicate ceiling to allow camera cables to pass through.

3. Then, secure the mount bracket, calcium silicate ceiling and support bracket together.

Screw: 4 Wingnut + 4 M6x50mm (Not included in package)

4. Use the supplied screws with washers to secure the camera bracket to the mount bracket.


Screw: 4 M8 x 4 + 4 Washer

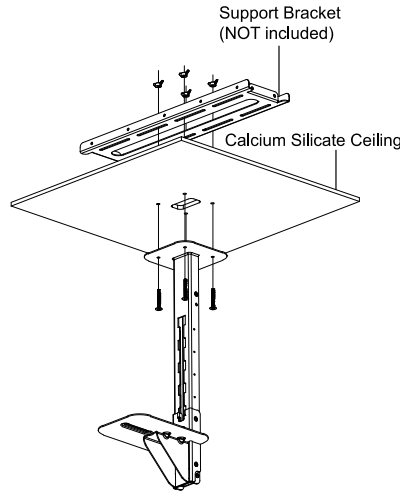

5. Connects all cables on the camera and pass all cables through the hole on the mount bracket. Organize all cables to pass through the hole on the ceiling. Also, the cable can go out from top or bottom of mount bracket.


6. Then, secure the camera on the camera bracket.

Screw: 2 UNC-1/4"-20 (Not included in package)

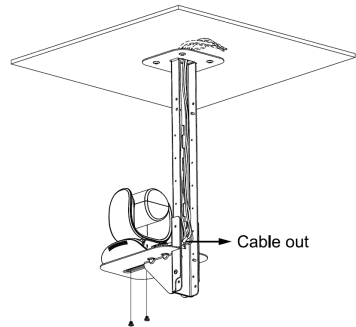


7. Next, secure the back cover with screws and washer.

Screw: 4 M8 x 4 + 4 Washer

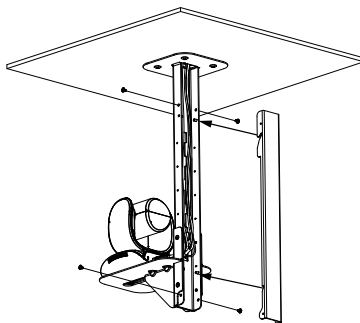


8. Completed.

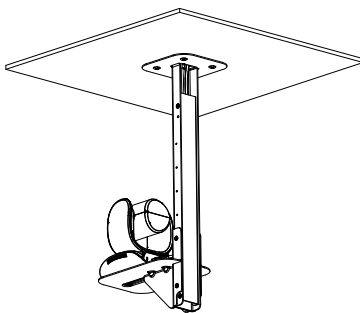

Secure the Cables

Plug in your USB cable or RS-232 cable and tighten the cable screw to secure.

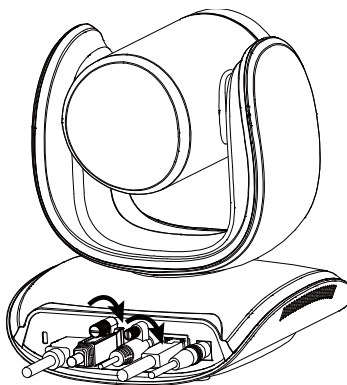


Get Started



Make a Video Call

The CAM550 is a plug-n-play device. Open your video conferencing software and select the CAM550 for **Video**.

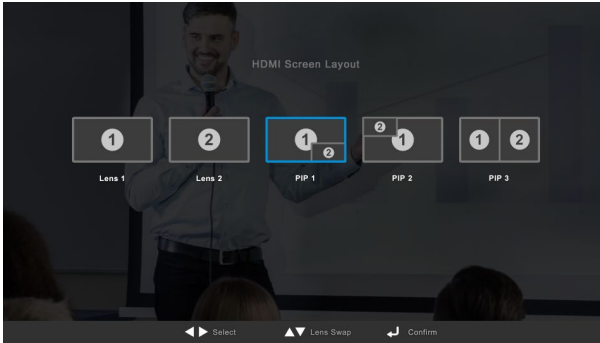


Switch Lenses and PIP Layouts



To switch between main lens and AI lens:

1. Make sure the device is connected to an HDMI monitor.
2. Press and hold the menu button  on the remote control to open the HDMI Screen Layout.
3. Select Lens 1 (main lens) or Lens 2 (AI lens), then press the enter button  on the remote control.

To switch between picture-in-picture (PIP) layouts:

1. Make sure the device is connected to an HDMI monitor.
2. Press the menu button  to open the OSD menu.
3. Go to **Settings** > turn on **PIP Layout**. The device will reboot.
4. Press and hold the menu button  on the remote control to open the HDMI Screen Layout.
5. Select a PIP layout, then press the enter button  on the remote control.

Access the Web Interface


To access the web interface of your device, you can use any of the following software to find its IP address:

- AVer Device Utility
- Room Management

Note:

- The default network is DHCP.
- The default username and password is **admin/aver4321**.

AVer Device Utility

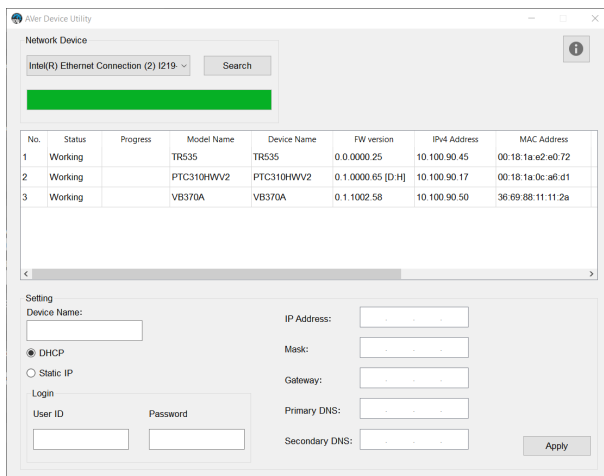

To access the web interface:

1. Download and install AVer Device Utility to your computer from AVer Download Center (<https://www.aver.com/download-center>) and launch the software.

2. Click **Search** to see available devices on the same local area network (LAN).

Note:


- Make sure your device is connected to the internet.
- AVer Device Utility and your device must be on the same LAN.

3. Double-click on your device's IP address in the **IPv4 Address** column to open the web interface in your browser.

To change the network setting to DHCP or static IP:

1. Select the checkbox of your device.
2. Enter the default or changed password in the **Login** field.
3. Select **DHCP** or **Static IP**, then enter your network settings if applicable in the **Settings** section.
4. Click **Apply**.

Room Management

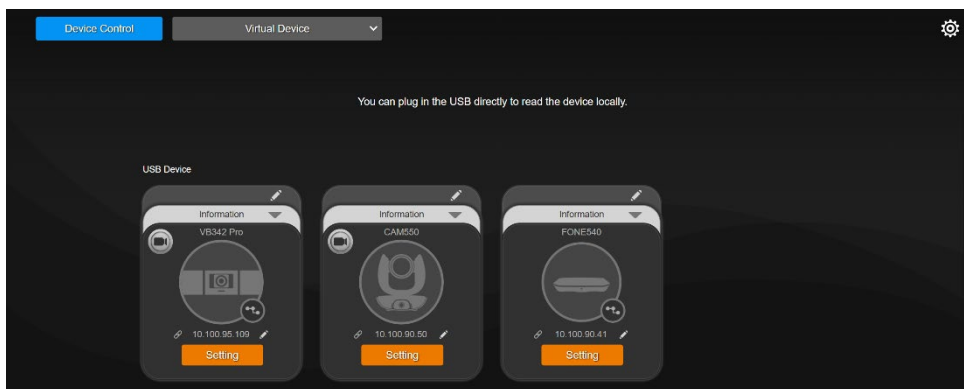


To access the web interface:


1. Download and install Room Management to your computer from AVer Download Center. (<https://www.aver.com/download-center>) and launch the software.

Note:

- Make sure your device is connected to the internet.
- Room Management and your device must be on the same LAN.

2. Connect your device to a computer with the included USB cable. Your device should appear under the **Device Control** page.
3. Click the **hyperlink** icon  on the device card to open the web interface in your browser.

To change the network setting to DHCP or static IP:

1. Click the **pencil** icon  on the device card.
2. Select **DHCP** or **Static IP**, then enter your network settings if applicable.
3. Click **Confirm**.

Log In for the First Time


When you log in for the first time, enter the default password **aver4321**. You will be prompted to change the username and password. The username and password cannot be the same.

- Account: Use 1-32 characters. **admin** is unavailable.
- Password: Use 8-32 characters and a combination of uppercase letters, lowercase letters, numbers, and symbols (! \$ % ' () * + , - . / < = > ? @ [\] ^ _ { } ~).

Web Interface

PTZ Control

Overview of PTZ Control

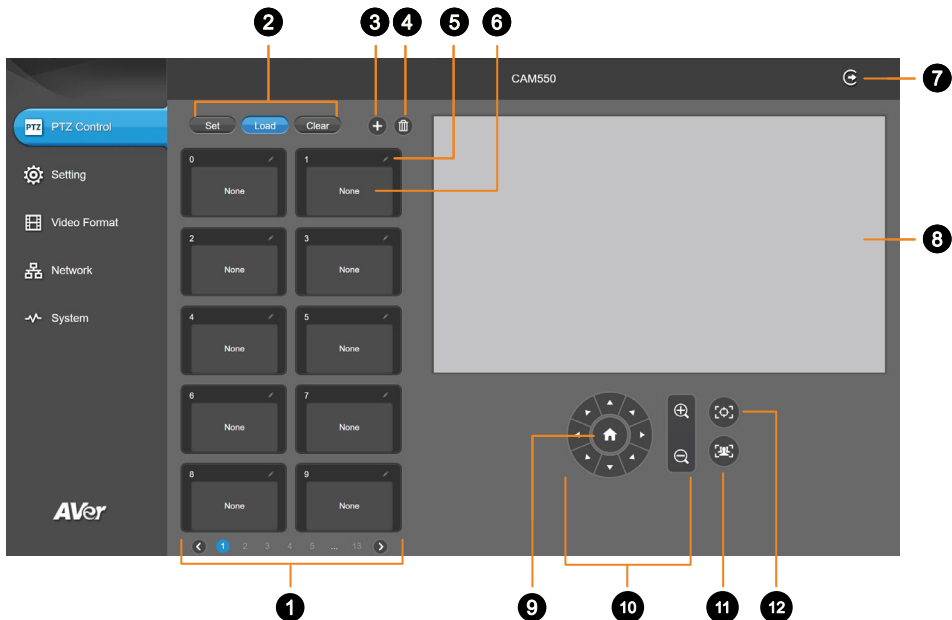

1. Presets 0-9

2. Preset Function Buttons

Save, load and clear a preset.

3. Add Available Presets

There are 10 available presets 0-9 by default. Click the plus icon to add up to 128 available presets.

4. Delete Available Presets

Click a trashcan icon to delete available presets.

5. Name

Click the pencil icon to name a preset.

6. Preset Thumbnail

7. Log Out

Log out of your account and close the web interface.


8. Live View


9. Pan-Tilt Reset

Reset the pan-tilt position to the center.

10. Directional Pad and Zoom

11. SmartFrame

Click the SmartFrame icon  to frame entire group on screen.

Note: The SmartFrame icon  appears on video when turned on. To hide the icon, go to the **Setting** tab > **On-Screen Menu** > **Off** on the web interface.

12. One-Touch Focus

Click to autofocus once.

Save, Load and Clear a Preset




To save a preset:

1. Use the pan, tilt and zoom controls to position your camera.
2. Select **Set**, then a preset number to save that position.
3. Select **Yes** when prompted. A thumbnail of your preset will appear.


Add and Delete Available Presets (Presets 10-127)

There are 10 available presets 0-9 by default.

Click the plus icon to add up to 128 available presets, or click the trashcan icon to delete available presets.

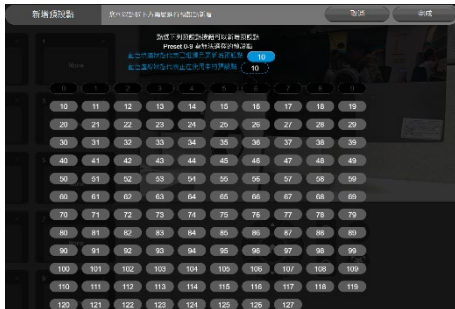

Add

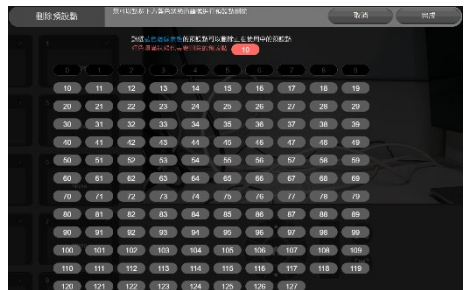

Delete


To add an available presets:

1. Select the plus icon, then select the preset numbers you want to add.
2. Select **Done**.

To delete an available preset:

1. Select the trashcan icon, then select the preset numbers you want to delete.
2. Select **Done**.

Setting

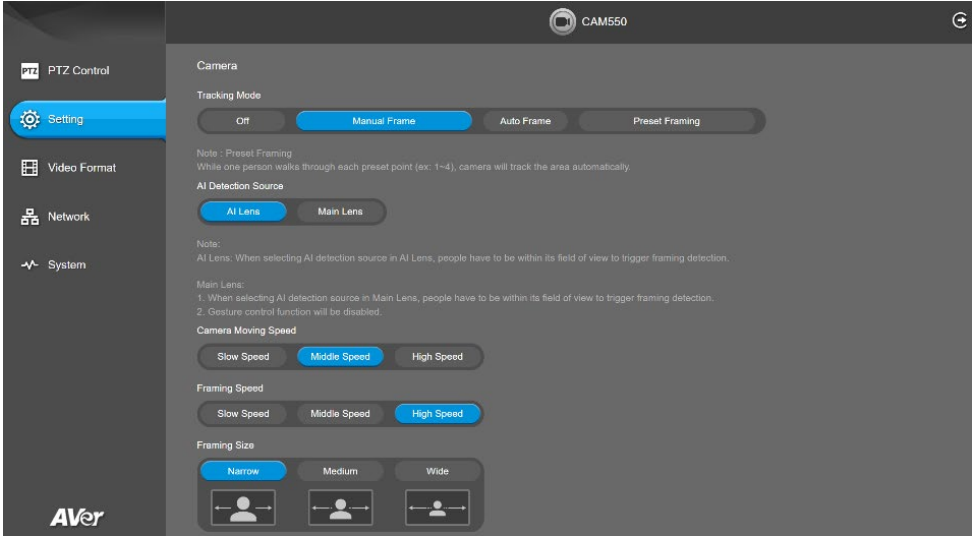

Camera


Item	Description
Tracking Mode	Select a tracking mode. Refer to < Tracking Mode > for details.
AI Detection Source	Select a lens to perform for AI detection. Entire group must fit inside the selected lens's field of view.
Camera Moving Speed	Select a camera moving speed.
Framing Speed	Select a duration before auto frame: <ul style="list-style-type: none"> • Slow: 5 seconds before auto frame. • Middle: 3 seconds before auto frame. • High: 1 second before auto frame.
Framing Size	Select a framing size to include or remove excess space on either side of the subject.
Gesture Control	Turn Gesture Control on or off. <ul style="list-style-type: none"> • AI lens must be set as AI Detection Source. • The effective distance is up to 5 meters. • Click the question mark icon to see a list of gesture commands or refer to <Gesture Control> for details.
Autofocus	Automatically focus after each pan, tilt and zoom, or automatically focus continually.
Camera Focus	Adjust the focal length manually by dragging the slider or automatically.
Home Position	Select a home position that your camera moves to when

	powered on.
Sleep Position	Select a home position that your camera moves to when entering standby mode.
Sleep Timer	Set a duration before standby mode. <ul style="list-style-type: none"> When transmitting video over USB, RTSP or RTMP, the camera won't enter standby mode.
On-Screen Menu	Turn On-Screen Menu on or off. <ul style="list-style-type: none"> Load Preset Off: Displays all statuses except load preset.
Camera Binding	No selection is required by default to use the remote to operate the camera. <ul style="list-style-type: none"> Camera Binding is turned off by default and all three selections on the remote control can operate the camera. To specify a number, go to Setting > Camera Binding on the web interface or in PTZ App2.
Save Preset	Turn Save Preset on or off. <ul style="list-style-type: none"> When Save Preset is turned off, you won't be able to save presets using the remote control, web interface, hotkeys or VISCA commands.

PIP

Item	Description
PIP Layout	Turn picture-in-picture (PIP) on to see live view from both lenses.
HDMI Screen Layout	Select a layout for HDMI output. Click the arrows button to switch the position of the smaller video.
USB / IP Streaming Screen Layout	Select a layout for streaming over USB and IP. Click the arrows button to switch the position of the smaller video.

Image

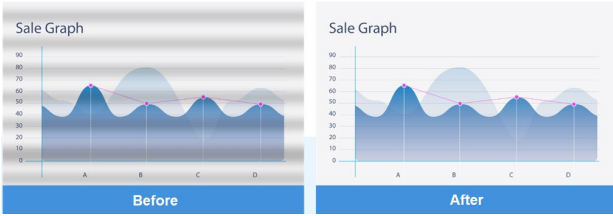
Item	Description
Image Flip	Flip the image vertically. <ul style="list-style-type: none"> When Image Flip is turned on, AI Detection Source will default to the main lens, expecting an upside down installation.
Image Mirror	Flip the image horizontally.
WDR	Turn wide dynamic range (WDR) on or off.
Flicker Decrease on IFP / Monitor	Turn Flicker Decrease on IFP / Monitor on or off. <div style="display: flex; justify-content: space-around; align-items: center;">  </div>
Frequency	Select a frequency.
Main Lens 1 / AI Lens 2	Select a lens to set up White Balance , Noise Reduction , Brightness , Sharpness and Saturation . These settings will only apply to the selected lens.
White Balance	Select a white balance setting: <ul style="list-style-type: none"> Manual: Adjust the white balance manually by dragging the slider. Auto: Adjust the white balance automatically.
Noise Reduction	Adjust noise reduction level.
Brightness	Adjust brightness level.
Sharpness	Adjust sharpness level.
Saturation	Adjust saturation level.
Low Light Compensation	Turn Low Light Compensation on or off.
Extended Resolution Options	Select a video resolution to stream.
Enlarge Total Zoom Up to 24x	Enable or disable Enlarge Total Zoom Up to 24x. The default is 18X.
Video Frame Rate	Select a video frame rate.

RS-232

Item	Description
ADDR	Select your settings to set up an RS-232 connection.
Baud Rate	
Protocol	

Overview of the Floating Live View

- The floating live view opens automatically on **Setting, Video Format, Network** and **System** tabs.
- To open the floating live view again after closing, click on the camera icon on top of **Setting, Video Format, Network** and **System** tabs.

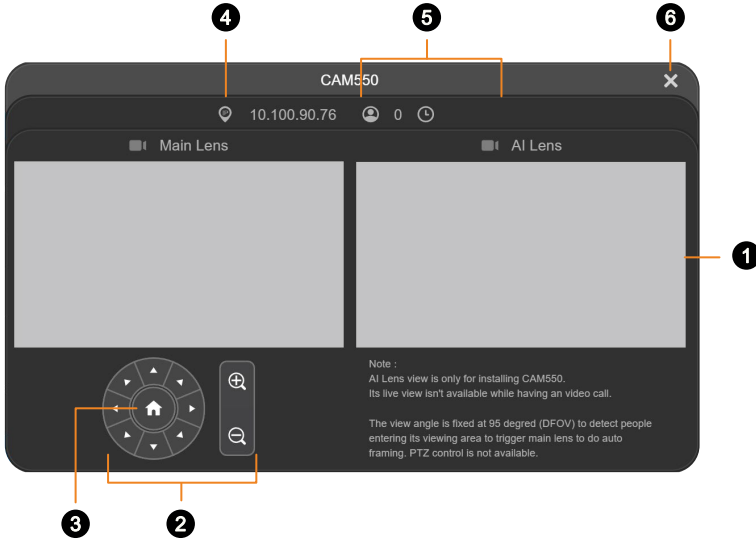

1. Live View

2. Directional Pad and Zoom

3. Pan-Tilt Reset

Reset the pan-tilt position to the center.

4. IP Address

5. Head Count and Video Transmission Duration


Click the head count icon to display head count and the duration of your video transmission. Click the icon again to hide the information.


6. Close

Click the X icon to close the floating live view and stop transmitting video.


Tracking Mode

Manual Frame

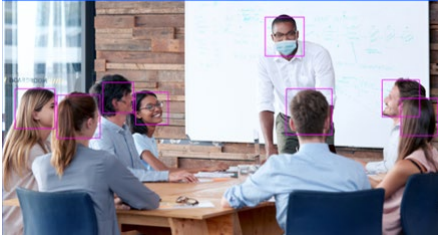

Frames manually using the SmartFrame button  to frame entire group on screen once.

Auto Frame

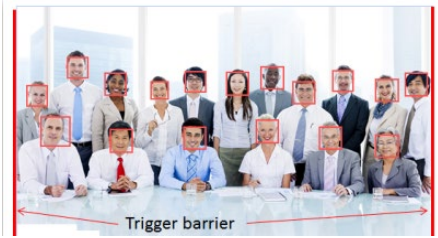

Frames entire group on screen automatically. If no one is in view, the camera will default to preset 0.


- The camera auto frames every time a subject enters or leaves the screen.
- If Auto Frame happens too frequently, set a duration before auto frame in the **Setting** tab > **Framing Speed**.
- You can set either AI lens or main lens as AI detection lens in the **Setting** tab > **AI Detection Lens**.

Preset Framing

Frames the presenter in real time as they move using presets. If no one is within the presets, the camera will default to group framing.

- Make sure you have defined presets. Presets 1-9 are available. Preset 0 defaults to the home position.
- Define overlapping presets for a smooth transition. When the presenter exits the previous preset, the camera will follow and move to the next preset.
- When multiple presenters are within presets, the preset with the smaller number takes priority.

Smart Composition

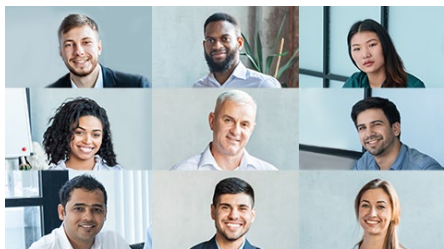

Creates a close-up frame for up to 8 participants in 4 grids and present them in a single stream composited gallery.

If more than 8 participants are on screen, the camera will default to group framing.

To turn on Smart Composition:


1. Configure the following settings:






Stream Output	Select your output
AI Detection Source	Main Lens
PIP Layout: off	Off
Extended Resolution Options	Below 720P Only
Video Frame Rate	30Fps


2. Select **Smart Composition**.

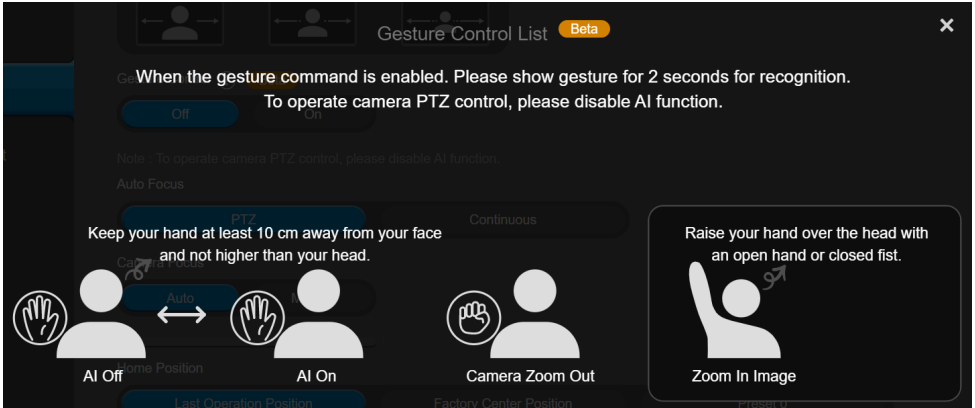Gesture Control


- Turn on Gesture Control in the **Setting** tab > **Gesture Control**.
- AI lens must be set as AI detection lens. You must be inside the AI lens field of view.
- The effective distance is up to 5 meters.




Gesture	Description
 <p>Turn Auto Frame on or off</p>	<p>Place your hand next to your face with your palm open and facing the camera for 2-3 seconds to turn Auto Frame on or off. Keep your hand 10cm away from your face.</p>
 <p>Zoom In</p>	<p>Raise your hand over your head for 2-3 second to zoom in.</p> <ul style="list-style-type: none"> • Tracking Mode will be turned off when you zoom in or out with gestures. To turn on Tracking Mode again, do one of the following: <ol style="list-style-type: none"> 1. Use gesture to turn on Auto Frame.  2. Long press the SmartFrame button  on the remote control to switch between tracking modes. 3. Web interface: go to the Setting tab > Tracking Mode. 4. PTAApp 2: go to the Setting tab > Tracking Mode.
 <p>Zoom Out</p>	<p>Place your fist next to your face with your fist facing the camera for 2-3 seconds to zoom out. Keep your fist 10cm away from your face.</p> <ul style="list-style-type: none"> • Tracking Mode will be turned off when you zoom in or out with gestures. To turn on Tracking Mode again, do one of the following: <ol style="list-style-type: none"> 1. Use gesture to turn on Auto Frame.

- | | |
|--|---|
| | <ol style="list-style-type: none">2. Long press the SmartFrame button  on the remote control to switch between tracking modes.3. Web interface: go to the Setting tab > Tracking Mode.4. PTAApp 2: go to the Setting tab > Tracking Mode. |
|--|---|

Video Format

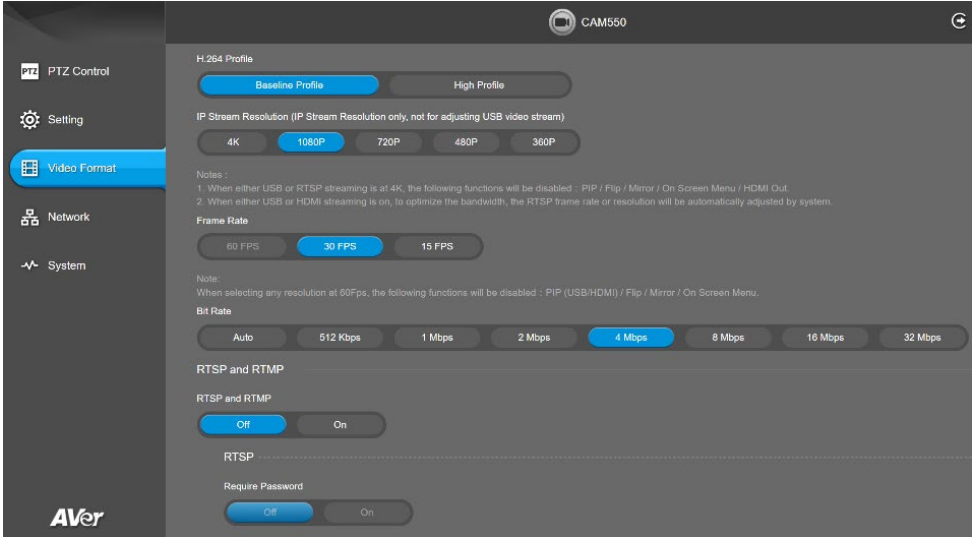

HDMI and 4K Output Limitations

- HDMI output is automatically disabled when streaming 4K resolution via USB or RTSP. To use HDMI output, you must lower your streaming resolution.
Tip: If your HDMI output is disabled due to a 4K RTSP stream, press and hold the menu button  on the remote control to switch the resolution to 1080p and restore the HDMI signal.
- Switching the resolution to 4K or the frame rate to 60fps will automatically disable **PIP, Image Flip, Image Mirror, and the On-Screen Menu (OSD)**.


Item	Description
H.264 Profile	Select a profile for streaming live.
IP Stream Resolution	Select a resolution for streaming over IP.
Frame Rate	Select a frame rate.
Bit Rate	Select a bit rate. <ul style="list-style-type: none"> To live stream on Facebook, we recommend a bit rate under 4Mbps.

RTSP and RTMP

Item	Description
RTSP and RTMP	Turn RTSP and RTMP on or off.


RTSP	Video Format	Select a video format.
	Require Password	Turn Require Password on or off.
	Set RTSP Access Password	Set or change an RTSP access password.
	URL Address for Main Lens	Displays the Main Lens URL address.
	URL Address for AI Lens	Displays the AI Lens URL address.
RTMP	Server URL	Copy and paste your video platform's server URL and stream key.
	Stream Key	
	Start Using RTMP	Click Start to start streaming, Stop to stop streaming.

Network

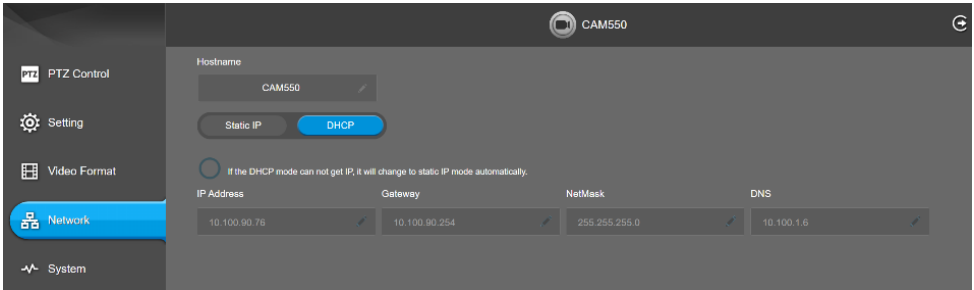

Item	Description
Hostname	Click the pencil icon to edit a hostname. Use upper and lowercase letters and numbers.
Static IP, DHCP	<p>Set the network setting to Static IP or DHCP.</p> <ul style="list-style-type: none"> DHCP (default): Check the circle below to automatically switch to Static IP if no IP is assigned. Leave it unchecked to stay in DHCP. Static IP: Enter your network settings to set up a static IP connection and click Confirm.

System

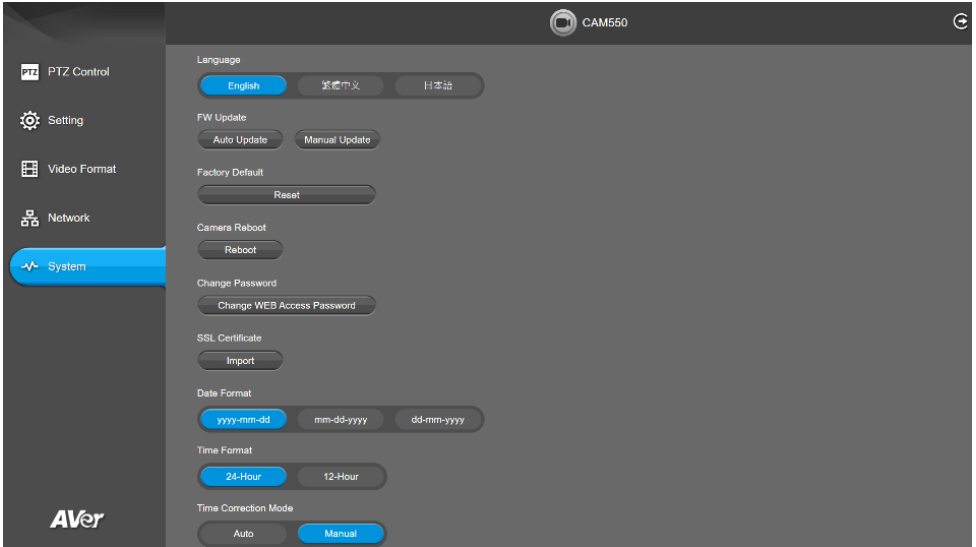


Item	Description
Language	Select a language for the web interface.
Firmware Update	Update your camera's firmware. <ul style="list-style-type: none"> • Auto Update: Checks and updates online. • Manual Update: Update the firmware using a file offline. <p>Note: The camera will reboot and the connection will be lost. Please wait a few minutes and keep the power cable connected. Unplugging the cable during this process may damage the device.</p>
Factory Default	Reset your camera to factory default settings. You can choose to keep the IP address by selecting the checkmark. <ul style="list-style-type: none"> • If you forgot your password, use Room Management to reset the web interface password to the default aver4321.
Camera Reboot	Reboot the camera.
Regular Reboot	To schedule reboots:
Next Reboot Time	1. Select Schedule Reboot .
Re-Occur	2. Set up when the camera next reboots by clicking the pencil icon. 3. Select a frequency from the Re-Occur drop-down list.
Supports Schedule Reboot when connected to HDMI	Turn on to allow scheduled reboot during HDMI output.
Change Password	Change the web interface password.


	<ul style="list-style-type: none"> • Use 8-10 characters, upper and lowercase letters, numbers and symbols (* ! % + = , - _ ^ / @ . ~ # \$). • If you forgot your password, use Room Management to reset the web interface password to the default aver4321.
SSL Certificate	Upload an SSL certificate.
Date Format	Select a date format.
Time Format	Select a time format.
Time Correction Mode	<p>Select a time correction mode.</p> <ul style="list-style-type: none"> • Auto: Enter your Network Time Protocol (NTP) server URL to synchronize the clock. The default NTP server is located in the US. • Manual: Click the pencil icon to set up the clock.
Allow Providing of Anonymous Usage Data	Opt-in or opt-out of providing usage data.
Information	Displays your camera information such as IP address.

Room Management

Configure Settings on Room Management

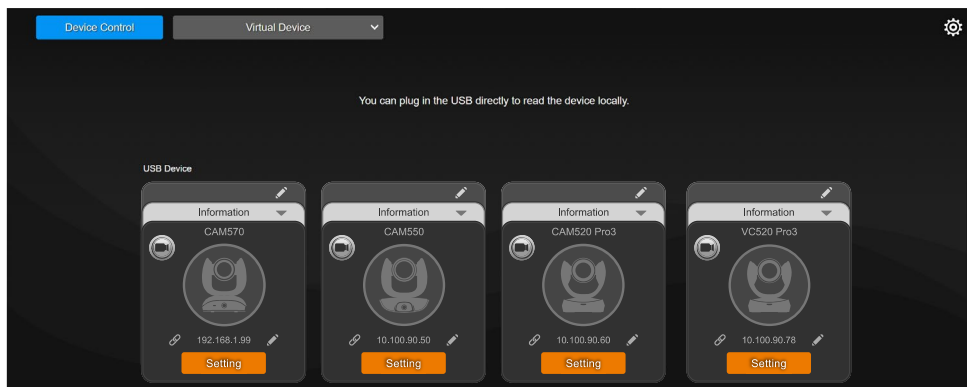

1. Download and install Room Management (formerly PTZApp 2) to your computer from AVer Download Center. (<https://www.aver.com/download-center>) and launch the software.
2. Connect your device to your computer using the included USB cable. Your device should appear under the **Device Control** page.
3. Click **Setting** to control video settings.

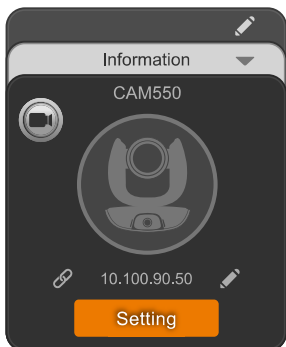

EZLive

Please go to <http://www.aver.com/download-center> to download the AVer EZLive software. After downloading, double-click on the file and follow the on-screen instructions to complete the installation.

During a video call, EZLive can help user to do:

- (1) Camera ePTZ
- (2) Volume control for the speaker connected
- (3) Capture camera's still images
- (4) Record video
- (5) Live stream to Youtube, Livehouse.in, USTREAM...etc.
- (6) Camera Zoom in/out
- (7) Capture PC screen shot
- (8) Record PC screen video
- (9) Set up livestream
- (10) Open file management to retrieve photos and video files
- (11) Livestream setting
- (12) Drawing tool

